

DIP SW A

ITEM	CONTENT	1	2	3	4	5	6	7	8
PLAYER	5	on	on						
	3	on	off						
	V4+ 1	off	on						
	3	off	off						
BONUS	1st 30,000 2nd 100,000 every 100,000			on	on				
	" 30,000 " 80,000 " 80,000			on	off				
	" 20,000 " 100,000 " 100,000			off	on				
	" 20,000 " 80,000 " 80,000			off	off				
SPEC	UP RIGHT SPEC					on			
	TABLE SPEC					off			
COIN	FREE PLAY						on	on	on
	1 CREDIT 4 COIN						on	on	off
	1 " 3 "						on	off	on
	3 " 2 "						on	off	off
	1 " 2 "						off	on	on
	4 " 1 "						off	on	off
	2 " 1 "						off	off	on
	1 " 1 "						off	off	off

DIP SW B

ITEM	CONTENT	1	2	3	4	5	6	7	8
SCREEN STOP	STOP	on							
	NORMAL	off							
DIFFICULTY	VERY DIFFICULTY		on	on					
	DIFFICULTY		on	on					
	EASY		off	on					
	NORMAL		off	off					
COIN	SAME AS COIN 1						off	off	off
PICTURE SCREEN	NORMAL				off				
	SCREEN UP SIDE DOWN				on				
DEMOSTR-MODE	NORMAL					off			
	DEMOSTR MODE					on			
	NOTE : NORMALY OFF POSITION USE.								
	POWER ON POSITION								
DEMOSTRAT MODE COME OUT.									

SOLDER	SIDE			COMPONENT	SIDE
			A	1	
			B	2	+5V
			C	3	+12V
			D	4	
		SPEAKER	E	5	
		IP [SHOOT DOWN RIGHT	F	6	up
			G	7	LEFT
			H	8	
			I	9	
			J	10	
			K	11	[GND
			L	12	
		1P SELECT	M	13	
			N	14	
		COIN	O	15	
			P	16	SHORT 1P
			Q	17	
			R	18	
		SYNC	S	19	RED
		GREEN	T	20	BLUE
			U	21	
			V	22	