


1942

GND	A	1	GND
+5V	B	2	+5V
+12V	C	3	+12V
GND(12V)	D	4	GND(12V)
SP⊖	E	5	SP⊖
SP⊕	F	6	SP⊕
COIN COUNTER⊖	H	7	COIN COUNTER⊕

	J	8	
SHOT SW	K	9	UP SW
DOWN SW	L	10	LEFT SW
RIGHT SW	M	11	(GND)
			} 1P
SHOT SW	N	12	UP SW
DOWN SW	P	13	LEFT SW
RIGHT SW	R	14	(GND)
			} 2P
2P SW	S	15	(GND)
1P SW	T	16	(GND)
COIN SW	U	17	(GND)
SERVICE SW	V	18	(GND)
	W	19	1P LOOP SW
	X	20	2P LOOP SW
	Y	21	(GND)
SYNC(CMP)	Z	22	Ⓜ
Ⓞ	a	23	Ⓟ
	b	24	
	c	25	
	d	26	
+5V	e	27	+5V
GND	f	28	GND

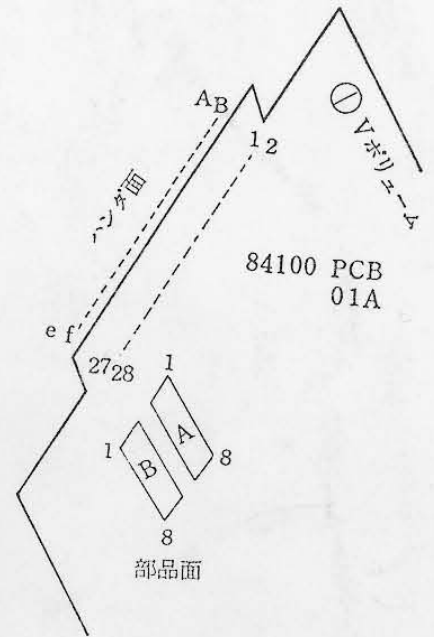

部品名

OR7E-56DA-3.96E : HIROSE

1168-056-009 : KEL

※各SW.CRT用出力等のGND線は
もよりの(GND)を利用のこと。

1942

DIP SW A

項目	内 容	1	2	3	4	5	6	7	8
NUMBER OF PLAYERS	5	ON	ON						
	2	ON	OFF						
	1	OFF	ON						
	3	OFF	OFF						
BONUS	1st 30,000 2ND 100,000 over 100,000			ON	ON				
	" 30,000 " 80,000 " 80,000			ON	OFF				
	" 20,000 " 100,000 " 100,000			OFF	ON				
	" 20,000 " 80,000 " 80,000			OFF	OFF				
TYPE	UPRIGHT TABLE					ON OFF			
	1 CREDIT / 4 COIN						ON	ON	ON
	1 / 3						ON	ON	OFF
	3 / 2						ON	OFF	ON
	1 / 2						ON	OFF	OFF
	4 / 2						OFF	ON	ON
	4 / 1						OFF	ON	OFF
	2 / 1						OFF	OFF	ON
	1 / 1						OFF	OFF	OFF

DIP SW B

項目	内 容	1	2	3	4	5	6	7	8
SCREEN	SCREEN FREEZED NORMAL	ON OFF							
DIFFICULTY	VERY DIFFICULT ↓ NORMAL		ON ON OFF OFF	ON OFF ON OFF					
COIN 2	SAME AS COIN 1						OFF	OFF	OFF
SCREEN	NORMAL SCREEN REVERSED				OFF ON				
TEST MODE	NORMAL TEST MODE 注) 通常は OFF で使用する。 ON にして電源を入れると テストモードで立ち上がる。					OFF ON			

※ 太字は出荷時の状態