

1. 9. 4. 3.

SOLDER SIDE		PART SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
N.C	E	5	N.C
+12V	F	6	+12V
	G	7	
COIN COUNTER 2	H	8	COIN COUNTER 1
COIN LOCK OUT 2	I	9	COIN LOCK OUT 1
SP (-)	J	10	SP (+)
N.C	K	11	N.C
GREEN	L	12	RED
SYNC	M	13	BLUE
SERVICE SW	N	14	GND
N.C	O	15	N.C
COIN SW 2	P	16	COIN SW 1
START SW 2	Q	17	START SW 1
2P CONTROL UP	R	18	1P CONTROL UP
2P CONTROL DOWN	S	19	1P CONTROL DOWN
2P CONTROL LEFT	T	20	1P CONTROL LEFT
2P CONTROL RIGHT	U	21	1P CONTROL RIGHT
2P CONTROL PUSH 2	V	22	1P CONTROL PUSH 1
2P CONTROL PUSH 2	W	23	1P CONTROL PUSH 2
N.C	X	24	N.C
N.C	Y	25	N.C
N.C	Z	26	N.C
GND	a	27	GND
GND	b	28	GND

DIP SW A

		1	2	3	4	5	6	7	8
TEST MODE	NORMAL	OFF							
	TEST	ON							
SCREEN STOP	NORMAL		OFF						
	STOP		ON						
SCREEN INVERSION	NORMAL			OFF					
	INVERSION			ON					
2 PLAY & CREDIT	2 CREDIT 2 PLAY				OFF				
	1 CREDIT 2 PLAY				ON				
DIFFICULTY	1					OFF	OFF	OFF	OFF
	2					OFF	OFF	OFF	ON
	3					OFF	OFF	ON	OFF
	4					OFF	OFF	ON	ON
	5					OFF	ON	OFF	OFF
	6					OFF	ON	OFF	ON
	7					OFF	ON	ON	OFF
	NORMAL 8					OFF	ON	ON	ON
	9					ON	OFF	OFF	OFF
	10					ON	OFF	OFF	ON
	11					ON	OFF	ON	OFF
	12					ON	OFF	ON	ON
	13					ON	ON	OFF	OFF
	14					ON	ON	OFF	ON
	15					ON	ON	ON	OFF
	16					ON	ON	ON	ON

DIP SW B

		1	2	3	4	5	6	7	8
DEMO SOUND	NORMAL SOUND	OFF							
	NO SOUND	ON							
CONCINUE	NORMAL		OFF						
			ON						
COIN 2	1 COIN 1 CREDIT			OFF	OFF	OFF			
	1 COIN 2 CREDIT			OFF	OFF	ON			
	1 COIN 3 CREDIT			OFF	ON	OFF			
	1 COIN 4 CREDIT			OFF	ON	ON			
	1 COIN 5 CREDIT			ON	OFF	OFF			
	2 COIN 1 CREDIT			ON	OFF	ON			
	3 COIN 1 CREDIT			ON	ON	OFF			
	4 COIN 1 CREDIT			ON	ON	ON			
COIN 1	1 COIN 1 CREDIT						OFF	OFF	OFF
	1 COIN 2 CREDIT						OFF	OFF	ON
	1 COIN 3 CREDIT						OFF	ON	OFF
	1 COIN 4 CREDIT						OFF	ON	ON
	1 COIN 5 CREDIT						ON	OFF	OFF
	2 COIN 1 CREDIT						ON	OFF	ON
	3 COIN 1 CREDIT						ON	ON	OFF
	4 COIN 1 CREDIT						ON	ON	ON