

1943

====

87/11/20

SOLDER SIDE

PARTS SIDE

SOLDER SIDE		PARTS SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
N.C.	5	N.C.
+12V	6	+12V
	7	
COIN COUNTER 2	8	COIN COUNTER 1
COIN LOCK OUT 2	9	COIN LOCK OUT 1
SP (-)	10	SP (+)
N.C.	11	N.C.
VIDEO GREEN	12	VIDEO RED
VIDEO SYNC	13	VIDEO BLUE
SERVICE SW	14	VIDEO GND
N.C.	15	N.C.
COIN SW 2	16	COIN SW 1
START SW 2	17	START SW 1
2P CONTROL UP	18	1P CONTROL UP
2P CONTROL DOWN	19	1P CONTROL DOWN
2P CONTROL LEFT	20	1P CONTROL LEFT
2P CONTROL RIGHT	21	1P CONTROL RIGHT
2P CONTROL PUSH 1	22	1P CONTROL PUSH 1
2P CONTROL PUSH 2	23	1P CONTROL PUSH 2
N.C.	24	N.C.
N.C.	25	N.C.
N.C.	26	N.C.
GND	27	GND
GND	28	GND

DIP SW 1		8	7	6	5	4	3	2	1	
TEST	NORMAL		OFF							
MODE	TEST		ON							
SCREEN	NORMAL			OFF						
STOP	STOP		ON							
SCREEN	NORMAL			OFF						
REVERSE	REVERSE			ON						
2PLAY	2CREDIT 2PLAY				OFF					
CREDIT	1CREDIT 2PLAY				ON					
DIFFICULTY	1	EASY					OFF	OFF	OFF	OFF
	2						OFF	OFF	OFF	ON
	3						OFF	OFF	ON	ON
	4						OFF	ON	OFF	OFF
	5	OFF					OFF	ON	OFF	ON
	6						OFF	ON	ON	OFF
	7						OFF	ON	ON	ON
	8						ON	OFF	OFF	OFF
	9	NORMAL					ON	OFF	OFF	ON
	10						ON	OFF	ON	OFF
	11						ON	OFF	ON	ON
	12						ON	ON	OFF	OFF
	13						ON	ON	OFF	ON
	14						ON	ON	ON	OFF
	15						ON	ON	ON	ON
	16	DIFFICULT								

DIP SW 2		8	7	6	5	4	3	2	1
DEMO	YES (NORMAL)		OFF						
SOUND	NO		ON						
CONTINUE	YES (NORMAL)			OFF					
	NO			ON					
COIN 2	1COIN 1CREDIT			OFF	OFF	OFF			
	1COIN 2CREDIT			OFF	OFF	ON			
	1COIN 3CREDIT			OFF	ON	OFF			
	1COIN 4CREDIT			OFF	ON	ON			
COIN 2	1COIN 5CREDIT			ON	OFF	OFF			
	2COIN 1CREDIT			ON	OFF	ON			
	3COIN 1CREDIT			ON	ON	OFF			
	4COIN 1CREDIT			ON	ON	ON			
	1COIN 1CREDIT						OFF	OFF	OFF
	1COIN 2CREDIT						OFF	OFF	ON
	1COIN 3CREDIT						OFF	ON	OFF
	1COIN 4CREDIT						OFF	ON	ON
COIN 2	1COIN 5CREDIT						ON	OFF	OFF
	2COIN 1CREDIT						ON	OFF	ON
	3COIN 1CREDIT						ON	ON	OFF
	4COIN 1CREDIT						ON	ON	ON