

"ACROBAT MISSION" DIP SW INSTRUCTION

DIPSW-1		1	2	3	4	5	6	7	8	
COIN-1	1 Coin 1 Play	OFF	OFF	OFF						
	1 Coin 2 Play	ON	OFF	OFF						
	1 Coin 3 Play	OFF	ON	OFF						
	1 Coin 4 Play	ON	ON	OFF						
	2 Coin 1 Play	OFF	OFF	ON						
	3 Coin 1 Play	ON	OFF	ON						
	4 Coin 1 Play	OFF	ON	ON						
	5 Coin 1 Play	ON	ON	ON						
COIN-2	1 Coin 1 Play				OFF	OFF	OFF			
	1 Coin 2 Play				ON	OFF	OFF			
	1 Coin 3 Play				OFF	ON	OFF			
	1 Coin 4 Play				ON	ON	OFF			
	2 Coin 1 Play				OFF	OFF	ON			
	3 Coin 1 Play				ON	OFF	ON			
	4 Coin 1 Play				OFF	ON	ON			
	5 Coin 1 Play				ON	ON	ON			
SCREEN FLIP	Up							OFF		
	Down							ON		
DEMO SOUND	Off							OFF		
	On							ON		

DIPSW-2		1	2	3	4	5	6	7	8	
PLAYER	3	OFF	OFF							
	2	ON	OFF							
	4	OFF	ON							
	5	ON	ON							
GAME LEVEL	Normal			OFF	OFF					
	Easy			ON	OFF					
	Hard			OFF	ON					
	Hardest			ON	ON					
LANGUAGE	Japanese					OFF				
	English					ON				
EXTEND	100000, 100000						OFF	OFF		
	50000, 100000						ON	OFF		
	100000, 200000						OFF	ON		
	None						ON	ON		
TEST	Off							OFF		
	On							ON		