

AIR WOLF

ディップ スイッチ

DIP SW No.1

5 7 6 5 4 3 2 1

SWITCH NO.		1	2	3	4	5	6	7	8
NQ OF FIGHTERS	4							OFF	OFF
	5							OFF	ON
	6							ON	OFF
	7							ON	ON
TYPE	TABLE		OFF						
	UP RIGHT		ON						
STOP	NORMAL OFF	ON							
SOUND TEST	NORMAL OFF			ON					
FREE PLAY	NORMAL OFF				ON				
CONTINUE PLAY	NORMAL OFF						ON		

DIP SW No.2

SWITCH NO.		1	2	3	4	5	6	7	8
COIN 1	1PLAY/1COIN						OFF	OFF	OFF
	2PLAY/1COIN						OFF	OFF	ON
	3PLAY/1COIN						OFF	ON	OFF
	4PLAY/1COIN						OFF	ON	ON
	6PLAY/1COIN						ON	OFF	OFF
	1PLAY/2COIN						ON	OFF	ON
	2PLAY/3COIN						ON	ON	OFF
	FREE PLAY						ON	ON	ON
COIN 2	1PLAY/1COIN			OFF	OFF	OFF			
	2PLAY/1COIN			OFF	OFF	ON			
	3PLAY/1COIN			OFF	ON	OFF			
	4PLAY/3COIN			OFF	ON	ON			
	1PLAY/2COIN			ON	OFF	OFF			
	1PLAY/3COIN			ON	OFF	ON			
	1PLAY/4COIN			ON	ON	OFF			
1PLAY/5COIN			ON	ON	ON				

ハーネスの接続 <CONNECTION OF HARNESS>

部品面 PARTS SIDE	半田面 SOLDER SIDE
GND	1 GND
GND	2 GND
GND	3 GND
SP OUT	4 SERVICE
+12V	5 +12V
	6
	7

1P SHOT-2	8	COIN2
+5V	9	+5V
1P DOWN	10	2P UP
2P SHOT-2	11	1P UP

2P SELECT	12	2P DOWN
1P SELECT	13	COIN1
1P RIGHT	14	1P SHOT-1
1P LEFT	15	RED
BLUE	16	2P RIGHT
GREEN	17	2P LEFT
SYNC	18	2P SHOT-1

