


ALiens

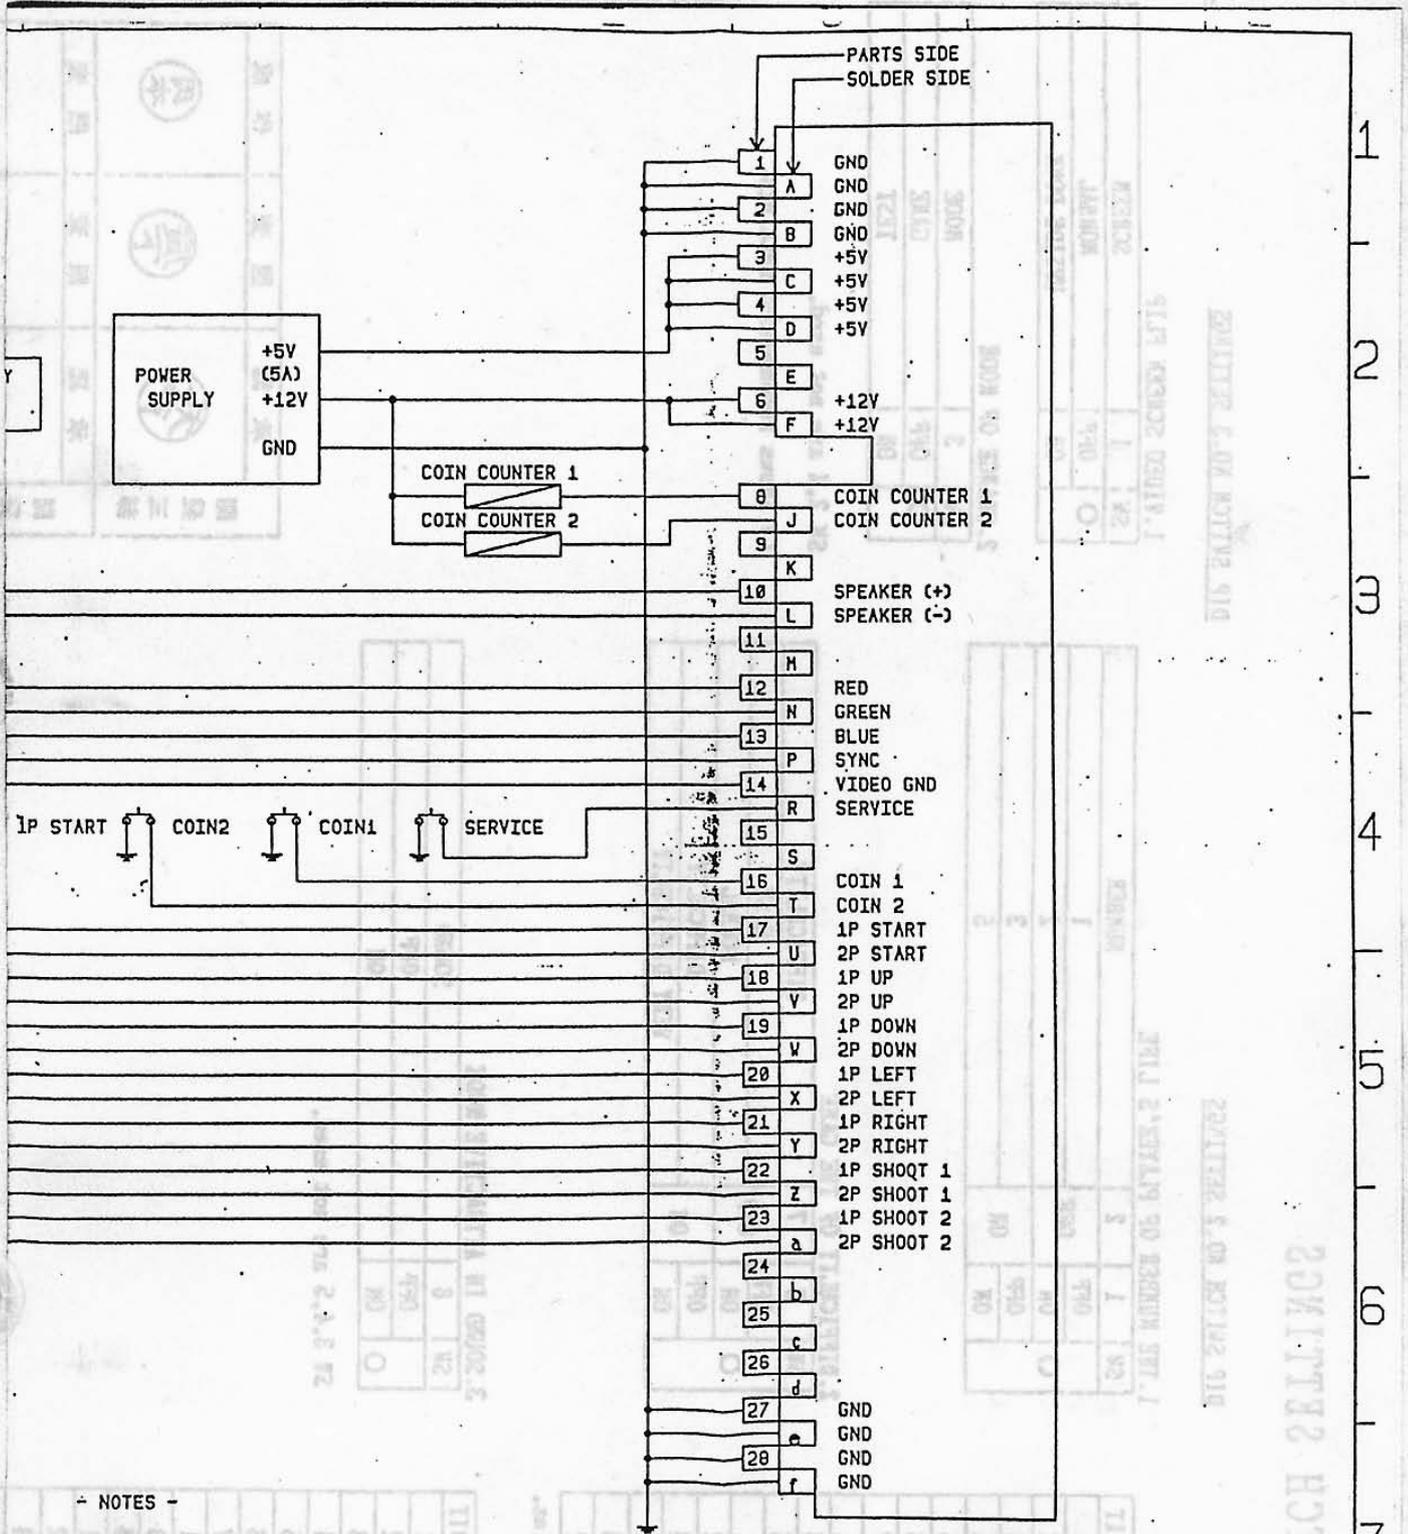

- NOTES -

- 1 1P IS NO.1 PLAYER
- 2 2P IS NO.2 PLAYER
- 3 SURGE KILLER DIODES FOR COIN COUNTER INSTALLED ON P.C.B

JAHMA 56PIN EDGE CONNECTOR
5/32 INCH PITCH

KONAMI

				KONAMI CONFIDENTIAL		REG. TYPE	WIRING DIAGRAM
DESIGN	DRAW	CHECK	APPROVE	RELEASE DATE	89, 11, 4	NAME	GX875-PWB951064
			SCALE	TOLE-RANCE	CODE NO. 351943		

2091A

GX875-UA/EA DIP SWITCH SETTINGS

DIP SWITCH NO.1 SETTINGS

1. VIDEO SCREEN FLIP

SW 1	SCREEN
<input type="radio"/> OFF	NORMAL
<input type="radio"/> ON	UPSIDE DOWN

2. CHANGE OF MODE

SW 3	MODE
<input type="radio"/> OFF	GAME
<input type="radio"/> ON	TEST

SW 2, 4 are not used.
 Shows recommended settings.

DIP SWITCH NO.2 SETTINGS

1. THE NUMBER OF PLAYER'S LIFE

SW 1	2	NUMBER
<input type="radio"/> OFF	<input type="radio"/> OFF	1
<input type="radio"/> ON	<input type="radio"/> ON	2
<input type="radio"/> OFF	<input type="radio"/> ON	3
<input type="radio"/> ON	<input type="radio"/> ON	5

2. DIFFICULTY OF THE GAME

SW 6	7	DIFFICULTY
<input type="radio"/> OFF	<input type="radio"/> OFF	EASY
<input type="radio"/> ON	<input type="radio"/> ON	NORMAL
<input type="radio"/> OFF	<input type="radio"/> ON	DIFFICULTY
<input type="radio"/> ON	<input type="radio"/> ON	VERY DIFFICULTY

3. SOUND IN ATTRACTIVE MODE

SW 8	SOUND
<input type="radio"/> OFF	OFF
<input type="radio"/> ON	ON

SW 3,4,5 are not used.

DIP SWITCH NO.1 SETTINGS

1. COIN SWITCH NO.1 SETTINGS

SW 1	2	3	4	COIN	CREDIT
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> OFF	1	1
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	2
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	3
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	4
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> OFF	1	5
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	6
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	7
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	2	1
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> ON	2	3
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	2	5
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	3	1
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	3	2
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	3	4
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	4	1
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	4	3
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	FREERPLAY	

FREERPLAY: You can play games without coins.

2. COIN SWITCH NO.2 SETTINGS

SW 5	6	7	8	COIN	CREDIT
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> OFF	1	1
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	2
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	3
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	4
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> OFF	1	5
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	6
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	1	7
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	2	1
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> ON	2	3
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	2	5
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	3	1
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	3	2
<input type="radio"/> OFF	<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	3	4
<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	4	1
<input type="radio"/> OFF	<input type="radio"/> ON	<input type="radio"/> ON	<input type="radio"/> ON	4	3

承認	照査	作成
開発三部	學	園
承認	照査	照査
開発一部		