

ALIENSTORM (833-7379-02)

COIN/CREDIT OPTION SWITCH SETTING

DIP SW 1

OPTION	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF				
1 COIN 2 CREDITS	ON	OFF	OFF	OFF				
1 COIN 3 CREDITS	OFF	ON	OFF	OFF				
1 COIN 4 CREDITS	ON	ON	OFF	OFF				
1 COIN 5 CREDITS	OFF	OFF	ON	OFF				
1 COIN 8 CREDITS	ON	OFF	ON	OFF				
2 COINS 1 CREDIT	OFF	ON	ON	OFF				
3 COINS 1 CREDIT	ON	ON	ON	OFF				
4 COINS 1 CREDIT	OFF	OFF	OFF	ON				
2 COINS 3 CREDITS	ON	OFF	OFF	ON				
2 COINS 1 CREDIT	OFF	ON	OFF	ON				
4 COINS 2 CREDITS								
5 COINS 3 CREDITS								
6 COINS 4 CREDITS								
4 COINS 3 CREDITS	ON	ON	OFF	ON				
1 COIN 1 CREDIT								
2 COINS 2 CREDITS	OFF	OFF	ON	ON				
3 COINS 3 CREDITS								
4 COINS 4 CREDITS	ON	OFF	ON	ON				
4 COINS 5 CREDITS								
1 COIN 1 CREDIT	OFF	ON	ON	ON				
2 COINS 2 CREDITS								
FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON

NOT USED
(ALL OFF)

OPTION SWITCH SETTING

DIP SW 2



OPTION	1	2	3	4	5	6	7	8
1 CREDIT TO START	OFF							
2 CREDITS TO START (1 CREDIT TO CONTINUE)	ON							
ADVERTISE	OFF	OFF						
SOUND	ON	ON						
GAME DIFFICULTY	HARDEST		ON	OFF	OFF			
	HARDER		OFF	ON	OFF			
	HARD		ON	ON	OFF			
	NORMAL		OFF	OFF	OFF			
	EASY		OFF	OFF	ON			
EASIER		ON	OFF	ON				
EASIEST		OFF	ON	ON				
※1 SPECIAL		ON	ON	ON				
※2 COIN CHUTE TYPE	3						OFF	
TYPE	1						ON	

※1 SPECIAL :


This level is even more easy than "EASIEST".
Therefore, do not set to said level at the time of shipment.

※2 COIN CHUTE TYPE

3: Used for the cabinet of the 3 COIN CHUTE type which allows each chute to accept coins.
1: Used for the one COIN CHUTE type cabinet.

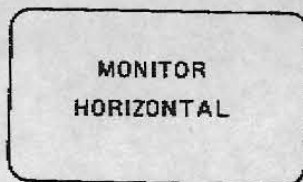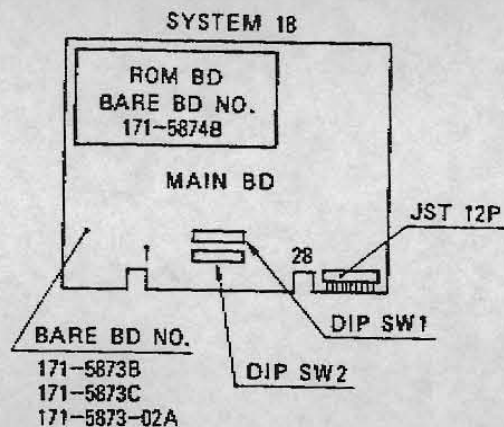

*LP=LEFT PLAYER
CP=CENTER PLAYER
RP=RIGHT PLAYER

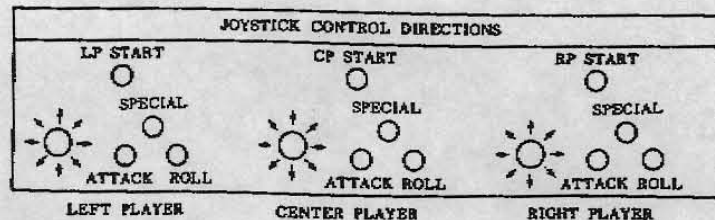

PIN ASSIGNMENT

COMPONENT SIDE		SOLDER SIDE
GND	1 A	GND
GND	2 B	GND
+5V	3 C	+5V
+5V	4 D	+5V
(NOT USED)	5 E	(NOT USED)
+12V	6 F	+12V
KEY	7 H	KEY
COIN METER I	8 J	(NOT USED)
(NOT USED)	9 K	(NOT USED)
SPEAKER(+)	10 L	SPEAKER(-)
(NOT USED)	11 M	(NOT USED)
RED	12 N	GREEN
BLUE	13 P	SYNC
GND	14 R	ALL SERVICE
TEST	15 S	(NOT USED)
COIN RIGHT (COIN 1)	16 T	COIN CENTER (COIN 2)
LP START	17 U	CP START
LP CP	18 V	CP UP
LP DOWN	19 W	CP DOWN
LP LEFT	20 X	CP LEFT
LP RIGHT	21 Y	CP RIGHT
LP ATTACK	22 Z	CP ATTACK
LP ROLL	23 a	CP ROLL
LP SPECIAL	24 b	CP SPECIAL
LP SERVICE	25 c	CP SERVICE
RP START	26 d	COIN LEFT (COIN 3)
GND	27 e	GND
GND	28 f	GND

56P P=3.96mm

JST 12P

1	(NOT USED)
2	RP ATTACK
3	RP ROLL
4	RP SPECIAL
5	RP SERVICE
6	(NOT USED)
7	RP DOWN
8	RP UP
9	RP RIGHT
10	RP LEFT
11	(NOT USED)
12	GND

421-7653-02