

Monitor seekrecht

●レバー、ボタン




- 8方向レバー使用
- 縦画面

●ディップスイッチ 1 DIP switch I

		1	2	3	4	5	6	7	8
プレイヤー数	3	OFF	OFF						
Base Ship	2	OFF	ON						
	4	ON	OFF						
	5	ON	ON						
Free Play	通常					OFF			
フリーゲーム						ON			
デモ時	音無			OFF					
attract mode	音有			ON					
タイプ	テーブル				OFF				
Upright	アップライト				ON				
難易度	普通						OFF	OFF	
Game	難しい						OFF	ON	
difficulty	やや難しい						ON	OFF	
	難しい						ON	ON	
モニター方向逆転スイッチ									※

※御使用になるモニターにより画面が反転している場合があります。その際、スイッチを反対方向にセットしてください。画面方向が変わります。(プレイヤー方向は変わりません)

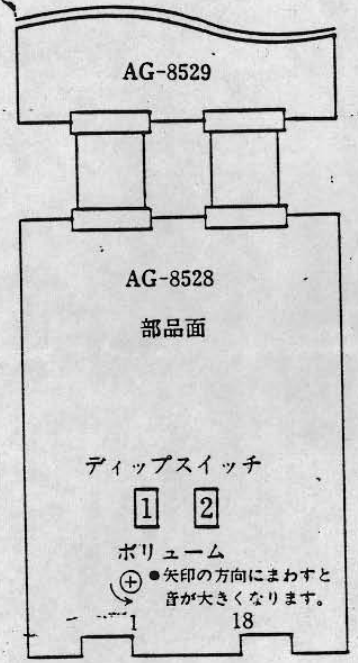

●エッジコネクターはケル製 1150N-036-009, 4mmピッチを使用。

●ディップスイッチ 2 DIP Switch II

		1	2	3	4	5	6	7	8
COIN 1	1 COIN 1 PLAY	OFF	OFF	OFF					
	1 " 2 "	OFF	OFF	ON					
	1 " 3 "	OFF	ON	OFF					
	1 " 4 "	OFF	ON	ON					
	2 " 1 "	ON	OFF	OFF					
	3 " 1 "	ON	OFF	ON					
	4 " 1 "	ON	ON	OFF					
	5 " 1 "	ON	ON	ON					
COIN 2	1 COIN 1 PLAY				OFF	OFF	OFF		
	1 " 2 "				OFF	OFF	ON		
	1 " 3 "				OFF	ON	OFF		
	1 " 4 "				OFF	ON	ON		
	2 " 1 "				ON	OFF	OFF		
	3 " 1 "				ON	OFF	ON		
	4 " 1 "				ON	ON	OFF		
	5 " 1 "				ON	ON	ON		

未使用

●コネクター配線図

Lotseite

部品面		半田面
GND	1 A	GND
GND	2 B	GND
5V	3 C	5V
5V	4 D	5V
12V	5 E	12V
VIDEO RED	6 F	VIDEO BLUE
VIDEO GREEN	7 H	VIDEO SYNC
SPEAKER(+)	8 J	SPEAKER(-)
COIN 2	9 K	COIN 1
GND	10 L	GND
1P START	11 M	2P START
1P UP	12 N	2P UP
1P DOWN	13 P	2P DOWN
1P RIGHT	14 R	2P RIGHT
1P LEFT	15 S	2P LEFT
1P SHOT 1	16 T	2P SHOT 1
1P SHOT 2	17 U	2P SHOT 2
GND	18 V	GND