


ARKANOID


1. WIRING

(CONTROL PANEL)

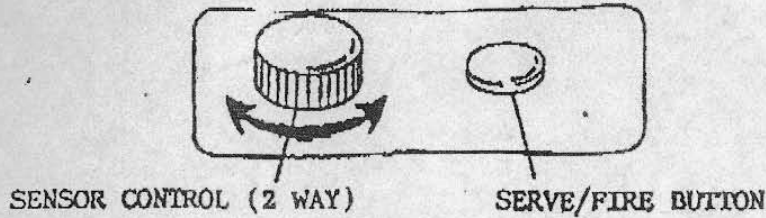


(P FREE HARNESS ASSY)

* TO PUSH BUTTON ASSY DON'T INCLUDE P FREE HARNESS ASSY

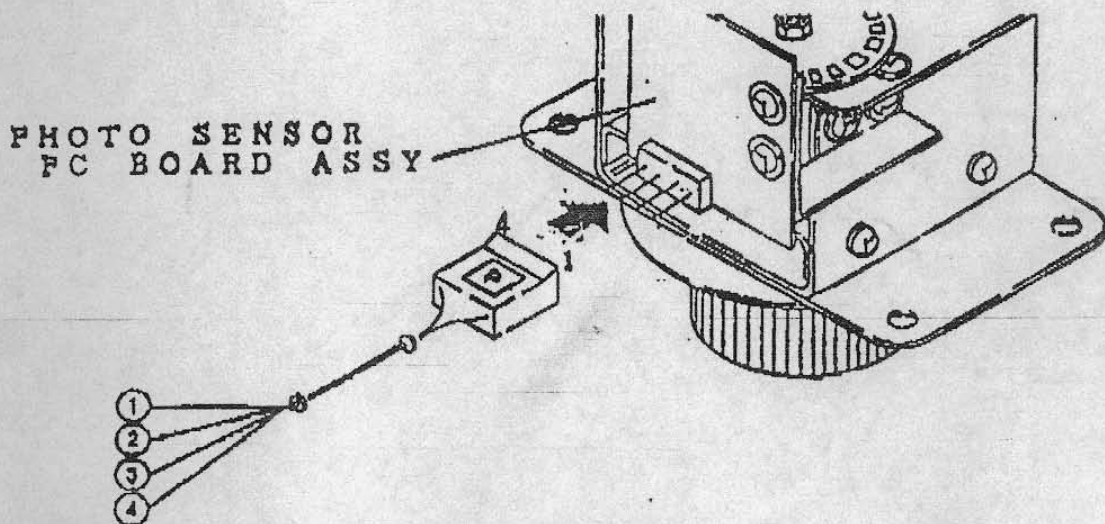

* WIRING DIAGRAM

<u>P FREE HARNESS ASSY NO. (COLOR)</u>	<u>SIGNAL</u>	<u>CONNECTOR TERMINAL NO.</u>	<u>SIGNAL</u>	<u>CONNECTOR TERMINAL NO.</u>
1 (GREEN-BLUE)	1P LEFT	16	2P LEFT	T
2 (RED)	+5V		+5V	
3 (BLACK)	GND		GND	
4 (RED-YELLOW)	1P RIGHT	15	2P RIGHT	S
	1P SERVE/FIRE	21	2P SERVE/FIRE	Y

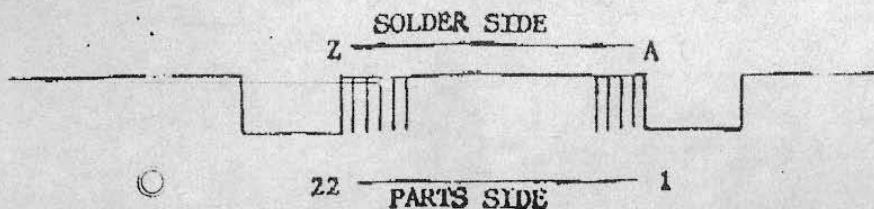

ARKANOID

3. COIN SYSTEM

PLEASE CONNECT COIN METER TO COIN METER TERMINAL OF G CONNECTOR ON THIS MAIN PC BOARD.

* COIN SYSTEM (2 WAY) EACH TERMINAL NO.

<u>COIN SYSTEM</u>	<u>COIN SW</u>	<u>COIN METER</u>	<u>MEMO</u>
A (1 WAY)	G CONNECTOR NO. 6	G CONNECTOR NO. 9	PARTS SIDE NORMAL USE
B	G CONNECTOR NO. J	G CONNECTOR NO. K	SOLDER SIDE

* IN CASE OF DON'T USE COIN METER TERMINAL OF MAIN PC BOARD :

(1) COIN SYSTEM A ... JP4 → JUMPER (ON THE MAIN PC BOARD)

(2) COIN SYSTEM B ... JP3 → JUMPER (ON THE MAIN PC BOARD)

