

ADJUSTMENT ON GAME PC BOARD (BATTLE SHARK G25 00586A)

V-CONNECTOR

1	AC 100V
2	AC 100V
3	AC 100V
4	DEG. SW
5	DEG. SW
6	DEG. SW
7	VIDEO R
8	VIDEO G
9	VIDEO BL
10	VIDEO SYNC
11	
12	VIDEO GND

D-CONNECTOR


1	
2	
3	DRIVE
4	GND
5	GND
6	24 V
7	24 V

T-CONNECTOR

1	L +
2	L -
3	R -
4	R +
5	

G-CONNECTOR

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+13V	F	6	+12V
POST	H	7	POST
COIN METER B	J	8	COIN METER A
COIN LOCKOUT B	K	9	COIN LOCKOUT A
SPEAKER R (+)	L	10	SPEAKER L (+)
SPEAKER R (-)	M	11	SPEAKER L (-)
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO BL
SERVICE SW	R	14	VIDEO GND
	S	15	GND
(COIN B)	T	16	COIN A
	U	17	
AD-X	V	18	
AD-X-AJST	W	19	
AD-Y	X	20	
AD-Y-ADJT	Y	21	
	Z	22	PASH SW A
	a	23	PUSH SW B
	b	24	MUTE
VOLUME 1	c	25	AUDIO
VOLUME 3	d	26	VOLUME 2
GND	e	27	GND
GND	f	28	GND

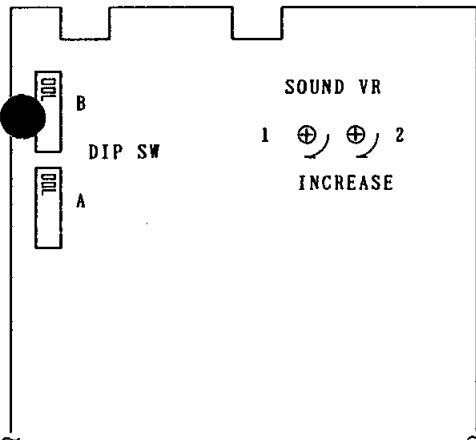

NOTE) BEFORE CHANGING THE SETTING OF DIP SWITCH, TURN THE POWER OFF.

◇ SETTING OF DIP SWITCH A

(*) : FACTORY SETTING

SETTINGS		POSITIONS		1	2	3	4	5	6	7	8
TEST MODE	* NORMAL GAME					OFF					
	TEST MODE					ON					
ATTRACT SOUND	* WITH						OFF				
	WITHOUT						ON				
PLAY PRICING COIN A	* 1 COIN 1 PLAY			OFF				OFF		OFF	
	2 COINS 1 PLAY						ON				
	3 COINS 1 PLAY								OFF		
	4 COINS 1 PLAY								ON		ON
PLAY PRICING COIN B	* 1 COIN 2 PLAYS									OFF	OFF
	1 COIN 3 PLAYS									ON	
	1 COIN 4 PLAYS									OFF	
	1 COIN 6 PLAYS									ON	ON

◇ SETTING OF DIP SWITCH B

SETTINGS		POSITIONS		1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY (A) → DIFFICULT (D)	* RANK B			OFF	OFF						
	RANK A			ON							
	RANK C			OFF	ON						
	RANK D			ON							
SPEED OF SIGHT	* NORMAL A					OFF					
	B					ON	OFF				
	C					OFF					
	FAST D					ON	ON				