


Belegungsplan für TV-Umbausatz **Black Panther**

Monitorlage : quer Hersteller: Konami Baujahr: 09/87
 Bedienboard : 8-Wegesteuerung, 2 Aktionstaster
 Besonderheiten: Jamma-Belegung,

L ö t s e i t e	P I N	B e s t ü c k u n g s s e i t e
Gnd	1	Gnd
Gnd	2	Gnd
+ 5 Volt	3	+ 5 Volt
+ 5 Volt	4	+ 5 Volt
	5	
+12 Volt	6	+12 Volt
KEY-----	7	KEY-----
Kreditzählwerk 2	8	Kreditzählwerk 1
	9	
Lautsprecher -	10	Lautsprecher +
	11	
Video Grün	12	Video Rot
Synchronimpuls	13	Video Blau
Servicetaster	14	Video Gnd
	15	
Krediteingang 2	16	Krediteingang 1
2. Sp. Taste START	17	1. --- Taste START
2. --- Steuerung hoch	18	1. --- Steuerung HOCH
2. --- --- tief	19	1. --- --- TIEF
2. --- --- links	20	1. --- --- LINKS
2. --- --- rechts	21	1. --- --- RECHTS
2. --- Taste Aktion I	22	1. --- Taste Aktion I
2. --- --- --- II	23	1. --- --- --- II
	24	
	25	
	26	
Gnd	27	Gnd
Gnd	28	Gnd

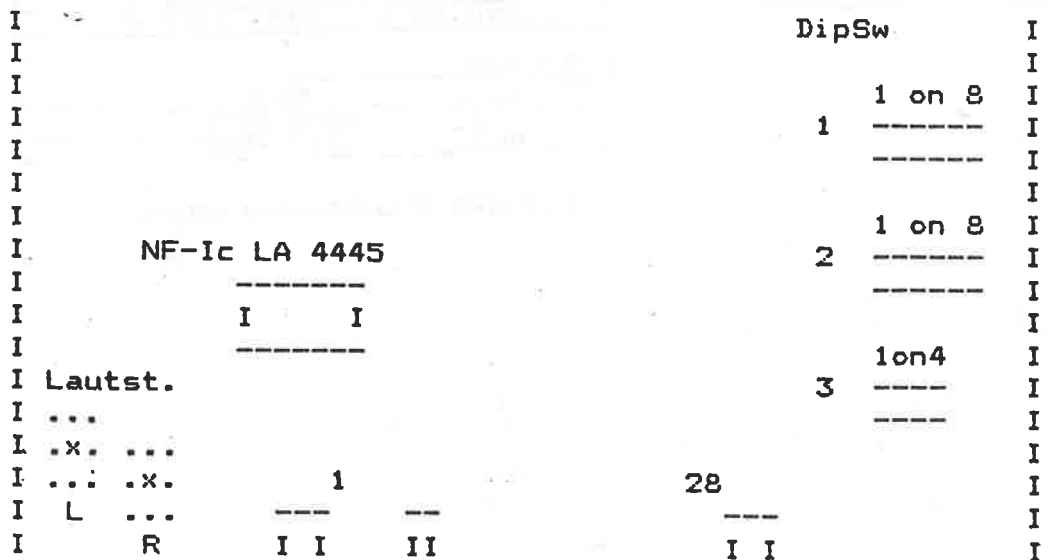

auf Bestückungsseite gesehen

DIP SWITCH No.1 SETTINGS

1. COIN SWITCH NO.1 SETTINGS.

SW	1	2	3	4	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON	OFF			1	2
	OFF	ON			1	3
	ON	ON			1	4
	OFF	OFF	ON	OFF	1	5
	ON	OFF			1	6
	OFF	ON			1	7
	ON	ON			2	1
	OFF	OFF	OFF	ON	2	3
	ON	OFF			2	5
	OFF	ON			3	1
	ON	ON			3	2
	OFF	OFF	ON	ON	3	4
	ON	OFF			4	1
	OFF	ON			4	3
	ON	ON			FREE PLAY	

(NOTE) Free Play: You can play games without coin.

2. COIN SWITCH No.2 SETTINGS.

SW	5	6	7	8	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON	OFF			1	2
	OFF	ON			1	3
	ON	ON			1	4
	OFF	OFF	ON	OFF	1	5
	ON	OFF			1	6
	OFF	ON			1	7
	ON	ON			2	1
	OFF	OFF	OFF	ON	2	3
	ON	OFF			2	5
	OFF	ON			3	1
	ON	ON			3	2
	OFF	OFF	ON	ON	3	4
	ON	OFF			4	1
	OFF	ON			4	3
	ON	ON			INVALIDITY	

DIP SWITCH No.2 SETTINGS

1. THE NUMBER OF PLAYER'S LIFE

SW	1	2	NUMBER
○	OFF	OFF	3
	ON	OFF	4
	OFF	ON	5
	ON	ON	7

2. ADJUSTMENT FOR TABLE/UPRIGHT

SW	3	TYPE
○	OFF	TABLE
	ON	UPRIGHT

3. BONUS LIFE

SW	4	5	FIRST	SECOND
○	OFF	OFF	50000	100000
	ON	OFF	20000	50000
	OFF	ON	30000	70000
	ON	ON	80000	150000

4. DIFFICULTY OF THE GAME

SW	6	7	DIFFICULTY
○	OFF	OFF	EASY
	ON	OFF	NORMAL
	OFF	ON	DIFFICULT
	ON	ON	VERY DIFFICULT

5. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
○	OFF	OFF
	ON	ON

DIP SWITCH No.3 SETTINGS

1. VIDEO SCREEN FLIP

SW	1	MONITOR
○	OFF	NORMAL
	ON	UPSIDE DOWN

2. CONTINUE MODE

SW	2	3	CONTINUATION
○	OFF	OFF	NO
	ON	OFF	YES (AREA 2)
	OFF	ON	YES (AREA 3)
	ON	ON	YES (AREA 4)

3. CHANGE OF MODE

SW	4	MODE
○	OFF	GAME MODE
	ON	TEST MODE

○ shows recommended setting