

SETTING OF DIP SWITCH 1 3 4 5 6 7 8 2 SETTING . POSITION ! 1 **** OFF OFF OFF 1 COIN-1 CREDIT OFF 1 COIN-2 CREDITS; ON OFF -1 COIN-3 CREDITS! OFF NO OFF COIN ON OFF 1 COIN-4 CREDITS! 0 N SELECTOR OFF OFF ON 2 COINS-1 CREDIT! 3 COINS-1 CREDIT! OFF ON NO QN 4 COINS-1 CREDIT! OFF 0 N 1 ON NO 0 N FREE PLAY OFF YES DEMO SOUND -----101 NO YES OFF CONTINUE ----------NO 1 ON PLAY -----OFF | OFF NORMAL 1 OFF ON DIFFICULTY 1 DIFFICULTY OFF | ON DIFFICULTY 2 OFF TEST MODE ----1 ON SETTING OF DIP SWITCH 2 * POSITION 2 1 3 4 5 6 7 8 1 ! SETTING ************** ******* DN OFF JOYSTICKS ----------..... PLAY MODE GUNS OFF | OFF -----1 ON BALLS OH ON YES SOUNDS TEST OFF NO ---------NO YES FREE BULLETS ----------NO OFF

× BORN TO KILL×

CONNECT THE (+) OF THE GUNGENGINE TO +12 V AND THE (-) TO PIN 9 OF THE CONNECTOR

:

1

SOLDER SIDE	1		1	PRR1 SIDE
SOLDER SIDE	R	1		GND
GND	B	2		GND
+ 50	c	3	-	+ 50
+ 511	D	4		+ 50
N.C.	E	5		H.C.
+120	F	6		+120
N.C.	N	7		H.C.
H.C.		8		W.C.
N.C.	K	9		N.C.
SP (-)	L	1	0	SP (+)
N.C.		1	1	H.C.
VIDED GREEN			2	WIDEO RED
ATOFO SYNC	1 P	1 1	3	NIDEO BLUE
e.c.	R		14	WIDED GHD
#.C.	S	-1-	15	N.C.
COIN SU 2			16	COIN SU 1
START SU 2	1 1		17	START SU 1
2 P 8088			18	
2 P SHOOT!			19	1 P SHOOT
Ħ.C.		× -	20	N.C.
N.C.		¥		
2 P GUN SENSOR		-	22	
1 P GUN SENSOR		a	23	
N.C.		b		
H.C.		c 	25	
H.C.		d 	26	
GHD		e	27	I GND

KILL

(JOYSTICK VERSION)						
SOLDER SIDE			PART SIDE			
GND	8	1	GND			
GND	В	2	GND			
+ 5U	С	3	+ 50			
+ 50	D	4	+ 50			
N.C.	ε	5	N.C.			
+120	F	6	+12U			
N.C.	Н	7	N.C.			
N.C.	J	8	N.C.			
N.C.	К	9	N.C.			
SP (-)	L	10	SP (+)			
N.C.	H	11	N.C.			
VIDEO GREEN	н	12	UIDEO RED			
UIDEO SYNC	Р	13	VIDEO BLUE			
H.C.	R	14	VIDEO GND			
H.C.	S	15	N.C.			
COIN SW 2	T	16	COIN SU 1			
START SW 2	U	17	START SU 1			
2 P UP	U	18	1 P UP			
2 P DOWN		19	1 P DOWN			
2 P LEFT	X	20	1 P LEFT			
2 P RIGHT	Y	21	1 P RIGHT			
2 P BOMB	Z	22	1 P BOMB			
2 P SHOT	a	23	1 P SHOT			
N.C.	b	24	N.C.			
N.C.	c	25	N.C.			
N.C.	d	26	N.C.			
GND	e	27	GHD			
GND	f	. 28	GND			

SUBJERT TO (4) BORN TO TO PIN 9 OF

. .

i