

CABAL

(JOYSTICK VERSION)

solder side			parts side
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V
	G	7	
coin counter 2	H	8	coin counter 2
	I	9	
speaker (-)	J	10	speaker (+)
	K	11	
video GREEN	L	12	video RED
video SYNC	M	13	video BLUE
( 2 Push 3	N	14	video GND
	O	15	1P Push 3
coin switch 2	P	16	coin switch 1
start switch 2	Q	17	start switch 1
2P control UP	R	18	1P control UP
2P control DOWN	S	19	1P control DOWN
2P control LEFT	T	20	1P control LEFT
2P control RIGHT	U	21	1P control RIGHT
2P control PUSH 1	V	22	1P control PUSH 1
2P control PUSH 2	W	23	1P control PUSH 2
	X	24	
	Y	25	
	Z	26	
GND	a	27	GND
GND	b	28	GND

Standard JAMMA Harness

\*\*Blank spaces: not in use. Please make sure to connect other terminals.

Note: Joystick version uses 3 buttons.

When converting from track ball version, please change IC D4701AC (2pcs) at location C D 1 2, on bottom board with socket plug in adaptor.

