

SETTING EXPLANATION

PCB CONNECTOR


JAMMA STANDARD

CRT MONITOR

HORIZONTAL SCREEN

CONTROL PANEL

PLAYERS SIMULTANEOUS TYPE


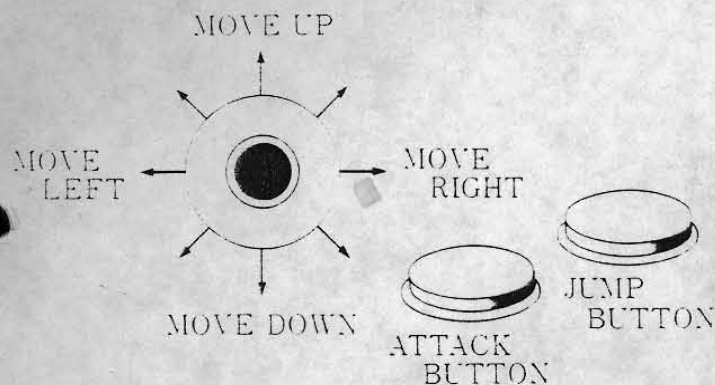


By pushing the A button and B button together, you can use Sure-Killing Technique.

(This will consume a little bit of your physical strength.)

8-WAY JOYSTICK

DIP SW THERE ARE TWO TYPES OF PCB.

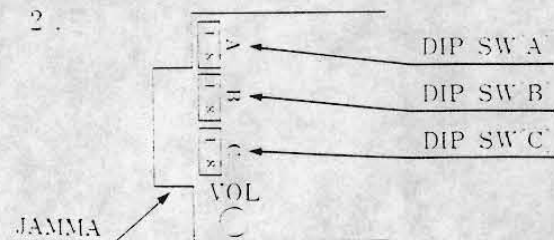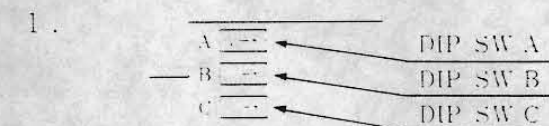

JAMMA STANDARD

SOLDER SIDE		COMPONENTS SIDE	
GND	A 1	GND	
GND	B 2	GND	
-5V	C 3	-5V	
-5V	D 4	-5V	
N.C.	E 5	N.C.	
-12V	F 6	-12V	
	H 7		
N.C.	J 8	COIN COUNTER 1	
COIN LOCK OUT 2	K 9	COIN LOCK OUT 1	
SP -	L 10	SP -	
N.C.	M 11	N.C.	
VIDEO GREEN	N 12	VIDEO RED	
VIDEO SYNC	P 13	VIDEO BLUE	
SERVICE SW	R 14	VIDEO GND	
N.C.	S 15	TEST SW	
COIN SW 2	T 16	COIN SW 1	
START SW 2	U 17	START SW 1	
2P UP	V 18	1P UP	
2P DOWN	W 19	1P DOWN	
2P LEFT	X 20	1P LEFT	
2P RIGHT	Y 21	1P RIGHT	
2P PUSH 1 2P ATTACK	Z 22	1P PUSH 1 1P ATTACK	
2P PUSH 2 2P JUMP	a 23	1P PUSH 2 1P JUMP	
N.C.	b 24	N.C.	
N.C.	c 25	N.C.	
N.C.	d 26	N.C.	
GND	e 27	GND	
GND	f 28	GND	

• PARTS NAME

CR7E-56DA-3.96E: HIROSE.

OR

1168-056-009 : KEL.

PC BOARD 90631C-5

CNIO 1	CNIO 3	CNIO 2	CNIO 4
POWER IN	COIN CHUTE	2P CONTROL	4P CONTROL

● 4-PLAYER SPEC.

CNIO 1		
GND	1	=22 BLACK
GND	2	=22 BLACK
4P RIGHT	3	=22 WHITE
4P LEFT	4	=22 BROWN
4P DOWN	5	=22 ORANGE
4P UP	6	=22 GREEN
4P SHOT 1	7	=22 BLUE
4P SHOT 2	8	=22 VIOLET
4P COIN SW	9	=22 GRAY
4P START SW	10	=22 WHITE

CNIO 2		
GND	1	=22 BLACK
GND	2	=22 BLACK
3P RIGHT	3	=22 VIOLET
3P LEFT	4	=22 GRAY
3P DOWN	5	=22 WHITE
3P UP	6	=22 BROWN
3P SHOT 1	7	=22 ORANGE
3P SHOT 2	8	=22 GREEN
3P COIN SW	9	=22 BLUE
3P START SW	10	=22 VIOLET

CNIO 3		
-12V	1	=22 YELLOW
+12V	2	=22 YELLOW
COIN LOCK OUT 4	3	=22 ORANGE
	4	
COIN LOCK OUT 3	5	=22 WHITE
	6	

CNIO 4		
GND	1	=22 BLACK
GND	2	=22 BLACK
-12V	3	=22 YELLOW
+12V	4	=22 YELLOW

● DIP SW [A]

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
COIN SETTINGS	1COIN 1CREDIT	OFF	OFF	OFF					
	1COIN 2CREDITS	ON	OFF	OFF					
	1COIN 3CREDITS	OFF	ON	OFF					
	1COIN 4CREDITS	ON	ON	OFF					
	1COIN 6CREDITS	OFF	OFF	ON					
	2COINS 1CREDIT	ON	OFF	ON					
	3COINS 1CREDIT	OFF	ON	ON					
	4COINS 1CREDIT	ON	ON	ON					
CONTINUE COIN	NORMAL							OFF	
	CONTINUE COIN							ON	
COIN CHUTE TYPE	3 OR 4 CHUTES								OFF
	1CHUTE								ON

* "COIN CHUTES" SETTING IS NOT VALID FOR 2-P MODE.

† IF CONTINUE COIN MODE IS "ON", GAME STARTS WITH 2-COIN 1 CREDIT AND CONTINUES WITH 1-COIN 1-CREDIT.

● DIP SW B

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
DIFFICULTY LEVEL	EASY	OFF	OFF	OFF					
		ON	OFF	OFF					
		OFF	ON	OFF					
	NORMAL	ON	ON	OFF					
		OFF	OFF	ON					
		ON	OFF	ON					
		OFF	ON	ON					
	HARD	ON	ON	ON					
						OFF	OFF		
				ON	OFF				
				OFF	ON				
PLAYER MODE	2P MODE							OFF	OFF
	3P MODE							ON	OFF
	4P MODE					ON	ON		
						ON	ON		

● DIP SW(C)

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
THE NUMBER OF PLAYERS	2PLAYERS	OFF	OFF						
	3PLAYERS	ON	OFF						
	4PLAYERS	OFF	ON						
	1PLAYER	ON	ON						
FREE PLAY	NORMAL			OFF					
	FREE PLAY			ON					
SCREEN PAUSE	NO				OFF				
	YES				ON				
SCREEN FLIP	NO					OFF			
	YES					ON			
DEMON- STATION SOUND	NO						OFF		
	YES						ON		
CONTINUE	NO							OFF	
	YES							ON	
TEST MODE	GAME MODE								OFF
	TEST MODE								ON

*HIGHLIGHTED CHARACTER INDICATES FACTORY SETTING.

*MAKE SURE THE POWER IS OFF BEFORE CHANGING DIP SWITCHES.

CAPCOM CO.,LTD.

No. 1-12, TOKIWAMACHI 2-CHOME,
CHUO-KU, OSAKA 540, JAPAN
TEL (06) 946-2058 FAX NO. (06) 946-6657