

CHELNOV

NO.	DIP SWITCH SETTING				REMARKS
	DIP SWITCH 1				
	SETTING				
1	OFF	ON	OFF	ON	COIN/CREDIT
2	OFF	OFF	ON	ON	RIGHT SELECTOR
	1 COIN	1	1	2	
	1 PLAY	2	3	1	
3	OFF	ON	OFF	ON	COIN/CREDIT
4	OFF	OFF	ON	ON	LEFT SELECTOR
	1 COIN	1	1	2	
	1 PLAY	2	3	1	
5		OFF			DON'T CHANGE
6	OFF			ON	ATTRACT MODE SOUND
	YES			NO	
7	OFF			ON	
	NORMAL			REVERSE	SCREEN ROTATION
8	OFF			ON	
	TABLE			UPRIGHT	CONTROL PANEL

NO	DIP SWITCH 2				REMARKS
	SETTING				
1	OFF	ON	OFF	ON	
2	OFF	OFF	ON	ON	NUMBER OF LIVES
	3	5	1	&	
3	OFF	ON	OFF	ON	
4	OFF	OFF	ON	ON	GAME DIFFICULTY
	NORMAL	EASY	HARD	HARDEST	
5	OFF			ON	
	YES			NO	CONTINUE MODE
6		OFF			
7		OFF			
8		OFF			DON'T CHANGE

CHELNOV

Lötsite

Best. seite

GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
N.C	5	N.C
+12V	6	+12V
	7	
COIN COUNTER 2	8	COIN COUNTER I
COIN LOCK OUT 2	9	COIN LOCK OUT I
S.P(-)	10	S.F(+)
N.C	11	N.C
VIDEO GREEN	12	VIDEO RED
VIDEO SYNC	13	VIDEO BLUE
SERVICE SW	14	VIDEO GND
N.C	15	N.C
 	16	COIN SW I
START SW 2	17	START SW I
2P CONTROL UP	18	IP CONTROL UP
2P CONTROL DOWN	19	IP CONTROL DOWN
2P CONTROL LEFT	20	IP CONTROL LEFT
2P CONTROL RIGHT	21	IP CONTROL RIGHT
2P CONTROL PUSH 1	22	IP CONTROL PUSH 1
2P CONTROL PUSH 2	23	IP CONTROL PUSH 2
N.C	24	N.C
N.C	25	N.C
N.C	26	N.C
GND	27	GND
GND	28	GND