


POBBA-COMMAND

T.M.

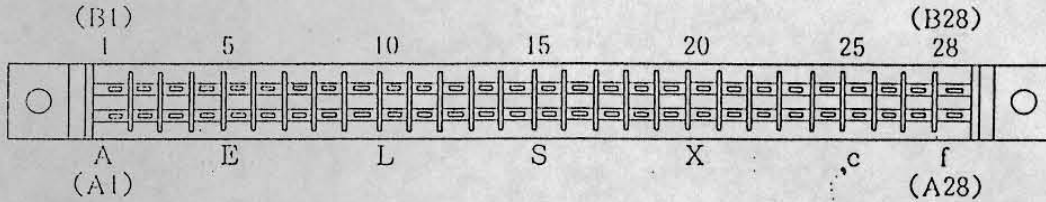

SIGNAL TO TERMINAL


半 出 面 SOLDER SIDE	端子番号 PIN #		部 品 面 PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
誤挿入防止キ一 MISTAKEN INPUT PREVENTION	H	7	誤挿入防止キ一 MISTAKEN INPUT PREVENTION
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GND
	S	15	
COIN SWITCH 2	T	16	COIN SWITCH 1
START SWITCH 2	U	17	START SWITCH 1
2P CONTROL 1 UP	V	18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W	19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X	20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y	21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z	22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a	23	1P CONTROL 6 PUSH 2
2P CONTROL 7 PUSH 3	b	24	1P CONTROL 7 PUSH 3
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

COBRA COMMAND

2. ハーネスの接続 / HARNESS CONNECTION

2-1 端子Noのふり方 / TERMINAL NUMBERING

コネクター CR7E-56DA-3.96E (HRS) 3.96mm Pitch
 CONNECTOR 1168-056-009 (KEL) 3.96mm Pitch

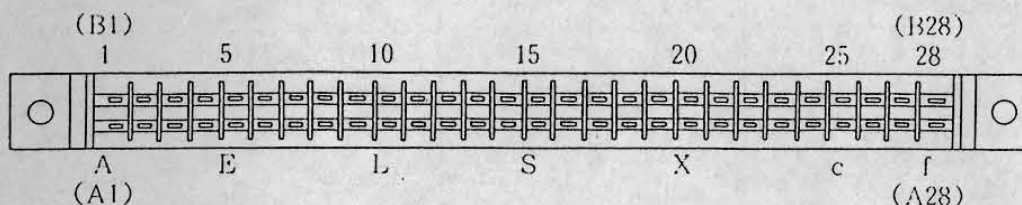

2-2 エッジコネクター端子の配列 / SIGNAL TO TERMINAL

半田面 SOLDER SIDE	端子番号 PIN #	部品面 PARTS SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
	E 5	
+12V	F 6	+12V
誤挿入防止キー MISTAKEN INPUT PREVENTION	H 7	誤挿入防止キー MISTAKEN INPUT PREVENTION
COIN COUNTER 2	J 8	COIN COUNTER 1
	K 9	
SPEAKER (-)	L 10	SPEAKER (+)
	M 11	
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SWITCH	R 14	VIDEO GND
	S 15	
COIN SWITCH 2	T 16	COIN SWITCH 1
START SWITCH 2	U 17	START SWITCH 1
2P CONTROL 1 UP	V 18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W 19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X 20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y 21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z 22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a 23	1P CONTROL 6 PUSH 2
	b 24	
	c 25	
	d 26	
GND	e 27	GND
GND	f 28	GND

10. ディップスイッチの説明 / DIP SWITCH SETTING

DIP SWITCH 1					
NO.	SETTING				REMARKS
1	OFF	ON	OFF	ON	COIN / CREDIT COIN-MECH (RIGHT)
2	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	2 1	3 1	
3	OFF	ON	OFF	ON	COIN / CREDIT COIN-MECH (LEFT)
4	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	2 1	3 1	
5	OFF				取扱禁止 / DON'T CHANGE
6	OFF		ON		アイドル中サウンドの有無 SOUND IN ATTRACT MODE
	有 / YES		無 / NIL		
7	OFF		ON		画面ローテーション SCREEN FLIP MODE
	通常 / NORMAL		反転 / FLIP		
8	OFF		ON		コントロールパネル CONTROL PANEL
	テーブル TABLE TYPE		アップライト ラバータイプ UPRIGHT		

DIP SWITCH 2					
NO.	SETTING				REMARKS
1	OFF	ON	OFF	ON	持ち数 NUMBER OF LIVES
2	OFF	OFF	ON	ON	
	3	4	5	99	
3	OFF	ON	OFF	ON	ゲーム難易度 DIFFICULTY SETTING
4	OFF	OFF	ON	ON	
	通常 NORMAL	易 EASY	やや難 HARD	難 HARDER	
5	OFF		ON		コンティニューの有無 BUY-IN MODE (CONTINUE MODE)
	有 / YES		無 / NO		
6	OFF		ON		自機ボーナス得点 (持ち機増1機ずつ) EXTRA LIVES FOR EXTENDED PLAY
	初回5万点 次15万点 1st 50,000 2nd 150,000		初回10万点 次20万点 1st 100,000 2nd 200,000		
7	OFF				取扱禁止 / DON'T CHANGE
8	OFF				