

DIP SWITCH SETTINGS

(COMBATRIBES)

DIP SWITCH-1

1	2	3	4	5	6	7	8	ITEM
								● Coin-1 and 2
OFF	OFF							1 Coin 1 Play
ON	OFF							1 Coin 2 Play
OFF	ON							2 Coin 1 Play
ON	ON							3 Coin 1 Play
								● Continue Price
				OFF				無し Without Continue Price
				ON				有り With Continue Price
								● Sound for Demonstration
					OFF			可 Sound
					ON			不可 No Sound
								● Screen Invert (画面反転)
						OFF		Normal (通常)
						ON		Invert (反転)
		OFF	OFF				OFF	● NOT USED

DIP SWITCH-2

1	2	3	4	5	6	7	8	ITEM
								● 難度 Degree of Difficulty
OFF	OFF							普通 Normal
ON	OFF							やさしい Easy
OFF	ON							ややむずかしい Less than Difficult
ON	ON							むずかしい Difficult
								● タイマー Timer Speed
		OFF						普通 Normal
		ON						早い Fast
								● テストモード Test Mode
				OFF				通常 Normal
				ON				テストモード Test Mode
								● クリア時体力回復 Regain Power when Stage Clear
					OFF	OFF		0
					ON	OFF		50
					OFF	ON		100
					ON	ON		150
								● セッティング切り替え Setting Select
							OFF	2人用 2P Setting
							ON	3人用 3P Setting
			OFF					● NOT USED

CONNECTING DIAGRAM

(CN3)

半田面 Solder Side	A	1	部品面 Parts Side
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
Coin Counter 2	J	8	Coin Counter 1
	K	9	
Speaker (-)	L	10	Speaker (+)
	M	11	
Video Green	N	12	Video Red
Video Sync	P	13	Video Blue
Service	R	14	Video GND
	S	15	
Coin 2	T	16	Coin 1
2P Start	U	17	1P Start
2P Up	V	18	1P Up
2P Down	W	19	1P Down
2P Left	X	20	1P Left
2P Right	Y	21	1P Right
2P Push S/W 1	Z	22	1P Push S/W 1
2P Push S/W 2	a	23	1P Push S/W 2
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

(CN4)

3P Right	1
3P Left	2
3P Up	3
3P Down	4
3P Push S/W 1	5
3P Push S/W 2	6
N/C	7
3P Start	8
GND	9