



BOLDER SIDE

GND	1
GND	2
+5V	3
+5V	4
	5
+12V	6
	7
	8
	9
SP (-)	10
	11
VIDEO GREEN	12
VIDEO SYNC	13
	14
	15
	16
	17
	18
	19
	20
	21
	22
	23
	24
	25
	26
GND	27
GND	28

PARO'S SIDE

GND
GND
+5V
+5V
+12V
SP (+)
VIDEO RED
VIDEO BLUE
VIDEO GND
COIN SW 1
RIGHT
UP
DOWN
LEFT
RIGHT
PUSH 1
PUSH 2
GND
GND

CONTINUE PLAY (LEFT BUTTON) PUSH