

V.R. for the adjustment of sound volume. It will become smaller in turning it to the arrow mark.



- Switch adjustment have to be done after disconnect the power supply.
- Switches are set as under-lined position when the machine is shipped.

	DIP SW.								CONTENTS	
	1	2	3	4	5	6	7	8		
NUMBER OF CLIMBER	<u>OFF</u>	<u>OFF</u>								3 CLIMBER 4 CLIMBER 5 CLIMBER 6 CLIMBER
ADDITIONAL CLIMBER SCORE SWITCHING			<u>OFF</u>							30,000 POINT 50,000 POINT
PATTERN TEST				ON						PATTERN TEST
COIN SELECTOR 1 COINAGE					<u>OFF</u>	<u>OFF</u>				COIN SELECTOR-1 1COIN-1PLAY 2COIN-1PLAY 3COIN-1PLAY 4COIN-1PLAY
COIN SELECTOR 2 COINAGE							OFF	OFF		COIN SELECTOR-2 1COIN-1PLAY 1COIN-2PLAY 1COIN-3PLAY
FREE PLAY							ON	ON		FREE PLAY