 
 
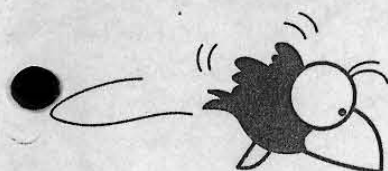 
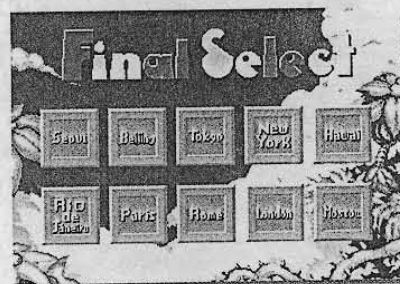 
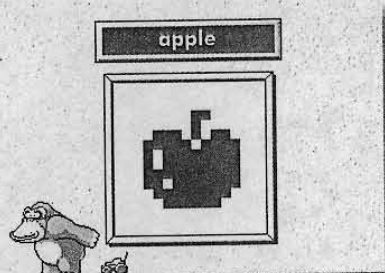 
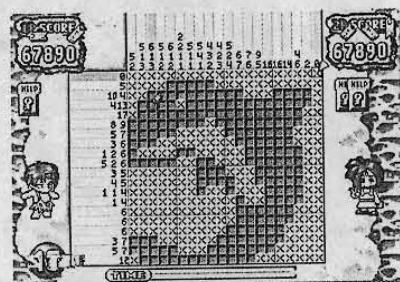 


# CROQUIS

## 크로키

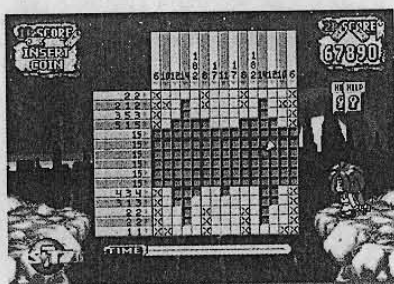

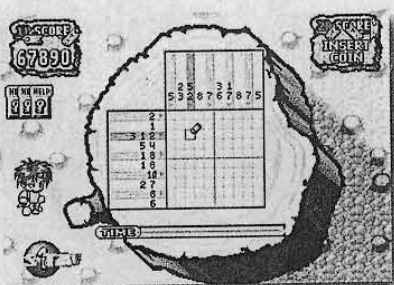 


# CROQUIS (크로키)

## OPTION SWITCH SETTING (DIP SW 1)

OPTION	1	2	3	4	5	6	7	8
코인스위치 COIN SW	1 COIN 1 CREDIT	OFF	OFF	OFF				
	1 COIN 2 CREDIT	OFF	OFF	ON				
	1 COIN 3 CREDIT	OFF	ON	OFF				
	2 COIN 1 CREDIT	OFF	ON	ON				
	2 COIN 3 CREDIT	ON	OFF	OFF				
	3 COIN 1 CREDIT	ON	OFF	ON				
	3 COIN 2 CREDIT	ON	ON	OFF				
	FREE PLAY	ON	ON	ON				
	난이도 DIFFICULTY	Normal			OFF	OFF		
Easy				OFF	ON			
Hard				ON	OFF			
Very Hard				ON	ON			
PLAY TIME								
NUMBER OF HELP								
레모시 사운드 DEMONSTRATION SOUND	YES							OFF
	NO							ON

## MAIN BOARD

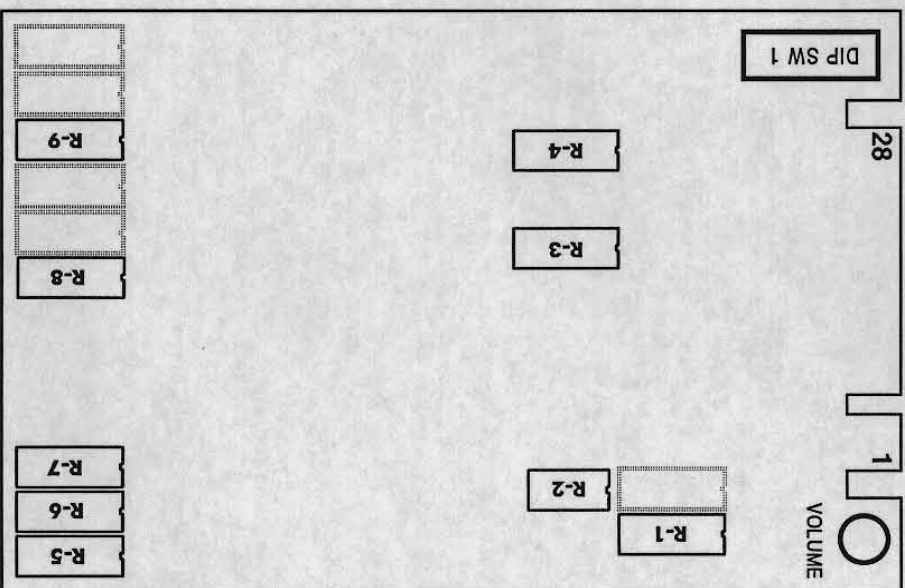

## PIN ASSIGNMENT (JAMMA)

COMPONENT SIDE	SOLDER SIDE
GND	1 A GND
GND	2 B GND
+5V	3 C +5V
+5V	4 D +5V
+12V	5 E +12V
	6 F +12V
	7 H
COIN METER	8 J
	9 K
SPEAKER(+)	10 L SPEAKER(-)
	11 M
RED	12 N GREEN
BLUE	13 P SYNC
GND	14 R
TEST	15 S
COIN	16 T
1P START	17 U 2P START
1P UP	18 V 2P UP
1P DOWN	19 W 2P DOWN
1P LEFT	20 X 2P LEFT
1P RIGHT	21 Y 2P RIGHT
1P SW Ⓐ	22 Z 2P SW Ⓐ
1P SW Ⓑ	23 a 2P SW Ⓑ
1P SW Ⓒ	24 b 2P SW Ⓒ
	25 c
	26 d
GND	27 e GND
GND	28 f GND

**DENIAM** DENIAM CORP. 393-2 SHINDANG 2DONG CHUNGKU SEOUL KOREA  
 TEL:(02)253-0333 FAX:(02)253-0334