

# 餓流禍

カ

ル

カ

TM

© KONAMI 1988



© KONAMI 1988

  
警告

「餓流禍」は弊社(コナミ)が独自に開発したオリジナル製品であり、著作権、工業  
所有権、その他の諸権利はコナミ株式会社が所有しております。

「DEVASTATORS」 is an original game developed by KONAMI Industry  
Co., Ltd. reserves all the copyrights,  
property rights with respect to this

WAP

# ツチ No1 セット

## No1セット

3	4	コイン	プレイ
OFF	OFF	1	1
		1	2
		1	3
		1	4
ON	OFF	1	5
		1	6
		1	7
		2	1
OFF	ON	2	3
		2	5
		3	1
		3	2
ON	ON	3	4
		4	1
		4	3
		フリープレイ	

コインを入れずにプレイ出来る状態を言う

## No2セット

7	8	コイン	プレイ
OFF	OFF	1	1
		1	2
		1	3
		1	4
ON	OFF	1	5
		1	6
		1	7
		2	1
OFF	ON	2	3
		2	5
		3	1
		3	2
ON	ON	3	4
		4	1
		4	3
		無効	

# DIP SWITCH No.1 SETTINGS

## 1. COIN SWITCH NO.1 SETTINGS

SW	1	2	3	4	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				FREE PLAY	

FREE PLAY : You can play games without coins.

## 2. COIN SWITCH NO.2 SETTINGS

SW	5	6	7	8	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				VOID	



## ディップスイッチ No.2セット

### 1. プレイヤー数

SW	1	2	プレイヤー数
○	OFF	OFF	2
	ON		3
	OFF	ON	5
	ON		7

### 2. テーブル/アップライト切り換え (音用)

SW	3	タイプ
○	OFF	テーブル型
	ON	アップライト型

### 3. ボーナス設定

SW	4	5	ボーナス
○	OFF	OFF	初回150点、2回目以降200点毎
	ON		初回150点、2回目以降250点毎
	OFF	ON	初回150点のみ
	ON		初回200点のみ

### 4. ゲームの難度

SW	6	7	難度
○	OFF	OFF	易しい
	ON		普通
	OFF	ON	難しい
	ON		大変難しい

### 5. アモ中の音

SW	8	音
○	OFF	無
	ON	有

## ディップスイッチ No.3セット

### 1. ビデオスクリーン反転 (モニター)

SW	1	スクリーン
○	OFF	正常
	ON	反転

### 2. モード切り換え

SW	3	モード
○	OFF	ゲームモード
	ON	テストモード

SW2、SW4は未使用

○は標準設定。

## DIP SWITCH No.2 SETTINGS

### 1. THE NUMBER OF PLAYER'S LIFE

SW	1	2	NUMBER
○	OFF	OFF	2
	ON		3
	OFF	ON	5
	ON		7

### 2. CHANGE OF TABLE/UPRIGHT (FOR SOUND)

SW	3	TYPE
○	OFF	TABLE
	ON	UPRIGHT

### 3. BONUS

SW	4	5	BONUS
○	OFF	OFF	AT 150PTS AND THEN EVERY 200PTS
	ON		AT 150PTS AND THEN EVERY 250PTS
	OFF	ON	AT 150PTS ONLY
	ON		AT 250PTS ONLY

### 4. DIFFICULTY OF THE GAME

SW	6	7	DIFFICULTY
○	OFF	OFF	EASY
	ON		NORMAL
	OFF	ON	DIFFICULT
	ON		VERY DIFFICULT

### 5. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
○	OFF	OFF
	ON	ON

## DIP SWITCH No.3 SETTINGS

### 1. VIDEO SCREEN FLIP

SW	1	
○	OFF	NORMAL
	ON	UPSIDE DOWN

### 2. CHANGE OF MODE

SW	3	MODE
○	OFF	GAME MODE
	ON	TEST MODE

SW2 and SW4 are not used.

○ shows recommended settings.

