

"DOCK MAN"

ADJUSTMENTS ON GAME PC BOARD

DETAILS OF CONNECTOR TERMINAL


H

1	GND
2	GND
3	GND
4	GND
5	+5V
6	+5V
7	+5V
8	N.C
9	+13V + 12
10	POST
11	+12V
12	+12V

DETAILS OF CONNECTOR TERMINAL

GND	1	A	GND
VIDEO RED	2	B	VIDEO GND
VIDEO GREEN	3	C	VIDEO BLUE
VIDEO SYNC	4	D	
SOUND (+)	5	E	SOUND (-)
POST	6	F	POST
POWER RESET	7	H	
COIN SW.	8	J	
COIN METER	9	K	
COIN/LOCKOUT	10	L	
SERVICE SW.	11	M	
SELECT-1	12	N	SELECT-2
1P UP	13	P	2P UP
1P DOWN	14	R	2P DOWN
1P RIGHT	15	S	2P RIGHT
1P LEFT	16	T	2P LEFT
	17	U	
	18	V	
	19	W	
	20	X	
1P LAUNCH BUTTON	21	Y	2P LAUNCH BUTTON
	22	Z	

PARTS SIDE 1-----22
SOLDER SIDE A-----Z

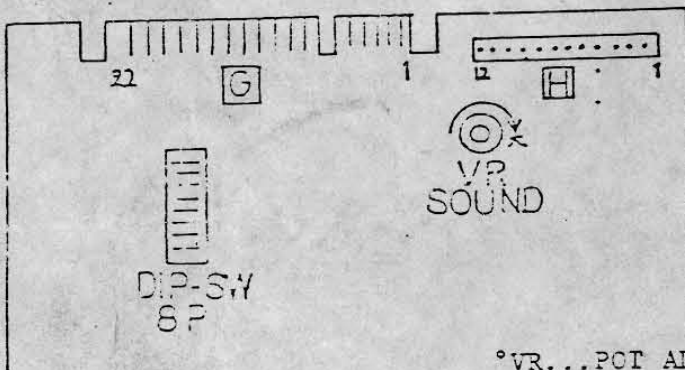

PARTS SIDE SOLDER SIDE

*VR...POT ADJUSTING MAIN SOUND VOLUME
TO INCREASE THE SOUND, TURN EACH POT TO THE DIRECTION
SHOWN WITH ARROW.

*SETTING FOR DIP SWITCH

	SW-1	SW-2	SW-3	SW-4	SW-5	SW-6	SW-7	SW-8
CREDIT								
1 COIN 6 CREDIT	OFF	OFF						
1 " 1 "	ON	OFF						
1 " 2 "	OFF	ON						
1 " 3 "	ON	ON						
NUMBER OF PLAYER								
2			OFF	OFF				
3			ON	OFF				
4			OFF	ON				
5			ON	ON				
ADD PLAYER POINTS						OFF		
10000 POINTS						ON		
30000 POINTS								
GAME STYLE							ON	
TABLE							OFF	
UP LIGHT								
NOT USE							OFF	OFF