


* THE CONTROL OF THIS GAME USES
ONE 8-WAY LEVER AND
3-BUTTONS.

*NOTICE : WHEN YOU CHANGE DIP SW,
PLS SWITCH OFF POWER SOURCES.

- CONNECTOR -

| Solder Side | | Parts Side | |
|----------------|---|------------|----------------|
| GND | A | 1 | GND |
| GND | B | 2 | GND |
| +5V | C | 3 | +5V |
| +5V | D | 4 | +5V |
| -5V | E | 5 | -5V |
| +12V | F | 6 | +12V |
| | H | 7 | |
| COIN COUNTER 2 | J | 8 | COIN COUNTER 1 |
| | K | 9 | |
| SPEAKER (-) | L | 10 | SPEAKER (+) |
| | M | 11 | |
| VIDEO G | N | 12 | VIDEO R |
| VIDEO SYNC | P | 13 | VIDEO B |
| SERVICE SW | R | 14 | VIDEO GND |
| | S | 15 | |
| COIN 2 | T | 16 | COIN 1 |
| SELECT-2 | U | 17 | SELECT-1 |
| 2P UP | V | 18 | 1P UP |
| 2P DOWN | W | 19 | 1P DOWN |
| 2P LEFT | X | 20 | 1P LEFT |
| 2P RIGHT | Y | 21 | 1P RIGHT |
| 2P KICK | Z | 22 | 1P KICK |
| 2P JUMP | a | 23 | 1P JUMP |
| 2P PUNCH | b | 24 | 1P PUNCH |
| | c | 25 | |
| | d | 26 | |
| GND | e | 27 | GND |
| GND | f | 28 | GND |

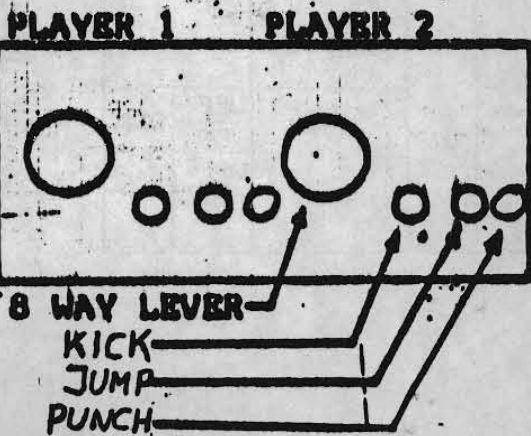

Achtung: Für dieses Spiel
werden jeweils 3 Tasten
gebraucht. 3. Taste (1P+2P Punch)
müssen nachgerüstet werden.

DOUBLE DRAGON

=====

SOLDER SIDE

PARTS SIDE

| | | |
|-----------------|----|-----------------|
| GND | 1 | GND |
| GND | 2 | GND |
| +5V | 3 | +5V |
| +5V | 4 | +5V |
| -5V | 5 | -5V |
| +12V | 6 | +12V |
| | 7 | |
| COIN COUNTER 2 | 8 | COIN COUNTER 1 |
| | 9 | |
| SP(-) | 10 | SP(+) |
| | 11 | |
| VIDEO GREEN | 12 | VIDEO RED |
| VIDEO SYNC | 13 | VIDEO SLUE |
| SERVICE | 14 | VIDEO GND |
| | 15 | |
| COIN 2 | 16 | COIN 1 |
| 2P START | 17 | 1P START |
| 2P UP | 18 | 1P UP |
| 2P DOWN | 19 | 1P DOWN |
| 2P LEFT | 20 | 1P LEFT |
| 2P RIGHT | 21 | 1P RIGHT |
| 2P SW 1 (KICK) | 22 | 1P SW 1 (KICK) |
| 2P SW 2 (JUMP) | 23 | 1P SW 2 (JUMP) |
| 2P SW 3 (PUNCH) | 24 | 1P SW 3 (PUNCH) |
| | 25 | |
| | 26 | |
| GND | 27 | GND |
| GND | 28 | GND |
