
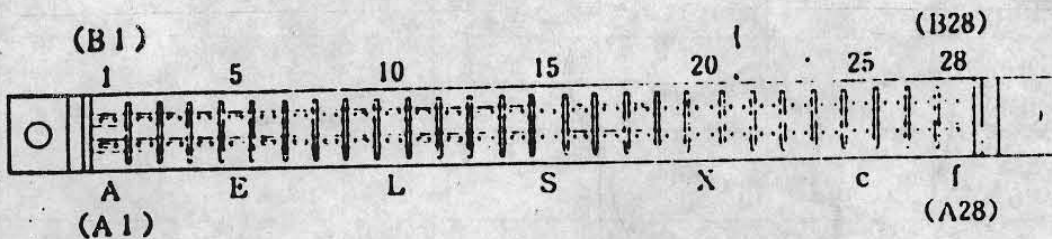


DRAGON NINJA

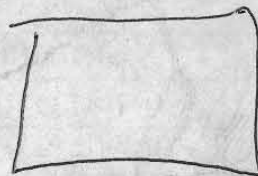

エッジコネクタ端子 (CN3) の配列

半 田 面 SOLDER SIDE	端子番号 PIN #	部 品 名 PARTS SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
	E 5	
+12V	F 6	+12V
誤挿入防止キー MISTAKEN INPUT PREVENTION	H 7	誤挿入防止キー MISTAKEN INPUT PREVENTION
COIN COUNTER 2	I 8	COIN COUNTER 1
(GND)	K 9	(GND)
SPEAKER (-) ✓	L 10	SPEAKER (+)
AUDIO (GND) ✓	M 11	AUDIO (+)
VIDEO GREEN ✓	N 12	VIDEO RED
VIDEO SYNC ✓	P 13	VIDEO BLUE
SERVICE SWITCH ✓	R 14	VIDEO GND
	S 15	
COIN SWITCH 2	T 16	COIN SWITCH 1
START SWITCH 2 ✓	U 17	START SWITCH 1 ✓
2P CONTROL 1 UP ✓	V 18	1P CONTROL 1 UP ✓
2P CONTROL 2 DOWN ✓	W 19	1P CONTROL 2 DOWN ✓
2P CONTROL 3 LEFT ✓	X 20	1P CONTROL 3 LEFT ✓
2P CONTROL 4 RIGHT ✓	Y 21	1P CONTROL 4 RIGHT ✓
2P CONTROL 5 PUSH 1 ✓	Z 22	1P CONTROL 5 PUSH 1 ✓
2P CONTROL 6 PUSH 2 ✓	a 23	1P CONTROL 6 PUSH 2 ✓
2P CONTROL 7 PUSH 3	b 24	1P CONTROL 7 PUSH 3
2P CONTROL 8 SPARE 1	c 25	1P CONTROL 8 SPARE 1
2P CONTROL 9 SPARE 2	d 26	1P CONTROL 9 SPARE 2
GND	e 27	GND
GND	f 28	GND

DIP SWITCH 1					1
No.	SETTING				REMARKS
1	OFF	ON	OFF	ON	COIN/CREDIT RIGHT SELECTOR
2	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	2 1	3 1	
3	OFF	ON	OFF	ON	COIN/CREDIT LEFT SELECTOR
4	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	2 1	3 1	
5	OFF				取扱禁止 DON'T CHANGE
6	OFF		ON		アイドル中サウンドの有無 ATTRACT MODE SOUND
	有	YES	無	NO	
7	OFF		ON		画面ローテーション SCREEN ROTATION
	通常	NORMAL	反転	REVERSE	
8	OFF		ON		コントロールパネル CONTROL PANEL
	テーブル	TABLE	アップライト	ラバータイプ UPRIGHT	

DIP SWITCH 2							
No.	SETTING				REMARKS		
1	OFF	ON	OFF	ON	持ち数 NUMBER OF LIVES		
2	OFF	OFF	ON	ON			
	3	4	2	..			
3	OFF	ON	OFF	ON	ゲーム難易度 GAME DIFFICULTY		
4	OFF	OFF	ON	ON			
	通常	NORMAL	易	EASY		やや難	HARD
5	OFF		ON		コンティニューの有無 CONTINUE MODE		
	有	YES	無	NO			
6	OFF				取扱禁止 DON'T CHANGE		
7	OFF						
8	.. OFF						