

DYNA BLASTER

DIP SW 1

| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|----------------------------------|-----------|-----|-----|-----|-----|---|-----|-----|-----|
| THE NUMBER OF EXTRA BOMBERMEN | 3 | OFF | OFF | | | | | | |
| | 2 | ON | OFF | | | | | | |
| | 4 | OFF | ON | | | | | | |
| | 5 | ON | ON | | | | | | |
| DIFFICULTY | NORMAL | | | OFF | OFF | | | | |
| | EASY | | | ON | OFF | | | | |
| | HARD | | | OFF | ON | | | | |
| | VERY EASY | | | ON | ON | | | | |
| CONTINUE | YES | | | | | | OFF | | |
| | NO | | | | | | ON | | |
| SOUND IN ATTRACTIVE MODE | NO | | | | | | | OFF | |
| | YES | | | | | | | ON | |
| DIAGNOSTIC TEST | NO | | | | | | | | OFF |
| | YES | | | | | | | | ON |

DIP SW 2

| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | |
|------------------------------------|-----------------|----------------|-----|-----|-----|-----|-----|-----|-----|-----|
| FLIP PICTURE | NO | OFF | | | | | | | | |
| | YES | ON | | | | | | | | |
| CABINET TYPE (See next page) | 4P UPRIGHT A | | OFF | OFF | | | | | | |
| | 4P UPRIGHT B | | OFF | ON | | | | | | |
| | 2P UPRIGHT | | ON | OFF | | | | | | |
| | 2P TABLE TYPE | | ON | ON | | | | | | |
| MODE 1 | 1 COIN 1 PLAY | | | | OFF | OFF | OFF | OFF | OFF | |
| | 2 COINS 1 " | | | | OFF | ON | OFF | OFF | OFF | |
| | 3 " 1 " | | | | OFF | OFF | ON | OFF | OFF | |
| | 4 " 1 " | | | | OFF | ON | ON | OFF | OFF | |
| | 5 " 1 " | | | | OFF | OFF | OFF | ON | OFF | |
| | 6 " 1 " | | | | OFF | ON | OFF | ON | OFF | |
| | 1 COIN 2 PLAYS | | | | OFF | OFF | ON | ON | OFF | |
| | 1 " 3 " | | | | OFF | ON | ON | ON | OFF | |
| | 1 " 4 " | | | | OFF | OFF | OFF | OFF | ON | |
| | 1 " 5 " | | | | OFF | ON | OFF | OFF | ON | |
| | 1 " 6 " | | | | OFF | OFF | ON | OFF | ON | |
| | 2 COINS 3 " | | | | OFF | ON | ON | OFF | ON | |
| | 3 " 2 " | | | | OFF | OFF | OFF | ON | ON | |
| | 4 " 3 " | | | | OFF | ON | OFF | ON | ON | |
| | 1-COIN CONTINUE | | | | OFF | OFF | ON | ON | ON | |
| | FREE PLAY | | | | OFF | ON | ON | ON | ON | |
| MODE 2 | SELECTOR A | 1 COIN 1 PLAY | | | ON | OFF | OFF | | | |
| | | 2 COINS 1 " | | | ON | ON | OFF | | | |
| | | 3 " 1 " | | | ON | OFF | ON | | | |
| | | 5 " 1 " | | | ON | ON | ON | | | |
| | SELECTOR B | 1 COIN 2 PLAYS | | | | ON | | | OFF | OFF |
| | | 1 " 3 " | | | | ON | | | ON | OFF |
| | | 1 " 5 " | | | | ON | | | OFF | ON |
| | | 1 " 6 " | | | | ON | | | ON | ON |

DYNA BLASTER


Conforming to JAMMA standard (3.96 mm pitch)

| SOLDER SIDE | | PARTS SIDE | |
|-------------------------|---|------------|-------------------------|
| GND | A | 1 | GND |
| GND | B | 2 | GND |
| +5V | C | 3 | +5V |
| +5V | D | 4 | +5V |
| | E | 5 | |
| +12V | F | 6 | +12V |
| | H | 7 | |
| COUNT. B | J | 8 | COUNT. A |
| GND | K | 9 | GND |
| SP- | L | 10 | SP+ |
| GND | M | 11 | |
| GREEN | N | 12 | RED |
| 2 SYNC | P | 13 | BLUE |
| SERVICE (START) | R | 14 | GND |
| | s | 15 | TEST |
| COIN. B (2P COIN) | t | 16 | COIN. A (1P COIN) |
| 2P. START | u | 17 | 1P. START |
| 2P. UP | v | 18 | 1P. DOWN |
| 2P. DOWN | w | 19 | 1P. DOWN |
| 2P. LEFT | x | 20 | 1P. LEFT |
| 2P. RIGHT | y | 21 | 1P. RIGHT |
| 2P. BOMB | z | 22 | 1P. BOMB |
| 2P. REMOTE CONTROL BOMB | a | 23 | 1P. REMOTE CONTROL BOMB |
| | b | 24 | |
| | c | 25 | |
| | d | 26 | |
| GND | e | 27 | GND |
| GND | f | 28 | GND |

| CN3 | |
|-----|-------------------------|
| 1 | GND |
| 2 | 3P. RIGHT |
| 3 | 3P. LEFT |
| 4 | 3P. DOWN |
| 5 | 3P. UP |
| 6 | 3P. START |
| 7 | 3P. COIN * |
| 8 | 3P. REMOTE CONTROL BOMB |
| 9 | 3P. SETS BOMBS |

| CN4 | |
|-----|-------------------------|
| 1 | GND |
| 2 | 4P. RIGHT |
| 3 | 4P. LEFT |
| 4 | 4P. DOWN |
| 5 | 4P. UP |
| 6 | 4P. START |
| 7 | 4P. COIN * |
| 8 | 4P. REMOTE CONTROL BOMB |
| 9 | 4P. SETS BOMBS |

* USED ONLY IN 4P UPRIGHT A AND UNUSED IN 4P UPRIGHT B CABINETS.

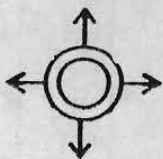

4-WAY JOYSTICK - IMPORTANT -