


EDGE CONNECTOR DIAGRAM (EDGE CONNECTOR OF JAMMA SPECS.)

COMPONENT SIDE		SOLDER SIDE	
GND	1	A	GND
GND	2	B	GND
HEADPHONE L&R (-)			
+5V	3	C	+5V
+5V	4	D	+5V
	5	E	
+12V	6	F	+12V
KEY TO PREVENT ERRONEOUS INSERTION	7	H	KEY TO PREVENT ERRONEOUS INSERTION
COIN METER #1	8	J	COIN METER #2
	9	K	
SPEAKER 1 (+)	10	L	SPEAKER 1 (-)
HEADPHONE L (+)			
	11	M	
VIDEO RED	12	N	VIDEO GREEN
VIDEO BLUE	13	P	VIDEO SYNC
VIDEO GND	14	R	SERVICE SW
	15	S	
COIN SW #1	16	T	COIN SW #2
1P START	17	U	2P START
1P UP	18	V	2P UP
1P DOWN	19	W	2P DOWN
1P LEFT	20	X	2P LEFT
1P RIGHT	21	Y	2P RIGHT
1P PUSH 1	22	Z	2P PUSH 1
1P PUSH 2	23	a	2P PUSH 2
1P PUSH 3	24	b	2P PUSH3
	25	c	
	26	d	
GND	27	e	GND
GND	28	f	GND

SPEAKER 2 (+)	1	2	SPEAKER 2 (-)
HEADPHONE R (+)			

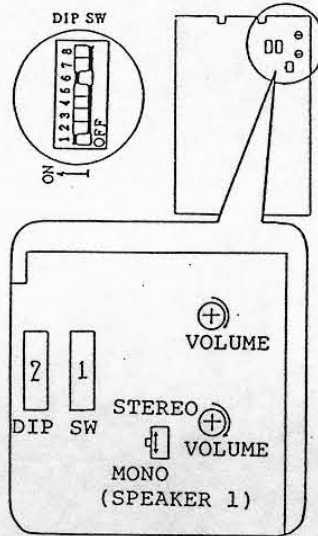

E. D. F.

DIP SWITCH #1

		1	2	3	4	5	6	7	8
FIRST COINCHUTE	1 COIN 1 CREDIT	OFF	OFF	OFF					
	1 COIN 2 CREDITS	OFF	OFF	ON					
	1 COIN 3 CREDITS	OFF	ON	OFF					
	1 COIN 4 CREDITS	OFF	ON	ON					
	1 COIN 5 CREDITS	ON	OFF	OFF					
	2 COINS 1 CREDIT	ON	OFF	ON					
	3 COINS 1 CREDIT	ON	ON	OFF					
FREE PLAY	ON	ON	ON						
SECOND COINCHUTE	1 COIN 1 CREDIT				OFF	OFF	OFF		
	1 COIN 2 CREDITS				OFF	OFF	ON		
	1 COIN 3 CREDITS				OFF	ON	OFF		
	1 COIN 4 CREDITS				OFF	ON	ON		
	1 COIN 5 CREDITS				ON	OFF	OFF		
	2 COINS 1 CREDIT				ON	OFF	ON		
3 COINS 1 CREDIT				ON	ON	OFF			
4 COINS 1 CREDIT				ON	ON	ON			
SOUND IN	NECESSARY								OFF
ATTRACT MODE	UNNECESSARY								ON
NOT USED	KEEP IN "OFF"								OFF

DIP SWITCH #2

		1	2	3	4	5	6	7	8
NOT USED		OFF							
NOT USED			OFF						
NOT USED				OFF					
NOT USED					OFF				
DIFFICULTY LEVEL	EASY					ON	ON		
	STANDARD					OFF	OFF		
	DIFFICULT					OFF	ON		
	MORE DIFFICULT					ON	OFF		
NOT USED									OFF
SCREEN DISPLAY	NORMAL (OR REVERSE)								OFF
	REVERSE (OR NORMAL.)								ON

- subject to change without notice -

E.D.F.orce