

# EARTH JOKER

## DIP SW 1

Item	Condition	1	2	3	4	5	6	7	8
DON'T TOUCH		OFF							
		ON							
Direction	Normal		OFF						
	Reverse		ON						
TEST MODE	Game			OFF					
	Test			ON					
DEMO SOUND	Yes				OFF				
	No				ON				
Coin 1	1 COIN 1 PLAY					OFF	OFF		
	1 COIN 2 PLAY					ON	OFF		
	2 COIN 1 PLAY					OFF	ON		
	2 COIN 3 PLAY					ON	ON		
Coin 2	1 COIN 1 PLAY							OFF	OFF
	1 COIN 2 PLAY							ON	OFF
	2 COIN 1 PLAY							OFF	ON
	2 COIN 3 PLAY							ON	ON

## DIP SW 2

Item	Condition	1	2	3	4	5	6	7	8
Difficulty	Normal	OFF	OFF						
	Easy	ON							
	Hard	OFF	ON						
	Very Hard	ON							
BONUS extend	NO			OFF	OFF				
	100000 ONLY			ON	OFF				
	200000 ONLY			OFF	ON				
	100000/300000			ON	ON				
Player Stock	2					OFF	OFF		
	3					ON	OFF		
	4					OFF	ON		
	1					ON	ON		
DON'T TOUCH								OFF	
								ON	
DON'T TOUCH								OFF	
								ON	

半田面		部品面
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
-5V	E 5	-5V
+12V	F 6	12V
	H 7	
COIN COUNTER2	J 8	COIN COUNTER1
COIN LOCK OUT2	K 9	COIN LOCK OUT1
スピーカー (+)	L 10	スピーカー (-)
N. C	M 11	N. C
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SW	R 14	VIDEO GND
	S 15	
COIN SW2	T 16	COIN SW1
START SW2	U 17	START SW1
2P UP	V 18	1P UP
2P DOWN	W 19	1P DOWN
2P LEFT	X 20	1P LEFT
2P RIGHT	Y 21	1P RIGHT
2P PUSH1	Z 22	1P PUSH1
2P PUSH2	a 23	1P PUSH2
N. C	b 24	N. C
N. C	c 25	N. C
N. C	d 26	N. C
GND	e 27	GND
GND	f 28	GND