

EDGE CONNECTOR WIRING

EGG VENTURE ^W

SOLDER SIDE			PARTS SIDE
GROUND	A	1	GROUND
GROUND	B	2	GROUND
+ 5	C	3	+ 5
+ 5	D	4	+ 5
- 5	E	5	- 5
+12	F	6	+12
KEY	H	7	KEY
	J	8	COIN METER
	K	9	
L SPEAKER (-)	L	10	L SPEAKER (+)
R SPEAKER (-)	M	11	R SPEAKER (+)
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GROUND
	S	15	
COIN SWITCH 2	T	16	COIN SWITCH 1
START (PLAYER 2)	U	17	START (PLAYER 1)
	V	18	
	W	19	
	X	20	
	Y	21	
2	Z	22	1
	a	23	
	b	24	
	c	25	
	d	26	
GROUND	e	27	GROUND
GROUND	f	28	GROUND

Not Supplied With Kit

Spray Adhesive Or Double Sided Sticky Paper For Graphics

Parts Supplied With Kit

- | | |
|-------------------------------|------------------------------------|
| Operations manual | ✓1 Stereo Amp |
| ✓2 Side Decals | ✓1 Stereo Amp Connector |
| ✓1 Marquee | ✓1 Set Of Board Legs |
| ✓1 Overlay/ Instruction Bezel | ✓1 Gun Adapter Harness |
| ✓1 Red Gun Assm. | ✓2 Start Buttons |
| ✓1 Blue Gun Assm. | ✓1 Game Board Sr # <u>EVO00117</u> |
| ✓2 Gun Holsters | |

INSTALLATION

This kit should be installed by an experienced service technician only. Following connector diagrams on the last 2 pages.

Before beginning the conversion you should familiarize yourself with the edge connector designations on the last page. Improper connections could damage sensitive integrated circuit chips and will void warranty.

A.C. power must always be unplugged before before starting work.

Blue gun is for (#1) left player. Red gun is for (#2) right player, and plug into P.C.B. as shown in Board diagram on second to last page.

Decals are included for the sides of cabinet, the marquee, and also the control panel. Apply glue as instructed on can. It is also recommended that you cover control panel decal with 1/16" lexan sheet.

Check all connections before plugging in game. After power up check for +5 volts at board. Adjust to get as close to +5 volts as possible.

If Monitor Needs To Be Flipped, Or Reversed, We Have Included Instructions For Most Popular Monitors. Call Monitor Manufacturer If Unsure.

GUN CONNECT PINOUT

- 1 + 5 VOLTS
- 2 GUN OPTO PLAYER 1
- 3 GUN OPTO PLAYER 2
- 4 NOT USED
- 5 GUN TRIGGER PLAYER 1
- 6 NOT USED
- 7 GUN TRIGGER PLAYER 2
- 8 KEY
- 9 GROUND

SPEAKER/ AMP PINOUT

