


SPEAKER

GND	1
"	2
"	3
"	4
+5V	5
"	6
"	7
"	8
2P LEVER DOWN	9
" " UP	10
" " RIGHT	11
" " LEFT	12
	13
	14
	15
	16
1P LEVER DOWN	17
" " UP	18
" " RIGHT	19
" " LEFT	20
XXXXXXXXXX	21
	22
	23
	24
COIN IN USED	25
1 PLAY	26
GND X	27
COIN IN	28
GND	29
2 PLAY	30
GREEN	31
RED	32
SYNC	33
BLUE	34
XXXXXXXXXX	35
AUDIO OUT PUT	36
+12V	37
"	38
"	39
"	40
GND	41
"	42
"	43
"	44

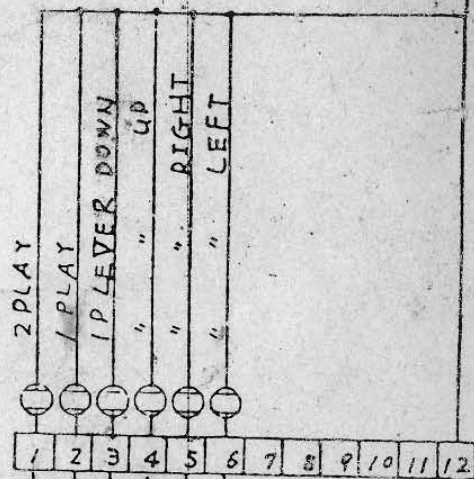

Fantasy + N:6612

Destiny

22 1