


ADJUSTMENT ON GAME PC BOARD (FINAL BLOW G25 00515A)

CONNECTOR

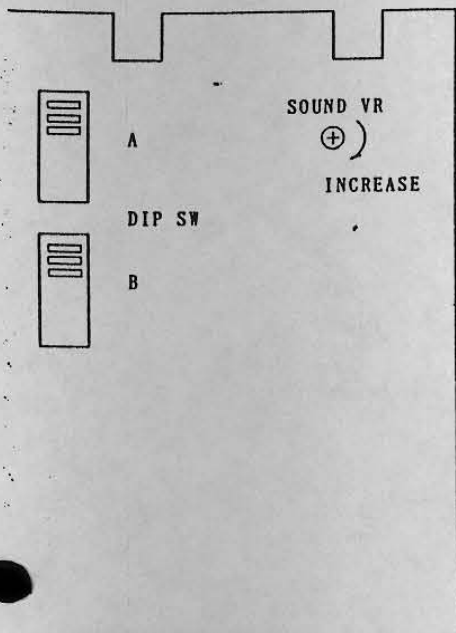

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V
POST	H	7	POST
COIN COUNTER 2	J	8	COIN COUNTER 1
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN B)	T	16	COIN A
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUNCH BUTTON A	Z	22	1P PUNCH BUTTON A
2P PUNCH BUTTON B	a	23	1P PUNCH BUTTON B
2P DUCKING BUTTON	b	24	1P DUCKING BUTTON
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

THE CONTROL OF THIS GAME USES
ONE 4-WAY JOYSTICK AND 3 BUTTONS.

(TE) BEFORE CHANGING THE SETTINGS OF THE DIP SWITCH, TURN THE POWER OFF.

SETTING OF DIP SWITCH A

(*) : FACTORY SETTINGS

SETTING	POSITION	1	2	3	4	5	6	7	8
SCREEN ROTATION	* NOMAL	* OFF	OFF						
	REVERSE		ON						
TEST MODE	* NOMAL GAME				OFF				
	TEST MODE				ON				
ATTRACT SOUND	* WITH					OFF			
	WITHOUT					ON			
PLAY PRICING COIN A	* 1 COIN 1 PLAY						OFF	OFF	
	2 COINS 1 PLAY						ON	OFF	
	3 COINS 1 PLAY						OFF	ON	
	4 COINS 1 PLAY						ON	ON	
PLAY PRICING COIN B	* 1 COIN 2 PLAYS							OFF	OFF
	1 COIN 3 PLAYS							ON	OFF
	1 COIN 4 PLAYS							OFF	ON
	1 COIN 6 PLAYS							ON	ON

* ALWAYS SET AT OFF.

SETTING OF DIP SWITCH B

SETTING	POSITION	1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY (A) → DIFFICULT (D)	* RANK B	OFF	OFF						
	RANK A	ON							
	RANK C	OFF	ON						
	RANK D	ON							