FROM SUK JUNG 453-4722

96.24.'87 12:58 PAGE 2

FLYING SHARK



SOLDER SID	E		PARTS SIDE
CND	Α	1	GND
GND	В	2	GND .
+5V	С	3	+5V *
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
POST	н	7	POST
(COIN COUNTER 2)	J	8	(COIN COUNTER 1)
	ĸ	9	
SPEAKER (-)	L	10	SPEAKER (+)
	н	11	
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	AIDEO R
SERVICE SW	R	14	VIDEO GND
•	· S	15	
(COIN 2)	T	l ń	COIN 1
2P START	U	17	1P START
2P UP	V	18	IP UP
2P DOWN	W.	. 19	IP DOWN
2P LEFT	Х	20	1P LEFT
2P RICHT	Y	21	1P RIGHT
2P SHOT	Z	22	1P SHOT
2P BOMBER	a	23	1P BOMBER
	ъ	24	
	c	25	
	d	26	
CND v	e	27	GND
GND	f	28	GND

DIP SW 1

ITEM	SW	1 ·	2	3	4	5	66	7	8	
GAME TYPE	TABLE UPRIGHT	off on					•			٠.
MONITOR REVERSE	REVERSE NORMAL		on off							
TEST MODE	GAME TEST			OF F ON						
DEMO SOUND	YES NO				OFF ON					
COIN 1	1 COIN 1 PLAY 1 COIN 2 PLAY 2 COIN 1 PLAY					OFF ON OFF	OFF			
	2 COIN 3 PLAY					КО	ON			
COIN 2	1 COIN 1 PLAY 1 COIN 2 PLAY								OFF ON	OFF
	2 COIN 1 PLAY 2 COIN 3 PLAY								OFF ON	ON

DIP SW 2

1TEMS	SW	11	22	33	4	5	6	7	8
CAME LEVEL	EASY NORMAL	OFF ON	OFF						
	DIFFCULT VERY DIFFCULT	OF F ON	ON						
BOUNES POINT	50000 / 150000 70000 / 200000			OFF ON	OFF				
	50000 100000			OFF ON	ЮN				
PLAYER	3 5					OFF ON	OFF		
_	1 2					off on	ON		
DIP SW TEST								OFF ON	
CONTINEW	NO YES								OF F ON

3. ADJUSTMENT OF GAME P.C. BOARD F. SHARK

STZ DII	SW1	SOUND VR +
		•

8 LEVER 2 BUTTON

9.) WHEN YOU SWITCH DIP SWITCH PLEASE PUT OFF POWER SUPPLY

CONN	EC	TO	R
SOLDER SIDE			PARTS "SIDE
(TN D			GND
GND	1	2	GND
+5 V	C	3	+5V
+ 5 V		1	+5V
	E	_ 5	
+12V	F	_6	+12V -
POST	11.	7	POST
(COIN. COUNTER 2)	J	8	(COIN COUNTER 1)
	K	3	
SPEAKER (-)	ı,	10	SPEAKER (+)
	N		
VIDEO G	- N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	'n	14	VIDEO GND '
OCHVIOL OIL	ŝ	15	. 110112 9112
(COIN 2)	 	16	COLK I
ŽPSTĀŔT	ΙijΤ	1-13	IP START
2 P UP	ĬΨ	1 18	IP UP
ŽP DOWN	l w	1 1 9	IP DOWN
ZP LEFT	Ι Ϋ	20	IP LEFT
ŽP ŘÍGIT -	 Ÿ -	21	IP RIGHT
2P SHOT	Ż	22	IP SHOT
2P BOMBER	l a	23	IP BOMBER
Zr bomben	 	21	II BONDEN
		25	
<u> </u>	18	26	
		1 27	GND
GND	15	1 28	GND
GND	11	1 68	עמט

		1	2	3	4	5	6	7	- 8
	TABLE	OFF							
GAME STYLE	UP-RIGHT	ОИ]						
0.5	* NORMAL		OFF						
SCREEN	TURN OVER		ИО		1			1	
TECT MODE	* NORMAL GAME			OFF	_				
TEST MODE	TEST MODE			ОИ		1		1	
CALLED	* WITH				OFF	ļ ·		İ	
SOUND	WITHOUT				КО	<u> </u>			
	* 1 COIN 1 PLAY					OFF	OFE	1	
PLAY CHARGE	1 , 2 "					ОИ		1	
COIN' 1	2 , 1 ,				•	OFF	-l on		
1	2 , 3 ,	<u> </u>				ON	1 "	ļ	
DIAV CHACE	*1 , 1 ,							OFF	OFF
PLAY CHAGE	1 +1 2 "			***				ON	1
COIN 2	2 1 1							OFF.	ON.
:	2 3 .	ŀ						ON	""'

- 17		l i	2	1 3	T	4	5	T	6	7	8
	* B	OFF	1				1		*		
DIFFI CULTY	Λ	ИО	OFF	l							
DIFFI CULI	С	OFF	ON	1			•	•		· ·	
	D	ON	7 04		•				٠		
	* 50,000 / 1 50,000			OFF	T	OFF					• 🙀
BONUS SCORE NUMBER OF	70,000/200,000	1		ON	٦	UFF					
	50,000 ONLY]		OFF		ON	1				
	1 00,000 "	1		ON		04]	
Liudhen an	* 3						OFF]	OFF]	ŀ
UNLIBER OF	5]				•	ON	0	011	1	
PLAYER	1]					OFF		O N] .	
	2						ON	L	U N .		<u> </u>
DIP SW TEST	* NORMAL GAME]	•			-				OFF]
11 0. 1E21	TEST								ON		
FREE PLAY	* WITHOUT				•						OFF
PICE PER II	L WITH	1									O.H

시 :	Solder Side		Parts Side		DIP-SW 1		•								
John .	GND	1			DII-OW I	15	3	16 E	_	_		-			
	GND	2	GND GND	4 · · · · · · · · · · · · · · · · · · ·	TABLE TYPE		OFF	2	3	4	5	6	7	8	
	+5V	3		•	UPRIGHT TYPE	4	ON								
	+5V		+5V	•	SCREEN REVERSE	•	UN	011							
	T 3 V	4	+5V		SCREEN NORMAL		•	ON	_		•				
	+12V	5	1037		TEST MODE			OFF		•					
	POST	7	+12V	•	NOT TEST MODE				ON						
	1 031	8	POST		DEMO SOUND				OF			•			
		9			NO DEMO SOUND					OFI					
	SPEAKER(-)	10	CDCAPED()		PLAY CHARGE (COIN 1)					ON					
	or madar(-)	11	SPEAKER(+)	\tau_{i}	1coin 1play										
	VIDEO G	12	VIDEO R		1coin 2play						OFF				
	VIDEO SYNC	13			2coin 1play						ON	OFF			
	SERVICE SW	14	VIDEO B		2coin 3play						OFF				
	ODICTICE SH	15	VIDEO GND		PLAY CHARGE (COIN 2)						ON	ON			
	(COIN 2)	16	COIN 1:	•	1coin 1play										
	2P START	17	1P START		1coin 2play		·						OFF		
	2P UP	18	1P UP		2coin 1play								ON	OFF	
	2P DOWN	19	1P DOWN		2coin 3play								OFF	ON	
-	2P LEFT	20	1P DOWN 1P LEFT		DIP-SW 2								ON	ON	
	2P RIGHT	21	1P RIGHT				1	2	3		_		_	•	
	2P SHOT	22	1P SHOT		DIFFICULTY B		OFF	OFF	3	, 4	5	6	7	8	
	2P BOMBER	23	1P BOMBER		A		ON	OFF							
	21 DON IDEN	24	11 DOMDEK		Ċ		OF F	ON							
		25			Ď		ON	ON							
		26			BONUS POINT		ON	Ota							
	GND	27	GND		50000/150000				OFF	OFF					
	GND	28	GND		70000/200000		. •		ON	OFF					•
		20	GID		ONLY 50000		•		OFF	ON					
CONTROL	. PANEL				ONLY 100000	•			ON	ON ON					
			* THIS G	AMF .	NUMBER OF PLAYER 3				OI	ON	OFF	OFF			1
•				Y 2BUTTON	5						ON	OFF	•		(
	1	1	On A	* TOOLION	1							OFF			
•				•	2						OFF	ON			
	1				DIP SW TEST						ON	ON	OM		
					NORMAL GAME								ON	•	
) (CONTINUE PLAY								OFF	0)1	
I 47 7			7		NOT CONTINUE PLAY					•				ON	
	===+													OFF	
	TER		\	•			4								

SHOT BUTTON

BOMBER BUTTON

HI SHOZAME (FINGShark)

- Lying shar