


GOLDEN AXE (833-7001-~)

COIN/CREDIT OPTION SWITCH SETTING DIP SW #1

OPTION		1	2	3	4	5	6	7	8
1 COIN	1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN	2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN	3 CREDITS	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
1 COIN	4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN	5 CREDITS	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
1 COIN	6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS	1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS	1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS	1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS	3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS	1 CREDIT								
4 COINS	2 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
5 COINS	3 CREDITS								
6 COINS	4 CREDITS								
2 COINS	1 CREDIT	ON	ON	OFF	ON	ON	ON	OFF	ON
4 COINS	3 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS								
3 COINS	3 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS	4 CREDITS								
5 COINS	6 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS	3 CREDITS								
4 COINS	5 CREDITS								
1 COIN	1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COINS	3 CREDITS								
FREE PLAY		ON	ON	ON	ON	ON	ON	ON	ON
		COIN SW #1				COIN SW #2			

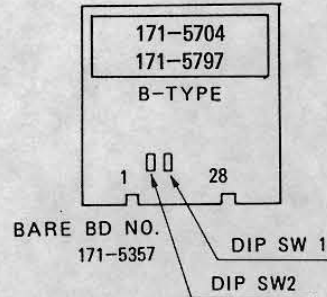

MONITOR
(ヨコ)
HORIZONTAL

OPTION SWITCH SETTING DIP SW #2

OPTION		1	2	3	4	5	6	7	8
1 CREDIT TO START		OFF							
2 CREDITS TO START		ON							
ADVERTISE SOUND	OFF		OFF						
	ON		ON						
GAME DIFFICULTY #	HARDEST			ON	OFF	ON	OFF		
	HARDER			ON	OFF	OFF	OFF		
	HARD			OFF	OFF	ON	OFF		
	NORMAL			OFF	OFF	OFF	OFF		
	EASY			OFF	OFF	OFF	ON		
	EASIER			OFF	ON	OFF	OFF		
EASIEST			OFF	ON	OFF	ON			
SPECIAL			ON	ON	ON	ON			
NOT USED								OFF	OFF

GAME DIFFICULTY


	NUMBER OF PLAYERS	PLAYER METER
HARDEST	1	2
HARDER	1	3
HARD	2	2
NORMAL	2	3
EASY	2	4
EASIER	3	3
EASIEST	3	4
SPECIAL	5	5

PIN ASSIGNMENT

COMPONENT SIDE SOLDER SIDE

GND	1	A	GND
GND	2	B	GND
+5V	3	C	+5V
+5V	4	D	+5V
+12V	5	E	+12V
COIN METER 1	6	F	COIN METER 2
(NOT USED)	7	H	(NOT USED)
1P MAGIC	8	J	2P MAGIC
1P ATTACK	9	K	2P ATTACK
1P JUMP	10	L	2P JUMP
(NOT USED)	11	M	(NOT USED)
1P DOWN	12	N	2P DOWN
1P UP	13	P	2P UP
1P RIGHT	14	R	2P RIGHT
1P LEFT	15	S	2P LEFT
(NOT USED)	16	T	(NOT USED)
(NOT USED)	17	U	(NOT USED)
(NOT USED)	18	V	(NOT USED)
(NOT USED)	19	W	(NOT USED)
COIN 1	20	X	1P START
COIN 2	21	Y	2P START
TEST	22	Z	(NOT USED)
SERVICE	23	a	(NOT USED)
SPEAKER (+)	24	b	SPEAKER (-)
RED	25	c	GREEN
BLUE	26	d	CMP. SYNC
GND	27	e	GND
GND	28	f	GND

56P P:3.96mm

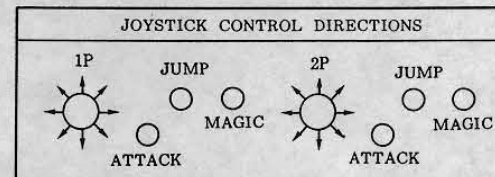

421-7442

