

INTER GIRL

INTER GIRL

DIP SW 1

		1	2	3	4	5	6	7	8
DIFFICULTY	EASY	ON	ON	ON					
	HARD	OFF	OFF	OFF					
DEMO SOUND	NO						ON		
	YES						OFF		

DIP SW 2

		1	2	3	4	5	6	7	8
COIN	1 COIN 1 CREDIT	OFF	OFF	OFF					
	1 COIN 2 CREDIT	ON	OFF	OFF					
	1 COIN 3 CREDIT	OFF	ON	OFF					
	1 COIN 4 CREDIT	ON	ON	OFF					
	2 COIN 1 CREDIT	OFF	OFF	ON					
	3 COIN 1 CREDIT	ON	OFF	ON					
	4 COIN 1 CREDIT	OFF	ON	ON					
	5 COIN 1 CREDIT	ON	ON	ON					
TEST MODE	TEST MODE								ON
	GAME MODE								OFF

PART SIDE		SOLDER SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
	5	
+12V	6	+12V
	7	
	8	
	9	
SPEAKER (+)	10	SPEAKER (-)
	11	
RED	12	GREEN
BLUE	13	SYNC
	14	
	15	
1P COIN	16	2P COIN
1P START	17	2P START
1P UP	18	2P UP
1P DOWN	19	2P DOWN
1P LEFT	20	2P LEFT
1P RIGHT	21	2P RIGHT
1P BUTTON 1 (CHOOSE)	22	2P BUTTON 1 (CHOOSE)
1P BUTTON 2 (ERASE)	23	2P BUTTON 2 (ERASE)
1P BUTTON 3 (HELP)	24	2P BUTTON 3 (HELP)
	25	
	26	
GND	27	GND
GND	28	GND