

HK 10

IRON HORSE

DIP SW No. 1 Settings

Coin 1 Switch Set

| SW | 4 | 3 | 2 | 1 | COIN | PLAY |
|----|-----|-----|-----|-----|-----------|------|
| • | OFF | OFF | OFF | OFF | 1 | 1 |
| | | | OFF | ON | 1 | 2 |
| | | | ON | OFF | 1 | 3 |
| | | | ON | ON | 1 | 4 |
| | OFF | ON | OFF | OFF | 1 | 5 |
| | | | OFF | ON | 1 | 6 |
| | | | ON | OFF | 1 | 7 |
| | | | ON | ON | 2 | 1 |
| | ON | OFF | OFF | OFF | 2 | 3 |
| | | | OFF | ON | 2 | 5 |
| | | | ON | OFF | 3 | 1 |
| | | | ON | ON | 3 | 2 |
| | ON | ON | OFF | OFF | 3 | 4 |
| | | | OFF | ON | 4 | 1 |
| | | | ON | OFF | 4 | 3 |
| | | | ON | ON | FREE PLAY | |

Coin 2 Switch Set

| SW | 8 | 7 | 6 | 5 | COIN | PLAY |
|----|-----|-----|-----|-----|------------|------|
| • | OFF | OFF | OFF | OFF | 1 | 1 |
| | | | OFF | ON | 1 | 2 |
| | | | ON | OFF | 1 | 3 |
| | | | ON | ON | 1 | 4 |
| | OFF | ON | OFF | OFF | 1 | 5 |
| | | | OFF | ON | 1 | 6 |
| | | | ON | OFF | 1 | 7 |
| | | | ON | ON | 2 | 1 |
| | ON | OFF | OFF | OFF | 2 | 3 |
| | | | OFF | ON | 2 | 5 |
| | | | ON | OFF | 3 | 1 |
| | | | ON | ON | 3 | 2 |
| | ON | ON | OFF | OFF | 3 | 4 |
| | | | OFF | ON | 4 | 1 |
| | | | ON | OFF | 4 | 3 |
| | | | ON | ON | INVALIDITY | |

DIP SWITCH NO. 2 SETTINGS

THE NUMBER OF PLAYER'S LIFE

| SW | 1 | 2 | NUMBER |
|----|-----|-----|--------|
| • | OFF | OFF | 2 |
| | ON | OFF | 3 |
| | OFF | ON | 5 |
| | ON | ON | 7 |

BONUS SET

| SW | 4 | 5 | FIRST | SECOND | THIRD |
|----|-----|-----|--------|---------|---------------|
| • | OFF | OFF | 30,000 | 70,000 | Every 70,000 |
| | ON | OFF | 40,000 | 80,000 | Every 80,000 |
| | OFF | ON | 50,000 | 100,000 | Every 100,000 |
| | ON | ON | 50,000 | 200,000 | Every 200,000 |

Difficulty of the Game

| SW | 6 | 7 | DIFFICULTY |
|----|-----|-----|----------------|
| • | OFF | OFF | EASY |
| | ON | OFF | NORMAL |
| | OFF | ON | DIFFICULT |
| | ON | ON | VERY DIFFICULT |

SOUND IN ATTRACT MODE

| SW | 8 | SOUND |
|----|-----|-------|
| • | OFF | OFF |
| | ON | ON |

Unlettered Side
(Solder Side) ←

→ Lettered Side
(Parts Side)

| Unlettered Side | Lettered Side | Number | Description |
|-----------------|---------------|--------|----------------|
| (EMPTY) | A | 1 | + 12V DC |
| SPEAKER OUT | B | 2 | SPEAKER OUT |
| 2P SHOOT 2 | C | 3 | 2P SHOOT 1 |
| • 2P LEFT | D | 4 | 2P RIGHT* |
| 1P START | E | 5 | 2P START |
| 1P SHOOT 1 | F | 6 | 2P UP* |
| 1P SHOOT 2 | H | 7 | SERVICE SW |
| 1P RIGHT | J | 8 | 1P LEFT |
| 1P UP | K | 9 | 2P DOWN* |
| COIN 1 | L | 10 | COIN 2 |
| 1P DOWN | M | 11 | COIN COUNTER 1 |
| (NOT USED) | N | 12 | COIN COUNTER 2 |
| VIDEO GREEN | P | 13 | VIDEO BLUE |
| VIDEO RED | R | 14 | VIDEO SYNC |
| (EMPTY) | S | 15 | (NOT USED) |
| GND | T | 16 | GND |
| GND | U | 17 | GND |
| + 5V DC | V | 18 | + 5VDC |