

KARATE TOURNAMENT

3. ハーネスの接続/HARNESS CONNECTION

エッジコネクター端子の配列/SIGNAL TO TERMINAL

半田面 SOLDER SIDE	端子番号 PIN #		部品面 PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
誤挿入防止キー MISTAKEN INPUT PREVENTION	H	7	誤挿入防止キー MISTAKEN INPUT PREVENTION
COIN COUNTER 2	J	8	COIN COUNTER 1
(NOT USED)	K	9	(NOT USED)
SPEAKER(-)	L	10	SPEAKER(+)
(NOT USED)	M	11	(NOT USED)
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GND
(NOT USED)	S	15	
COIN SWITCH 2	T	16	COIN SWITCH 1
START SWITCH 2	U	17	START SWITCH 1
2P CONTROL 1 UP	V	18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W	19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X	20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y	21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z	22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a	23	1P CONTROL 6 PUSH 2
(NOT USED)	b	24	(NOT USED)
(NOT USED)	c	25	(NOT USED)
(NOT USED)	d	26	(NOT USED)
GND	e	27	GND
GND	f	28	GND

※JAMMA コネクター表

4. デイップスイッチの説明/DIP SWITCH SETTING

DIP SWITCH 1									
NO	SETTINGS								REMARKS
1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	COIN/CREDIT COIN-MECH(RIGHT)
2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	
3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	
	1 COIN	1	1	1	1	1	2	3	
	1 PLAY	2	3	4	5	6	1	1	
4	OFF	ON	OFF	ON	OFF	ON	OFF	ON	COIN/CREDIT COIN-MECH(LEFT)
5	OFF	OFF	ON	ON	OFF	OFF	ON	ON	
6	OFF	OFF	OFF	OFF	ON	ON	ON	ON	
	1 COIN	1	1	1	1	1	2	3	
	1 PLAY	2	3	4	5	6	1	1	
7	OFF				ON				画面ローテーション SCREEN ROTATION
	通常 NORMAL				反転 REVERSE				
8	OFF								取扱禁止 DON'T CHANGE

DIP SWITCH 2									
NO	SETTINGS								REMARKS
1	OFF	ON	OFF	ON	持ち数 NUMBER OF LIVES				
2	OFF	OFF	ON	ON					
	3	4	1	2					
3	OFF	ON	OFF	ON	ゲーム難易度 GAME DIFFICULTY				
4	OFF	OFF	ON	ON					
	通常 NORMAL	易 EASY	やや難 HARD	難 HARDEST					
5	OFF				ON				タイマー TIMER
	通常 NORMAL				短め SHORT				
6	OFF								取扱禁止 DON'T CHANGE
7	OFF				ON				コンティニューの有無 CONTINUE MODE
	有 YES				無 NO				
8	OFF				ON				アイドル中サウンドの有無 ATTRACT MODE SOUND
	無 NO				有 YES				