MODEL : KICK OFF

DIP SWITCH 1

		(NO)	0 11	2	3	4	5	6	7	8
COIN 1	1 COI	N 1 PLAY	OFF	OFF	OFF					
	1 "	2 "	ON	OFF	OFF	94				
	1 "	3 "	OFF	ON	OFF					
	1 "	4 "	ON	ON	OFF					
	2 "	1 "	OFF	OFF	ON					
	3 "	1 "	ON	OFF	ON					
	4 "	1 "	OFF	ON	ON					
	FREE	PLAY	ON	ON	ON					
						/	/			
GAME STO	OP	NORMAL						OFF		
		STOP	2	-				ON		
SOUND OF	F DEMO	NO	-1	5					OFF	
		YES							ON	
ITRALON		JAPAN	1.4	,		-				OFF
VERSION		ENGLISH	Ť							ON

 $\mathcal{T}_{\frac{1}{2}} \frac{\frac{1}{2} \frac{1}{2} \frac{1$

.

.

DIP SWITCH 2

	(NO)	1	2	3	4	5	6	7	8
	3 MINT.	OFF	OFF						
*	4 "	ON	OFF						
PLAY DURATION	5 "	OFF	ON						
	6 "	ON	ON						
				/	/		•		
	NORMAL					OFF	OFF		
DIFFICULTY	DIFFICULTY 1					ON	OFF		
DITTICODIT	" · 2					OFF	ON		
	" 3					ON	ON		
LEVER. TRACK BA	LL TRACK BALL							OFF	
	8 WAY LEVER							ON	
	- SANDARD					OFF		OFF	
MONITOR	REVERSE					+			ON

SPEAKER-2 (+)	1	2	SPEAKER-2 (-)
HEADPHONER R (+)			

GND	1	A	GND
GND Z	2	В	G N D
HEAD PHONE L.R($-$)			
, +5V	3	С	+5V
+5V	4	D	+5V
	5	E	
+12V	6	F	+12V
PROTECTION KEY	7	H	PROTECTION KEY
	8	J	
SPEAKER-1 (+)	9	K	
· · · · · · · · · · · · · · · · · · ·	10	L	SPEAKER-1 (-)
HEAD PHONE L(+)	11	М	
VIDEO RED	12	N	VIDEO GREEN
VIDEO BULE	13	Р	VIDEO SYNC
VIDEO GND	14	R	
	15	S	
COIN SWITCH 1	16	Т	
COIN SWITCH 1	17	U	START SWITCH 2
1P UP	18	v	2P UP
1P DOWN	19	W	2P DOWN
1P LEFT	20	x	2P LEFT
1P RIGHT	21	Y	2P RIGHT
1P PUSH 1	22	Z	2P PUSH 1
1P PUSH 2	23	' a	2P PUSH 2
	24	b	
	25	с	
	26	d	
GND	27	e	GND
GND	28	f	GND

CONNECTOR DIAGRAM

.

MODEL : KICK OFF