: GND-	1	2	GND
GND -	3	4	GND
	5	6	-
COIN COUNTER A	7	8	
1 P LEFT	9	10:	2 P LEFT
1 P RIGHT	11	12	2 P RIGHT
1 P KICK	13	14	2 P KICK
2 P START	15	16	1 P START
	17	-18	COIN COUNTER B
COIN B	19	20	COMP SYNC
+ 12 V	21	22.	+ 12 V
+ 12 V	23	24	+ 12 V
SPEAKER (-)	25	26	SPEAKER (+)
1 P PUNCH	27	28	2 P PUNCH
RED	29	30	GREEN
BLUE	31	32	
2 P UP	33	34	2 P DOWN
_1_P_UP	35	-36	- 1 P- DOWN
	37	38-	COIN A
+ 5 V	39	40	+ 5 V
+ 5 V .	41	12	+ 5 Y
GND	43	44	GND

IREM CORPORATION

DIP SW #1

OP'	TION	1000		SW	1	2	3	4	5	6	7	8
- DI	FFICULT	Y	EASY DIFFI	CULT	OFF			*.				
	CREASE	OF	SLOW			OFF	1	+-1-1	S.A.).4 () +3 4	
	BRUI		2			1011	ON	OFF		4		3
NU	MBER OF		3				OFF	OFF				
FI	GHTERS		4				OFF	ON				
			5				ON	ON				440
		OR	1 COIN	1 PLAY		8			OFF	OFF	-	4 .
	* -	ECT	2 COINS	1 PLAY	1				ON	OFF		
	MODE 2	SELECTOR	FREE	PLAY	+				OFF	ON		- 3
	DIP SW		1 COIN	2 PLAYS	+				ON	ON	OFF	OFF
	2's 3	TOF	1 COIN	3 PLAYS	-						OFF	OFF
	ON	B B	1 COIN	5 PLAYS	1						The same of	
5		SELECTOR B	1 COIN	6 PLAYS	4						OFF	ON
भ			1 COIN	1 PLAY	1				OFF	OFF	OFF	OFF
Q	**		2 COINS	1 PLAY	1				ON	OFF	OFF	OFF
0	MODE 1		3 COINS	1 PLAY					OFF	ON	OFF	OFF
_Σ	DTD GW		4 COINS	1 PLAY					ON	ON	OFF	OFF
	DIP SW 2	2'5 3	5 COINS	1 PLAY					OFF	OFF	ON	OFF
Z	011		6 COINS	1 PLAY					ON	OFF	ON	OFF
0, I												
0			1 COIN	2 PLAYS	1				OFF	OFF	OFF	ON
	1		1 COIN	3 PLAYS	1				ON	OFF	OFF	ON
	2 - 7 1		1 COIN	4 PLAYS					OFF	ON	OFF	ON
	12/11/		1 COIN	5 PLAYS	•	-			ON	ON	OFF	ON
	W 4 5.	4 700	1 COIN	6 PLAYS			6	1	OFF	OFF	ON	ON
			FREE P	LAY					ON	ON	ON	ON

NOTE: * For a cabinet with a single coin selector or with two coin selectors - _ for the same value coin, Switch 3 of Dip Switch 2 must be OFF. -

DIP-SW-#2

OPTION		SW	1	2	3	4	5	6	7	8
FLIP PICTURE	NO		OFF							
	YES 1		ON		1			L		
CABINET -	TABLE	- +		OFF						
TYPE	UPRIGHT			ON		Jun 1-	Lin I			1
COIN MODE	MODE 1	1 to 1			OFF					
SETTING	MODE 2				ON	AL-		AL-		
FREEZE	NO I)A	WAYS	OFF	WAYS	e i	
PICTURE	YES ;			1		OFF	ON	OFF.		
NO DEATH	NO I	t 1							OFF	
MODE	YES		3][ON	1
TEST MODE	NO ;	XIII.							44	OFF
Thor thore	YES			1			The second			ON

NOTE: * Press 2-Player start button to freeze picture. Press 1-Player start button to let it move again.

^{**} For a cabinet with two coin selectors for two different value coins, Switch 3 of Dip Switch 2 must be ON.