



Lady Killer


取扱説明書
INSTRUCTIONS

1. 設置の概要/INSTALLATION


1-1 CRTモニター/CRT MONITOR
縦画面/VERTICAL SCREEN

1-2 コントロールパネルの配置/CONTROL PANEL

例1

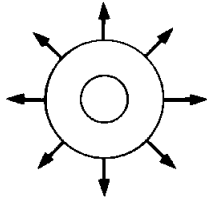

8-WAYS JOYSTICK

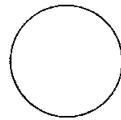

A BUTTON


* 1 JOYSTICK方向選択レバー/8-WAYS JOYSTICK

A BUTTON
 飛び込み/DIVE UNDERWATER
 飛び出し/RESURFACE

2. 遊び方/HOW TO PLAY

- * Aボタンで、飛び込み・飛び出しをくりかえし、シルエットパネルをめくりまわします。
- * シルエットパネルをめくり回転させ敵に当たると、敵を倒せます。
- * シルエットパネルを全てめくると、エリアクリアー！次のエリアに進みます。
- * 持ち数全て失うとGAME OVER!!

There are lovely beauties underwater.
 Flip the silhouette panel using "A" button.
 Destroy enemies by flipping the panel at the right timing.
 When all the panels are flipped over, you clear the stage.

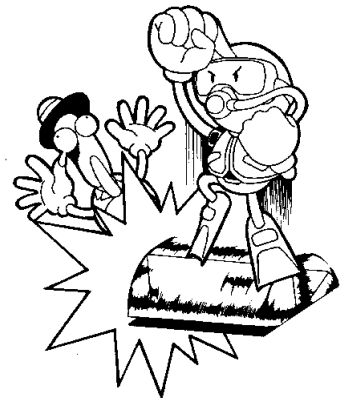

アイテム/POWER UP ITEMS

(アイテムは、地上のものと水中のものがあります。)

The power up items are both underwater and on the surface.



 
パネルドバー
 ライトアンドレフト
 flips panel
 left and right.

パネルを横ライン
 まとめてめくる



ボーナスコイン bonus coin

300pts.



パネルドバー
 アップアンドダウン
 flips panel
 up and down.

パネルを縦ライン
 まとめてめくる

 


スピードアップ speed-up

スピードが一定時間
 早くなる



1UP



パネルドバー
 クロス
 flis panels up,
 down, left
 and right.

パネルを縦横ライン
 まとめてめくる



潜水時間アップ extra oxygen
 for underwater.

潜水時間が一定時間
 早くなる

3. ハーネスの接続/HARNESS CONNECTION

エッジコネクター端子の配列/SIGNAL TO TERMINAL

半田面 SOLDER SIDE	端子番号 PIN #		部品面 PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
誤挿入防止キー MISTAKEN INPUT PREVENTION	H	7	誤挿入防止キー MISTAKEN INPUT PREVENTION
COIN COUNTER 2	J	8	COIN COUNTER 1
(NOT USED)	K	9	(NOT USED)
SPEAKER(-)	L	10	SPEAKER(+)
(NOT USED)	M	11	(NOT USED)
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GND
(NOT USED)	S	15	
COIN SWITCH 2	T	16	COIN SWITCH 1
START SWITCH 2	U	17	START SWITCH 1
2P CONTROL 1 UP	V	18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W	19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X	20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y	21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z	22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a	23	1P CONTROL 6 PUSH 2
(NOT USED)	b	24	(NOT USED)
(NOT USED)	c	25	(NOT USED)
(NOT USED)	d	26	(NOT USED)
GND	e	27	GND
GND	f	28	GND

※JAMMA コネクター表

4. デイップスイッチの説明/DIP SWITCH SETTING

DIP SWITCH 1									
NO	SETTINGS								REMARKS
1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	COIN/CREDIT COIN-MECH(RIGHT)
2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	
3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	
	1 COIN	1	1	1	1	1	2	3	
	1 PLAY	2	3	4	5	6	1	1	
4	OFF	ON	OFF	ON	OFF	ON	OFF	ON	COIN/CREDIT COIN-MECH(LEFT)
5	OFF	OFF	ON	ON	OFF	OFF	ON	ON	
6	OFF	OFF	OFF	OFF	ON	ON	ON	ON	
	1 COIN	1	1	1	1	1	2	3	
	1 PLAY	2	3	4	5	6	1	1	
7	OFF				ON				画面ローテーション SCREEN ROTATION
	通常 NORMAL				反転 REVERSE				
8	OFF								取扱禁止 DONT CHANGE

DIP SWITCH 2					
NO	SETTINGS				REMARKS
1	OFF	ON	OFF	ON	持ち数 NUMBER OF LIVES
2	OFF	OFF	ON	ON	
	3	4	1	2	
3	OFF	ON	OFF	ON	ゲーム難易度 GAME DIFFICULTY
4	OFF	OFF	ON	ON	
	通常 NORMAL	易 EASY	やや難 HARD	難 HARDEST	
5	OFF	NO	ON	YES	SEXY VERSION
6	OFF				取扱禁止 DONT CHANGE
7	OFF		ON		コンティニューの有無 CONTINUE MODE
	有 YES		無 NO		
8	OFF		ON		アイドル中サウンドの有無 ATTRACT MODE SOUND
	無 NO		有 YES		