
半田面	端子	番号	部品面
SOLDER SIDE		No.	PARTS SIDE
GND	A	1	GND
GND	В	2 3	GND
+ <u>5</u> V	<u>C</u>		+ <u>5</u> V
+ <u>5</u> V	<u>D</u>	4	+ <u>5 V</u>
_ 5 V	<u>Ē</u>	5	-5 V
+12V	F	6	+ 1 2 V
誤挿入防止キー	H	<u> </u>	誤挿入防止キー
COIN COUNTER 2	J K	8	COIN COUNTER 1 N. C.
N. C.	ı, T	9	N. C.
S P (-) N. C.	M	10 11	SP (+) N. C.
VIDEO GRÉEN	N N	$\frac{11}{12}$	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
S E R V I C E S W	R	14	VIDEO GND
N. C.		15	N. C.
COIN SW 2	S T	$\frac{16}{16}$	COIN SW 1
START SW 2	Ū	17	START SW 1
	V	18	1P CONTROL UP
2P CONTROL DOWN	W	19	1P CONTROL DOWN
2P CONTROL LEFT	X	20	1P CONTROL LEFT
2P CONTROL RIGHT	Y	21	1P CONTROL RIGHT
2P CONTROL PUSH 1	Z	22	1P CONTROL PUSH 1
	a	23	1P CONTROL PUSH 2
<u>N. C.</u>	b	24	<u>N</u> . <u>C</u> .
Ņ. C.	c	25	N. C.
N. C.	d	26	N. C.
GND	ę	27	GND
GND	<u>f</u>	28	GND

## How to play:

LEGIONNAIRE is a simultaneous two player game.

one 8-way joystick and 2 buttons for each player.

- 1. Use joystick to move.
- 2. Use attack button for punching & kicking.
- 3. Use jump button for a jump.
- 4. Press attack & jump button together for an emergency escape.
- 5. "Dash" by pressing jump button twice.
- 6. "Dash" + attack for special attack.
- 7. "Dash" + bump for throwing opponents.

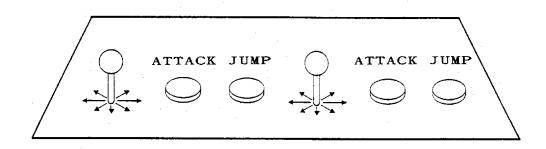

## LEGIONNAIRE DIP SWITCH SETTING 1

Ι	DIPSW-1			1	2	3	4	5	6	7	8
C	OIN MODE SELE	CT	COIN MODE 1	OFF							
COIN MODE 2		COIN MODE 2	ON								
	MODE 1		1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	0FF			
			2 COINS 1 CREDIT	1	ON	OFF	OFF	OFF			
			3 COINS 1 CREDIT		OFF	ON	OFF	0FF			
			4 COINS 1 CREDIT		ON	ON	OFF	OFF			
			5 COINS 1 CREDIT		OFF	OFF	ON	OFF			
			6 COINS 1 CREDIT		ON	OFF	ON	OFF			[
			1 COIN 2 CREDITS		OFF	ON	ON	OFF			
			1 COIN 3 CREDITS		ON	ON	ON	0FF			1
C O I N			1 COIN 4 CREDITS		OFF	OFF	OFF	ON			
			1 COIN 5 CREDITS		ON	OFF	OFF	ON			1
			1 COIN 6 CREDITS		OFF	ON	OFF	ON			
			2 COINS 3 CREDITS		ON	ON	0FF	ON			
			3 COINS 2 CREDITS		OFF	OFF	ON	ON			
			5 COINS 3 CREDITS		ON	OFF	ON	ON	•••••		1
			8 COINS 3 CREDITS		0FF	ON	ON	ON		1	
			FREE PLAY	OFF	ON	ON	ON	ON			
0			1 COIN 1 CREDIT	ON	OFF	OFF					
D E	MODE 2  COIN B	COIN A	2 COINS 1 CREDIT	1	ON	OFF			•		
			3 COINS 1 CREDIT		OFF	ON			************		
		5 COINS 1 CREDIT		ON	ON				1		
		1 COIN 2 CREDITS				OFF	0FF			1	
		1 COIN 3 CREDITS				ON	OFF			1	
		1 COIN 5 CREDITS	<b>1</b>			0FF	ON			1	
			1 COIN 6 CREDITS	ON			ON	ON			
	1 111 11 11 11 11 11 11 11 11 11 11 11										
NOT IN USE											
				1					•••••		
S	CREEN INVERT		NORMAL								OFF
33			INVERT	1	1	İ				1	ON

## DIP SWITCH SETTING 2

DIPSW-2		1	2	3	4	5	6	7	8
	2	OFF	OFF						_
No. of LIVES	1	ON	OFF						***************************************
	3	OFF	ON						
	4	ON	ON		**				
EXTEND PLAY	100000pts ONLY			OFF					-
	NO EXTENDED			ON .					
NOT IN USE									
DIFFICULTY	NORMAL				•	OFF	OFF		
	EASY					ON	OFF		••••
	HARD					OFF	ON	***************************************	
	VERY HARD					ON	ON		
CONTINUE PLAY	YES							OFF	
·	NO							ON	
DEMO SOUND	YES								OFF
	NO						•••••		ON

\* AT POWER ON, IF YOU TOUCH THE JOYSTICK, YOU WILL HAVE DIP-SW SETTING ON THE SCREEN.

