


CONNECTOR (4mmPITCH 44PINS)

Lower Boy

SOLDERED SIDE		PARTS MOUNTED SIDE	
#		#	
1	GROUND	2	GROUND
3	+ 5 V	4	+ 5 V
5	- 5 V	6	+12V
7	SPEAKER	8	SPEAKER
9	1 PLAYER-UP	10	2 PLAYER-UP
11	1 PLAYER-DOWN	12	2 PLAYER-DOWN
13	1 PLAYER-RIGHT	14	2 PLAYER-RIGHT
15	1 PLAYER-LEFT	16	2 PLAYER-LEFT
17	1 PLAYER EXCIT SW	18	2 PLAYER EXCIT SW
19		20	
21		22	
23		24	
25	COIN SW	26	
27		28	
29	1 PLAYER START	30	VIDEO-RED
31	2 PLAYER START	32	VIDEO-GREEN
33		34	VIDEO-BLUE
35		36	VIDEO-SYNC
37		38	GROUND
39		40	
41	+ 5 V	42	+ 5 V
43	GROUND	44	GROUND

PC BOARD EDGE CONNECTOR ASSIGNMENT

CONNECTOR MUST BE SET FROM THIS DIRECTION
↓

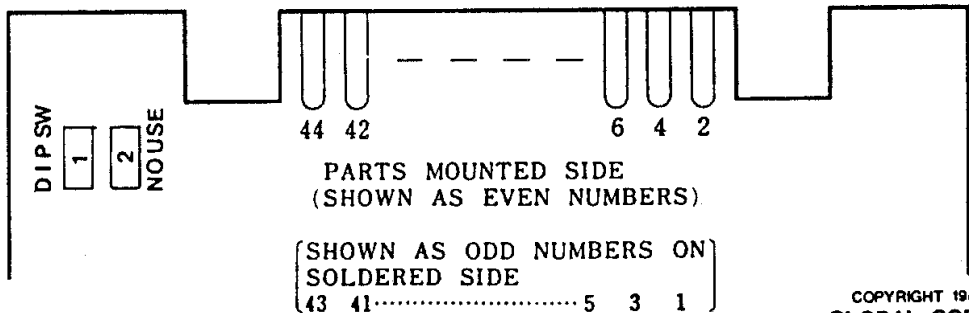

DIP SW 1

DIP SW NO		1	2	3	4	5	6	7	8
1 COIN	1 CREDIT	OFF	OFF	OFF	OFF				
	2	ON	OFF	OFF	OFF				
	3	OFF	ON	OFF	OFF				
	4	ON	ON	OFF	OFF				
2 COIN	1 CREDIT	OFF	OFF	ON	OFF				
	2	ON	OFF	ON	OFF				
	3	OFF	ON	ON	OFF				
	4	ON	ON	ON	OFF				
3 COIN	1 CREDIT	OFF	OFF	OFF	ON				
	2	ON	OFF	OFF	ON				
	3	OFF	ON	OFF	ON				
	4	ON	ON	OFF	ON				
4 COIN	1 CREDIT	OFF	OFF	ON	ON				
	2	ON	OFF	ON	ON				
	3	OFF	ON	ON	ON				
	4	ON	ON	ON	ON				
BONUS ADJUSTMENT SUPPLEMENT BOY 20,000							OFF		
30,000							ON		
SPARE BOYS ADJUSTMENT			3				OFF		
			5				ON		
BOX TYPE	COCKTAIL TABLE								OFF
	UP RIGHT								ON