


Lucky 89

PARTS SIDE A B SOLDER SIDE

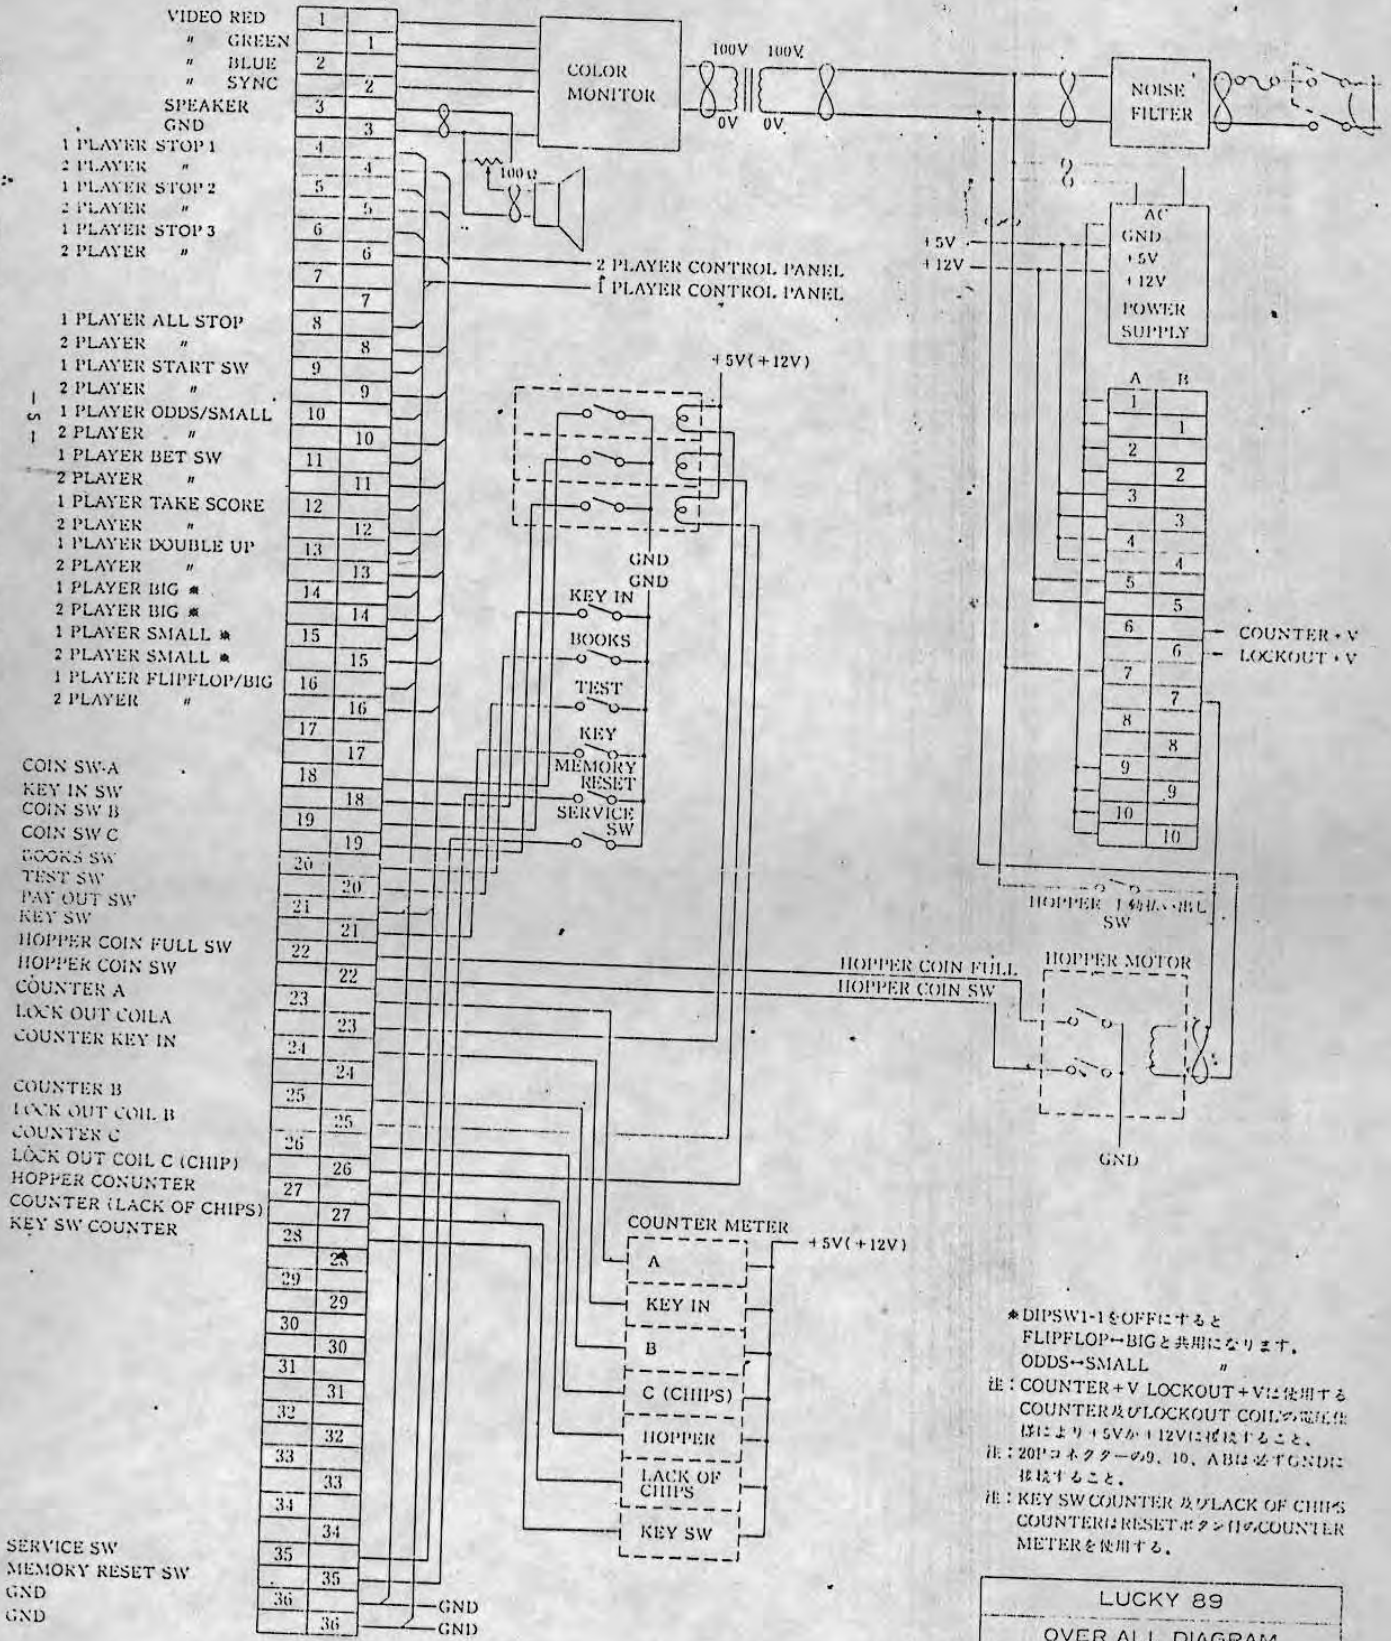

- VIDEO RED 1
  - " GREEN 1
  - " BLUE 2
  - " SYNC 2
  - SPEAKER 3
  - GND 3
  - 1 PLAYER STOP 1 4
  - 2 PLAYER " 4
  - 1 PLAYER STOP 2 5
  - 2 PLAYER " 5
  - 1 PLAYER STOP 3 6
  - 2 PLAYER " 6
  - 7 7
  - 8 8
  - 2 PLAYER ALL STOP 8
  - 2 PLAYER " 8
  - 1 PLAYER START SW 9
  - 2 PLAYER " 9
  - 1 PLAYER ODDS/SMALL 10
  - 2 PLAYER " 10
  - 1 PLAYER BET SW 11
  - 2 PLAYER " 11
  - 1 PLAYER TAKE SCORE 12
  - 2 PLAYER " 12
  - 1 PLAYER DOUBLE UP 13
  - 2 PLAYER " 13
  - 1 PLAYER BIG \* 14
  - 2 PLAYER BIG \* 14
  - 1 PLAYER SMALL \* 15
  - 2 PLAYER SMALL \* 15
  - 1 PLAYER FLIPFLOP/BIG 16
  - 2 PLAYER " 16
  - 17 17
  - 18 18
  - 19 19
  - 20 20
  - 21 21
  - 22 22
  - 23 23
  - 24 24
  - 25 25
  - 26 26
  - 27 27
  - 28 28
  - 29 29
  - 30 30
  - 31 31
  - 32 32
  - 33 33
  - 34 34
  - 35 35
  - 36 36
  - 36 GND
  - 36 GND
- COIN SW-A
  - KEY IN SW
  - COIN SW B
  - COIN SW C
  - BOOKS SW
  - TEST SW
  - PAY OUT SW
  - KEY SW
  - HOPPER COIN FULL SW
  - HOPPER COIN SW
  - COUNTER A
  - LOCK OUT COIL A
  - COUNTER KEY IN
  - COUNTER B
  - LOCK OUT COIL B
  - COUNTER C
  - LOCK OUT COIL C (CHIP)
  - HOPPER CONUNTER
  - COUNTER (LACK OF CHIPS)
  - KEY SW COUNTER
  - SERVICE SW
  - MEMORY RESET SW
  - GND
  - GND

\*DIPSW1-1をOFFにすると  
 FLIPFLOP-BIGと共用になります。  
 ODDS-SMALL " "  
 注: COUNTER+V LOCKOUT+Vは使用する  
 COUNTER及びLOCKOUT COILの電圧は  
 5Vにより+5Vか+12Vに接続すること。  
 注: 20Pコネクタの9, 10, ABはGNDに  
 接続すること。  
 注: KEY SW COUNTER 及びLACK OF CHIPS  
 COUNTERにRESETボタンはCOUNTER  
 METERを使用する。

LUCKY 89  
 OVER ALL DIAGRAM

※ ディップスイッチの設定を変更したときは、必ず電源を入れてメモリーリセットをして下さい。

DIP SW 1		1	2	3	4	5	6	7	8
ダブルアップ	共用する	OFF							
BIG/SMALL SWをFLOP/ODDSと	共用しない	ON							
ゲームスタイル	テーブル		OFF						
	アップライト		ON						
ホッパーコインSW	ACTIVE LOW			OFF					
	HIGH			ON					
コイン払い出し	PAY OUT SWに依る				OFF				
	AUTO				ON				
スタートに必要な最低BET数	1					OFF	OFF		
	5					ON	OFF		
	8					OFF	ON		
	16					ON	ON		
BET MAX	8							OFF	OFF
	16							ON	OFF
	32							OFF	ON
	40							ON	ON

DIP SW 2		1	2	3	4	5	6	7	8
確率	50%	OFF	OFF	OFF	OFF				
	54%	ON	OFF	OFF	OFF				
	58%	OFF	ON	OFF	OFF				
	62%	ON	ON	OFF	OFF				
	66%	OFF	OFF	ON	OFF				
	70%	ON	OFF	ON	OFF				
	74%	OFF	ON	ON	OFF				
	78%	ON	ON	ON	OFF				
	82%	OFF	OFF	OFF	ON				
	86%	ON	OFF	OFF	ON				
	90%	OFF	ON	OFF	ON				
	94%	ON	ON	OFF	ON				
	98%	OFF	OFF	ON	ON				
	102%	ON	OFF	ON	ON				
	106%	OFF	ON	ON	ON				
	110%	ON	ON	ON	ON				
LIMIT表示	有					OFF			
	無					ON			
LIMIT (打ち止め)	無し						OFF	OFF	OFF
	5,000						ON	OFF	OFF
	10,000						OFF	ON	OFF
	15,000						ON	ON	OFF
	20,000						OFF	OFF	ON
	30,000						ON	OFF	ON
	40,000						OFF	ON	ON
	50,000						ON	ON	ON

※ ディップスイッチの設定を変更したときは、必ず電源を入れてメモリーリセットをして下さい。

DIP SW 3		1	2	3	4	5	6	7	8
KEY IN 設定	1 COIN 5 CREDIT	O N	O N	O N					
	1 COIN 10 CREDIT	OFF	O N	O N					
	1 COIN 20 CREDIT	O N	OFF	O N					
	1 COIN 25 CREDIT	OFF	OFF	O N					
	1 COIN 40 CREDIT	O N	O N	OFF					
	1 COIN 50 CREDIT	OFF	O N	OFF					
	1 COIN 60 CREDIT	O N	OFF	OFF					
	1 COIN 100 CREDIT	OFF	OFF	OFF					
COIN A 設定	1 COIN 1 CREDIT				O N	O N	O N		
	1 COIN 2 CREDIT				OFF	O N	O N		
	1 COIN 4 CREDIT				O N	OFF	O N		
	1 COIN 5 CREDIT				OFF	OFF	O N		
	1 COIN 6 CREDIT				O N	O N	OFF		
	1 COIN 10 CREDIT				OFF	O N	OFF		
	1 COIN 25 CREDIT				O N	OFF	OFF		
	1 COIN 50 CREDIT				OFF	OFF	OFF		
ホッパーの容量	300							OFF	OFF
	500							O N	OFF
	1,000							OFF	O N
	無制限							O N	O N

DIP SW 4		1	2	3	4	5	6	7	8
COIN C 設定	10 COIN 1 CREDIT	O N	O N	O N	O N				
	5 COIN 1 CREDIT	OFF	O N	O N	O N				
	5 COIN 2 CREDIT	O N	OFF	O N	O N				
	4 COIN 1 CREDIT	OFF	OFF	O N	O N				
	3 COIN 1 CREDIT	O N	O N	OFF	O N				
	2 COIN 1 CREDIT	OFF	O N	OFF	O N				
	2 COIN 3 CREDIT	O N	OFF	OFF	O N				
	1 COIN 1 CREDIT	OFF	OFF	OFF	O N				
	1 COIN 2 CREDIT	O N	O N	O N	OFF				
	1 COIN 3 CREDIT	OFF	O N	O N	OFF				
	1 COIN 5 CREDIT	O N	OFF	O N	OFF				
	1 COIN 10 CREDIT	OFF	OFF	O N	OFF				
	1 COIN 20 CREDIT	O N	O N	OFF	OFF				
	1 COIN 25 CREDIT	OFF	O N	OFF	OFF				
	1 COIN 50 CREDIT	O N	OFF	OFF	OFF				
	1 COIN 70 CREDIT	OFF	OFF	OFF	OFF				
COIN B 設定	10 COIN 1 CREDIT					O N	O N	O N	
	9 COIN 1 CREDIT					OFF	O N	O N	
	6 COIN 1 CREDIT					O N	OFF	O N	
	5 COIN 1 CREDIT					OFF	OFF	O N	
	3 COIN 1 CREDIT					O N	O N	OFF	
	2 COIN 1 CREDIT					OFF	O N	OFF	
	1 COIN 1 CREDIT					O N	OFF	OFF	
	1 COIN 50 CREDIT					OFF	OFF	OFF	
COIN A を両替としない する								OFF	O N

※ ディップスイッチの設定を変更したときは、必ず電源を入れてメモリーリセットをして下さい。

DIP SW 5		1	2	3	4	5	6	7	8
TEST SW	見せかけの% 94%を表示	OFF							
%表示	確率設定による%を表示	ON							
ダブルアップの種類 〈注1〉	1		OFF	OFF					
	2		ON	OFF					
	3		OFF	ON					
	無		ON	ON					
ダブルアップ6回で打ち止め	有				OFF				
	無				ON				
JACKPOTが出ると 〈注2〉	GAME STOP 継続してGAME可能					OFF			
FEVER終了で 〈注3〉	GAME STOP 継続してGAME可能					ON			
ダブルアップゲームの難易度 〈注4〉	難 1							OFF	OFF
	2							ON	OFF
	3							OFF	ON
	易 4							ON	ON

注1：ダブルアップ1は普通の型式。

ダブルアップ2は次にめくる札とLAST6 DATAの間にスベードの7を除く札が置かれています。この札はダブルアップSWを押すごとに変わります。次のめくり札の数を予想して止めて下さい。BIGかSMALLを押して勝った時、めくり札と予想した札が同じ数だと得点は4倍になります。

ダブルアップ3は3列の数字が回転しています。ダブルアップで勝つとこの数字が停止します。停止した数字に“7”が2個あると勝点が2倍でなく5倍になります。“7”が3個あると20倍になります。

注2：ALL☆になるとJACKPOT点と得点が自動的にTAKEされます。その時点で打ち止めにするかしないかの切替えです。打ち止めの場合はCREDITをOUTしないと次のゲームはできません。打ち止めにしなくてもCREDITがLIMITを超した場合は打ち止めになります。(確率%安定上なるべくGAME STOPで使用して下さい。DIP SW 5-5をOFFにして下さい)

注3：FEVER GAMEが終了した時点で打ち止めにするかしないかの切替えです。打ち止めになるとCREDITをOUTしないと次のゲームはできません。

注4：ダブルアップの難易度を変更した時に限りMEMORY RESETは必要ありませんが、設定変更後必ず電源をOFF、ONして下さい。

※ FEVER中はFEVERになった時のBET数以上のBETはできません。

※ ダブルアップの時7はイーブンに固定です。

※ CREDIT INは5000点がLIMITです。

※ KEY OUTは二段階になっています。1回目のOUTで100点以上がKEY OUTされ、2回目のOUTで100点以下がOUTされます。