

MAGICAL CRYSTALS

OPERATION MANUAL



Specifications

♦Name of Game

MAGICAL CRYSTALS

♦ Control Panel

One-sided 2 P

Joystick

2 (8 directions: one each 1P and 2P)

Button

4 (push botton: two each 1P and 2P)

♦Edge Connector

JAMMA Standards

♦Monitor


Horizontai Monitor

Operation Precaulons

- Unlike Conventional games, the sound is one of the important factors for attracting customers.

Set the sound volume a little higher (so that players hear the game clearly)

- ♦ Be sure to disconnect the power from the enclosure before installing or removing the PC Board.
- ♦ Use extreme care not to drop any metal objects such as a nail or clip onto the PC Board. This can result in damage to the Board.
- ♦When transporting the PC Board, wrap it in aircap or sponge and secure it in a corrugated carton box.

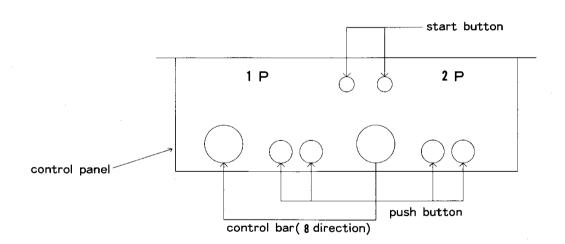

Caution

Commercial use of this machine is restricted outside Japan.

Export, sale or operation of this machine whithout our approval is strictly prohibited by law.

● Table of PC Board Connectors

(1) Required Power Supply .

(.,		
+ 5 V ^{+0.5V} _{-0.1V}	(MIN4. 0A)	
+12V±0.5V	(MIN1. 0A)	

(2) Standard of Edga Connector

JAMMA Standards

(3) Edge Connector Terminal Layout

(3) Edge Connector Terminal Layout	:		· · · · · · · · · · · · · · · · · · ·		
Soldered Side	Terr	ninals	Parts Side		
G N D	A	1	G N D		
G N D	В.	2	G N D		
+ 5 V	С	3	+ 5 V		
+ 5 V	D	4	+ 5 V		
	Е	5	·		
+ 12 V	F	6	+ 12 V .		
Wrong Insertion Protection Key	Н	7	Wrong Insertion Protection Key		
Coin Counter 2	J	8	Coin Counter 1		
Coin Lockout 2	К	9	Coin Lockout 1		
Speaker (-)	L	10	Speaker (+)		
Audio (GND)	M	11	Audio (+)		
Video GREEN	N	12	Video RED		
Video SYNC	P	13	Video BLUE		
Service Switch	R	14	Video GND		
Tilt Switch	s	15	Tilt Switch		
Coin Switch 2	Т	16	Coin Switch 1		
Start Switch 2	U	17	Start Switch 1		
2P Control1 UP	v	18	1P Control1 UP		
2P Control2 DOWN	W	19	1P Control2 DOWN		
2P Control3 LEFT	X	20	1P Control3 LEFT		
2P Control4 RIGHT	Y	21	1P Control4 RIGHT		
2P Control5 PUSH A	Z	22	1P Control5 PUSH A		
2P Control6 PUSH B	а	23	1P Control6 PUSH B		
	b	24			
	С	25			
	d	26			
G N D	e .	27	GND		
G N D	f	28	GND		

 $[\]divideontimes$ For optimum use of this machins, supply desijnated voltage where applicable.

●OPERATION SETUP

With DIP SW2 in the ON position, turn on the power. You are now in the ADJUST mode. In this ADJUST mode, you can set the number of coins and level of play.

Operation

Use the joystick and both buttons at the same time on the 1p side. Use the joystick to select the item you want to change, The buttons allow you to change the values. You can change the following items:

The number of coins and plays(credits) for coin slot A (from 1-9). The number of coins and plays(credits) for coin slot B (from 1-9). The number of characters for each game (from 1-9). Level of difficulty throughout the game [EASY, STANDARD or HARD]. Attract sounds (ON or OFF).

if you select "ALL RESET" and press the buttons, the data will be reset to factory settings.

When you have completed all changes, use the joystick to select "EXIT" and press the buttons to store the changed data into memory and to exit from the ADJUST mode.

When you exit the ADJUST mode, you then return to the SYSTEM MENU.

OSYSTEM MENU

In the SYSTEM MENU, you can select one of the following:

INPUT TEST (Switch Input Test)
MONITOR CHECK (Screen check)
SOUND TEST
OPERATION SETUP(Adjust Mode)

Move the cursor with the joystick and select one of the above. When you are finished with your adjustments and tests, turn the machine off and set the Adjust/Test switch to off.


DIP Switch Setting

DIP switches are enabled when at ON position.

1: ■□ : Revrse display
2: ■□ : Adjust/Test Mode
3: ■□ : Always OFF
4: ■□ : Always OFF

Be sure to turn off the power when changing the position of DIP switches. If the DIP switches are 8-bank type, turn the switches 5 through 8 to the off position.

Instruction of the PC Board

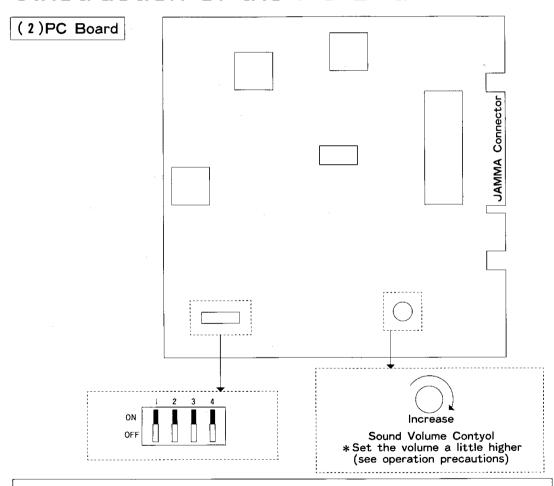

Should the unit be modified without prior approval, we are not liable for any damage incurred.

ı				

©1991 KANEKO CO..LTD.



KANEKO CO.,LTD.

8-23-21, Shakujiidai, Nerima-ku Tokyo 177, Japan. Tel.(03)3921-9661