

2. DIP SWITCHES

[SW 1]

		SW 1							
		1	2	3	4	5	6	7	8
GAL MODE	YES	OFF							
	NO	ON							
MAR-JONGG TILES	YES		OFF						
	NO		ON						
DIFFICULTY	NORMAL			OFF	OFF				
	EASY			ON	OFF				
	HARD			OFF	ON				
	VERY HARD			ON	ON				
TIMER SPEED	NORMAL					OFF	OFF		
	SLOW					ON	OFF		
	FAST					OFF	ON		
	VERY FAST					ON	ON		
SOUND IN ATTRACT MODE	NO							OFF	
	YES							ON	
DIAGNOSTIC TEST	NO								OFF
	YES								ON

[SW 2]

		SW 2									
		1	2	3	4	5	6	7	8		
FLIP PICTURE	NO	OFF									
	YES	ON									
LANGUAGE	ENGLISH		OFF	OFF							
	GERMAN		ON	OFF							
	CHINESE		OFF	ON							
COIN MODE	MODE 1	1 COIN 1 GAME				OFF	OFF	OFF	OFF	OFF	
		2 COINS 1 GAME				OFF	ON	OFF	OFF	OFF	
		3 COINS 1 GAME				OFF	OFF	ON	OFF	OFF	
		4 COINS 1 GAME				OFF	ON	ON	OFF	OFF	
		5 COINS 1 GAME				OFF	OFF	OFF	ON	OFF	
		6 COINS 1 GAME				OFF	ON	OFF	ON	OFF	
		1 COIN 2 GAMES				OFF	OFF	ON	ON	OFF	
		1 COIN 3 GAMES				OFF	ON	ON	ON	OFF	
		1 COIN 4 GAMES				OFF	OFF	OFF	OFF	ON	
		1 COIN 5 GAMES				OFF	ON	OFF	OFF	ON	
		1 COIN 6 GAMES				OFF	OFF	ON	OFF	ON	
		2 COINS 3 GAMES				OFF	ON	ON	OFF	ON	
		3 COINS 2 GAMES				OFF	OFF	OFF	ON	ON	
		4 COINS 3 GAMES				OFF	ON	OFF	ON	ON	
	CONTINUE COIN				OFF	OFF	ON	ON	ON		
	FREE GAME				OFF	ON	ON	ON	ON		
	MODE 2	* A	1 COIN 1 GAME				ON	OFF	OFF		
			2 COINS 1 GAME				ON	ON	OFF		
			3 COINS 1 GAME				ON	OFF	ON		
			5 COINS 1 GAME				ON	ON	ON		
** B		1 COIN 2 GAMES				ON			OFF	OFF	
		1 COIN 3 GAMES				ON			ON	OFF	
		1 COIN 5 GAMES				ON			OFF	ON	
		1 COIN 6 GAMES				ON			ON	ON	

* COIN CHUTE A
 ** COIN CHUTE B

- * Please turn off the power switch before changing the DIP SW setting, or the change may not take effect.
- * Continue coin is the mode which starts the game with 2 coins, but continues it with only 1 coin. When this mode is set, no other coin mode can be set.

※ The below type of cabinet can only be used.

