


ADJUSTMENTS OF PC BOARD (METAL BLACK G25 00673A)

G-CONNECTOR

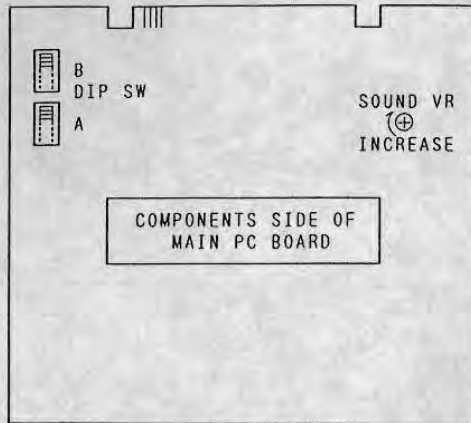

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V
POST	H	7	POST
COIN METER 2	J	8	COIN METER 1
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SPEAKER (-)	L	10	SPEAKER (+)
SOUND GND	M	11	SOUND
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
COIN 2	T	16	COIN 1
2P SELECT	U	17	1P SELECT
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P A-BUTTON	Z	22	1P A-BUTTON
2P B-BUTTON	a	23	1P B-BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

☆ CONTROL OF THIS GAME USES ONE 8-WAY JOYSTICK AND TWO BUTTONS.

NOTE) BEFORE CHANGING THE SETTING OF DIP SWITCH, TURN THE POWER OFF.

◇ SETTING OF DIP SWITCH A

(*):FACTORY SETTING

SETTINGS		POSITIONS							
		1	2	3	4	5	6	7	8
SCREEN ROTATION	* NORMAL	OFF	OFF						
	REVERSE		ON						
TEST MODE	* NORMAL GAME				OFF				
	TEST MODE				ON				
ATTRACT SOUND	* WITH				OFF				
	WITHOUT				ON				
FOR NORTH AMERICA		EXCEPT NORTH AMERICA							
PLAY PRICING	* 1 COIN 1 PLAY	PLAY PRICING COIN A	* 1 COIN 1 PLAY		OFF	OFF			
	2 COINS 1 PLAY		2 COINS 1 PLAY		ON	ON			
	3 COINS 1 PLAY		3 COINS 1 PLAY		OFF	ON			
	4 COINS 1 PLAY		4 COINS 1 PLAY		ON	ON			
BUY-IN PLAY PRICING	* <input checked="" type="checkbox"/>	PLAY PRICING COIN B	* 1 COIN 2 PLAYS				OFF	OFF	
	1 COIN CONTINUE		1 COIN 3 PLAYS				ON	ON	
	2 COINS CONTINUE		1 COIN 4 PLAYS				OFF	ON	
	3 COINS CONTINUE		1 COIN 6 PLAYS				ON	ON	

☐: THIS SETTING SHOULD BE THE SAME SETTING AS THAT OF "PLAY PRICING".

◇ SETTING OF DIP SWITCH B

SETTINGS		POSITIONS							
		1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY(A) → DIFFICULT(D)	* RANK B	OFF	OFF						
	RANK A	ON							
	RANK C	OFF	ON						
	RANK D	ON							
BONUS EXTEND (1 UP) K=1.000PTS.	* 70K/220K/370K/520K/670K/820K----	OFF		OFF					
	50K/170K/290K/410K/530K/650K----	ON							
	80K/240K/400K/560K/720K/880K----	OFF		ON					
	100K/300K/500K/700K/900K/1100K---	ON							
NUMBER OF PLAYER(S)	* 3					OFF	OFF		
	4					ON	ON		
	2					OFF	ON		
	1					ON	ON		
CONTINUE MODE	* WITH							OFF	
	WITHOUT							ON	
GAME TYPE	* DOUBLE CONTROL PANEL								OFF
	SINGLE CONTROL PANEL	(ONLY 1P)							ON

OVERSEA VERSION

< SETTING OF DIP SWITCH A >

METAL BLACK

		1	2	3	4	5	6	7	8
PLAY STYLE	<u>TABLE</u> UPRIGHT	OFF ON							
SCREEN ROTATION	NOMAL <u>REVERSE</u>		OFF ON						
TEST MODE	<u>NORMAL GAME</u> TEST MODE			OFF ON					
ATTRACT SOUND	<u>WITH</u> WITHOUT				OFF ON				
PLAY PRICING COIN A	<u>1COIN 1PLAY</u> 2COIN 1PLAY 3COIN 1PLAY 4COIN 1PLAY					OFF ON	OFF ON		
PLAY PRICING COIN B	<u>1COIN 2PLAY</u> 1COIN 3PLAY 1COIN 4PLAY 1COIN 6PLAY							OFF ON	OFF ON

< SETTING OF DIP SWITCH B >

		1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY(A) DIFFICULT(D)	<u>RANK B</u> RANK A <u>RANK C</u> RANK D	OFF ON	OFF ON						
BONUS POINTS (1 UP)	<u>70000, 150000</u> EVERY 50000, 120000 <u>80000, 160000</u> 100000, 200000			OFF ON	OFF ON				
NUMBER OF PLAYER(S)	<u>3</u> 4 2 1					OFF ON	OFF ON		
CONTINUE	<u>WITH</u> WITHOUT							OFF ON	
GAME TYPE	<u>5</u> B								OFF ON




OVERSEA VERSION

2P使用不可


L

METAL METAL BLACK

Black™

MOVING OF PLAYER'S MACHINE	SHOT	DISCHARGE THE ENERGY
		
	A-BUTTON	B-BUTTON

- INCREASE THE POWER OF BEAM BY COLLECTING NEWALONES!
- BY PRESSING THE B-BUTTON, DISCHARGE THE BEAM ENERGY!!

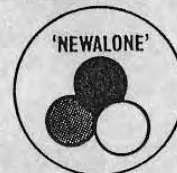

WHEN COLLECTING NEWALONES UP TO THE MAXIMUM LEVEL;

HOW TO USE "LV-MAX"

DIFFUSING BEAM

NORMALLY PRESS THE B-BUTTON AND RELEASE IT;
↓
TO GIVE DAMAGE ENEMIES ON THE SCREEN.

CONCENTRATED FIRE

KEEP THE B-BUTTON PRESSED;
↓
TO ATTACK ONE POINT IN FRONT DIRECTION.

HOW TO PLAY IN A BONUS STAGE:

AFTER MOVING THE CURSOR TO AN ENEMY,
PRESS THE A-BUTTON TO FIRE MISSILES!
4 MISSILES AUTOMATICALLY PURSUE AND
DESTROY THE ENEMY.



TAITO
TAITO CORPORATION

G35 00443A