


# MISS *Bingo* CONTROL OF GAME PC BOARD

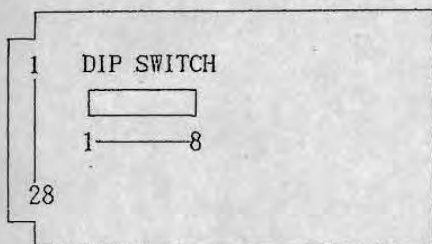

### CONNECTOR (JAMMA)

PARTS SIDE			SOLDER SIDE
GND	A	1	GND
GND	B	2	GND
+ 5V	C	3	+ 5V
+ 5V	D	4	+ 5V
	E	5	
+ 12V	F	6	+ 12V
	H	7	
	J	8	
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
	R	14	
	S	15	
COIN B	T	16	COIN A
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOT 1	Z	22	1P SHOT 1
2P SHOT 2	A	23	1P SHOT 2
	B	24	
	C	25	
	D	26	
GND	E	27	GND
GND	F	28	GND

### DIP SWITCH

		1	2	3	4	5	6	7	8	
PLAY CHARGE	1 COIN 1 CREDIT	OFF	OFF							
	1 COIN 2 CREDIT	ON	OFF							
	2 COIN 1 CREDIT	OFF	ON							
	3 COIN 1 CREDIT	ON	ON							
CHANCE COUNT	CHANCE 1			OFF	OFF					
	CHANCE 2			ON	OFF					
	CHANCE 3			OFF	ON					
	CHANCE 4			ON	ON					
PLAY LEVEL	NORMAL					OFF				
	EASY					ON				
PLAY SPEED	NORMAL							OFF		
	HIGH							ON		
LEFT BLOCK	NORMAL							OFF		
	LOW							ON		
BOARD SETUP	NO								OFF	
	YES								ON	