

Miss Bobble II

Dip Switch A

- ① on 2 coins 1 play, off 1 coin 1 play
- ② screen reverse
- ③ leva button test screen
- ④ sound music on, off
- ⑤ on easy, off difficult
- ⑥ on easier, off more difficult
- ⑦ not use
- ⑧ not use

Dip Switch B

- ① 1 on 20,000 points one-up
- ② 2 on 40,000 points one-up
- ③ 1,2,3,4 off 30,000 points one-up
- ④ 1, 4 off 50,000 points one-up
- ⑤ game's play on 1, off 3
- ⑥ game's play 4
- ⑦ not use
- ⑧ not use

* Drawing of Board

