


# 5 OPERATER ADJUSTMENTS

• V.R. (A)

V.R. for the adjustment of sound volume. It will become smaller in turning it to the arrow-mark.

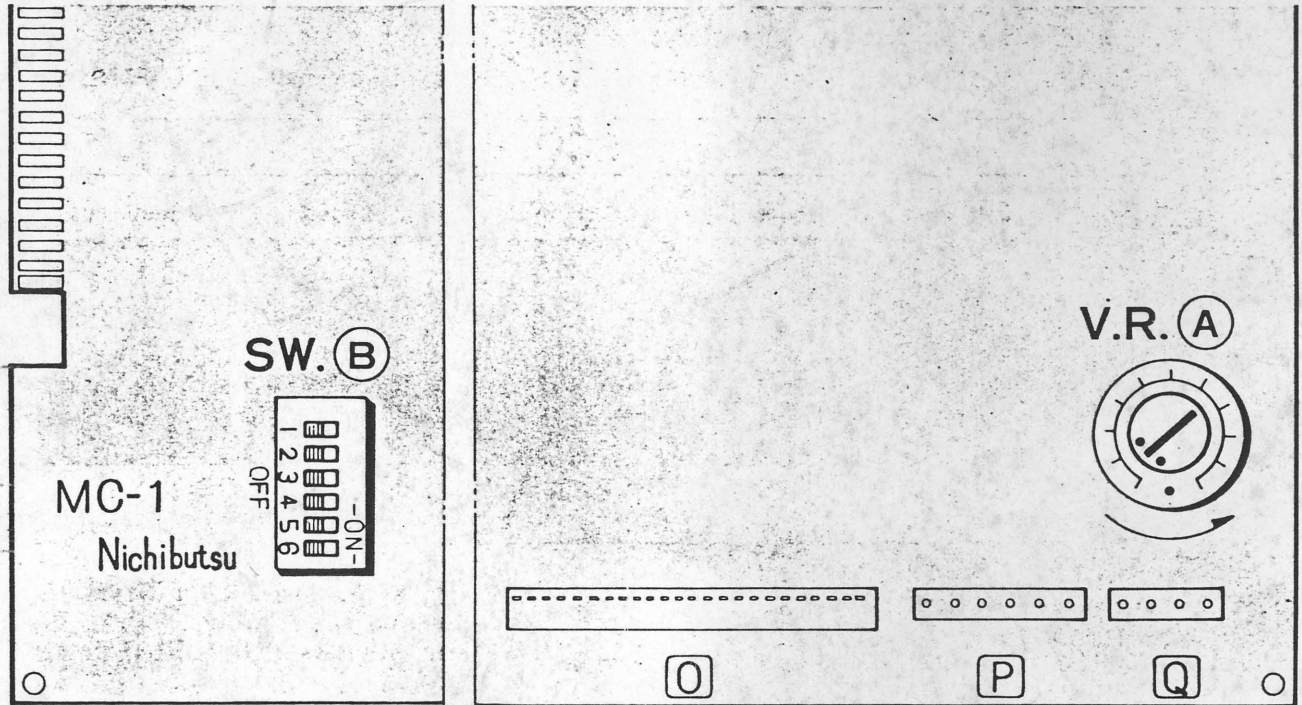

• SW (B)

DESCRIPTION	SW POSITION					
	1	2	3	4	5	6
Extended ROCKET score 30000 pts. 50000 pts.	<u>OFF</u>					
Instructions Japanese English		OFF				
Coinage (Selector 1) 1 Coin/1 play 2 Coin/1 play 3 Coin/1 play 4 Coin/1 play			<u>OFF</u>	OFF		
(Selector 2) 1 Coin/1 play 1 Coin/2 plays 1 Coin/3 plays FREE PLAY					<u>OFF</u>	OFF
					ON	OFF
					OFF	ON
					ON	ON

NOTE:

- Switch adjustment have to be done after disconnect the power supply.
- Switches are set as underlined position when the machine is shipped.


• SERVICE BUTTON (Ref. P1)

When you repair or adjust the set, it is for use in the case of increasing credit numbers without raising up the counter.

# MOON CRESTA

## 6 MONITOR ADJUSTMENTS

The monitor is adjusted in best condition when shipping. If there is need to adjust it, do it as follows.

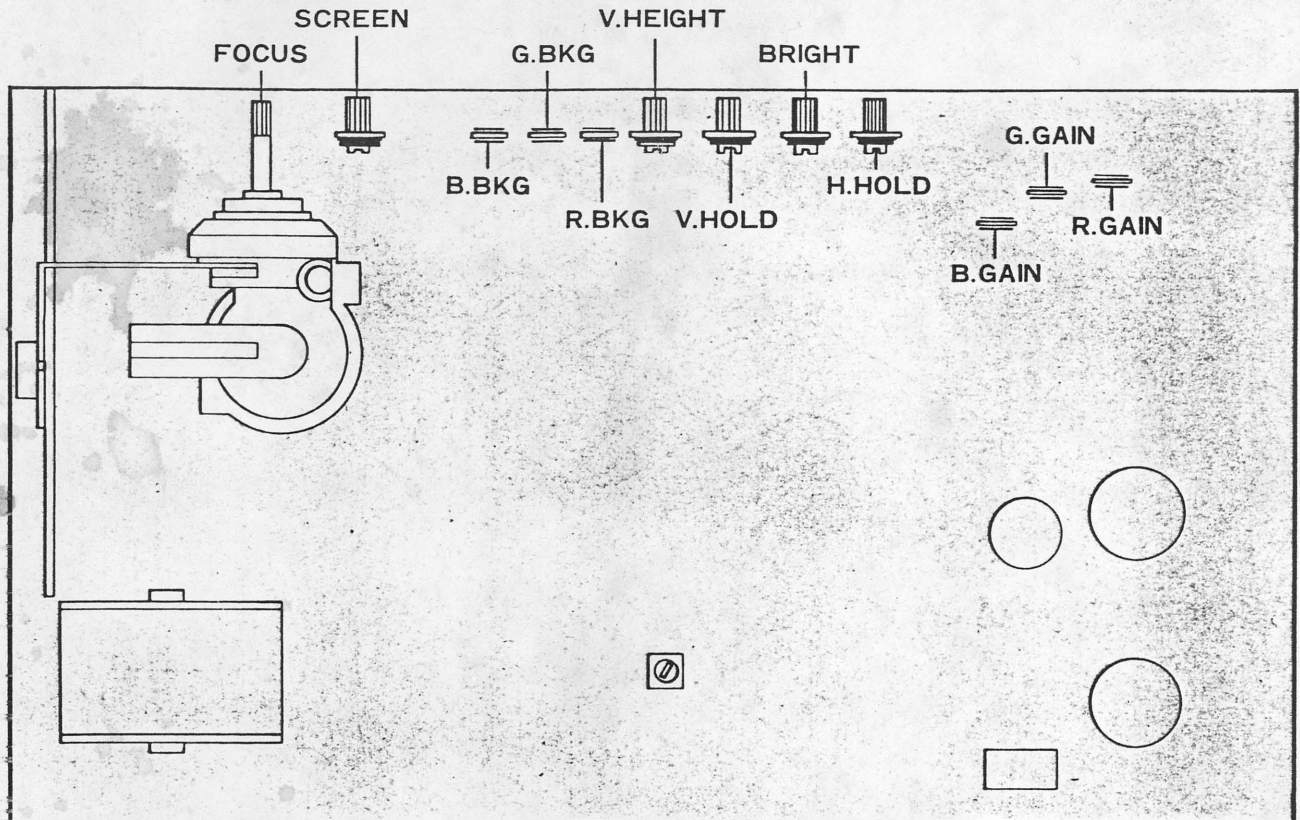

- **H. HOLD:**  
Adjustment for keeping the picture horizontally.
- **V. HEIGHT:**  
Adjustment for vertical height.
- **V. HOLD:**  
Adjustment for keeping the picture vertically.
- **BLUE BKG, RED BKG, GREEN BKG:**  
Adjustment for white balance in bright picture.
- **BLUE, GREEN, RED, GAIN:**  
Adjustment for white balance in dark picture.
- **FOCUS:**  
Adjustment for focus on picture.