

MOON PATROL (S5) WIRING DIAGRAM

Partside

+ Zippi Race  
Solderside


GND	1	2	GND
GND	3	4	GND
	5	5	
COIN COUNTER A	7	8	COIN COUNTER B
1P LEFT	9	10	2P LEFT
1P RIGHT	11	12	2P RIGHT
1P FIRE	13	14	2P FIRE
2P START	15	16	1P START
	17	18	
COIN B	19	20	COMP SYNC
+12V	21	22	+12V
+12V	23	24	+12V
SPEAKER (-)	25	26	SPEAKER (+)
1P JUMP	27	28	2P JUMP
RED	29	30	GREEN
BLUE	31	32	
	33	34	
	35	36	
SERVICE SW	37	38	COIN A
+5V	39	40	+5V
+5V	41	42	+5V
GND	43	44	GND

5. 紙板製法

別紙

## MOON PATROL

### P.C. BOARD INSTRUCTION

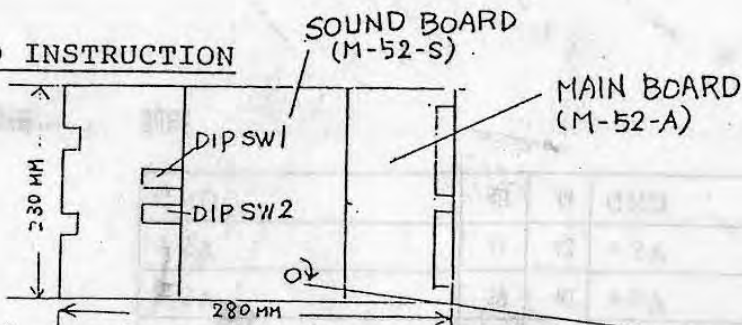

\* Volume of sound can be adjusted by using SOUND VOLUME

### DIP SWITCH ADJUSTMENT

#### DIP SW 1

		SW	1	2	3	4	5	6	7	8	
No of		5	OFF	OFF							
MOON PARTOL		3	ON	OFF							
CAR		2	OFF	ON							
		1	ON	ON							
EXTRA	1mil, 3mil, 5mil.				OFF	OFF					
POINT	2 " , 4 " , 6 " ,				ON	OFF					
	1 "				OFF	ON					
	no extra point				ON	ON					
COIN MODE	MODE 2	1 coin 1 play					OFF	OFF			
		2 " 1 "					ON	OFF			
	DIP SW2A	3 " 1 "					OFF	ON			
	No.3	Free Play					ON	ON			
	ON	1 coin 2 play							OFF	OFF	
		1 " 3 "							ON	OFF	
		1 " 5 "							OFF	ON	
		1 " 6 "							ON	ON	
		1 coin 1 play						OFF	OFF	OFF	OFF
	MODE 1	2 " 1 "						ON	OFF	OFF	OFF
		3 " 1 "						OFF	ON	OFF	OFF
	DIP SW2	4 " 1 "						ON	ON	OFF	OFF
No.3	5 " 1 "						OFF	OFF	ON	OFF	
OFF	6 " 1 "						ON	OFF	ON	OFF	
	1 " 2 "						OFF	OFF	OFF	ON	
	1 " 3 "						ON	OFF	OFF	ON	
	1 " 4 "						OFF	ON	OFF	ON	
	1 " 5 "						ON	ON	OFF	ON	
	1 " 6 "						OFF	OFF	ON	ON	
	Free Play						ON	ON	ON	ON	

#### DIP SW 2

		SW	1	2	3	4	5	6	7	8
Diversion	1 player		OFF							
of Screen	2 "		ON							
Game	TABLE TYPE		OFF							
Feature	UPRIGHT TYPE		ON			ALWAYS	OFF			
Coin Mode	MODE 1			OFF						
Adjustment	MODE 2			ON						

# MOON PATROL

Versuche mittels Joystick der Sprung und Feuertaste den Parkur zu durchqueren.

Vorsicht Du wirst von feindlichen Raumschiffen angegriffen die Dich daran hindern den Parkur zu durchqueren.

Schaffst Du die Strecke von einem Buchstaben z.B. von A-E in der vorgegebenen Zeit erhältst Du einen Bonus.

VIEL SPAS !!!!!

Taste 1- Sprung

Taste 2- Feuer