


OPERATOR'S MANUAL

NEMESIS

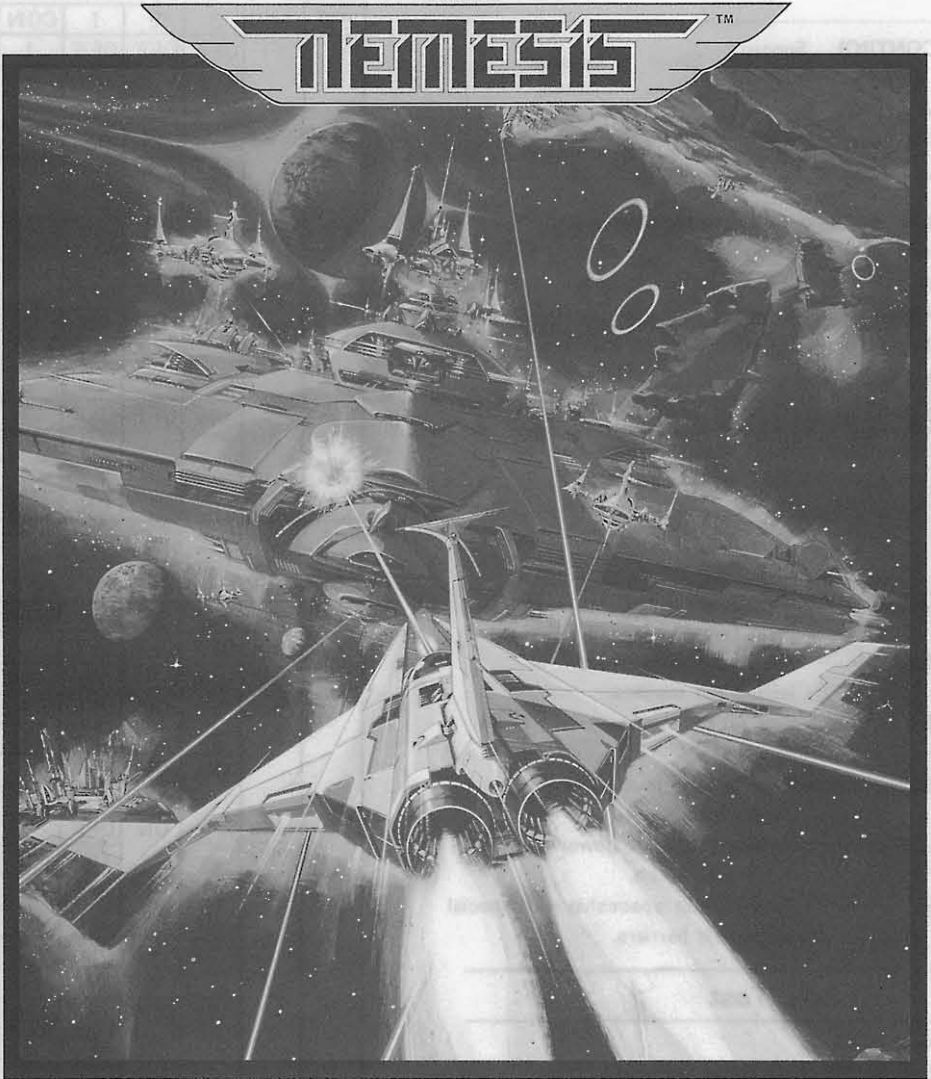


Konami®

WARNING

"NEMESIS" is an original game developed by Konami Industry Co., Ltd. Konami Industry Co., Ltd. reserves all the copyrights, trademarks and other industrial property rights with respect to this game.

HOW TO PLAY

Move your spaceship by 8-way joystick.
Destroy enemies by "Shoot" button.

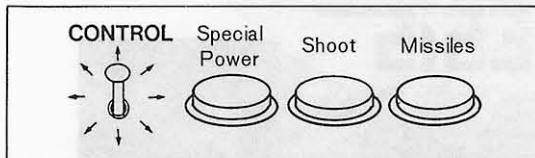

1. Capture special capsules to increase your powers.
2. Press the Special Power Button to obtain features illuminated on power meter.
Feature changes for each capsule you take.

(POWER METER)

SPEED UP	MISSILE	DOUBLE	LASER	MULTIPLE	?
----------	---------	--------	-------	----------	---

3. You can obtain multiple special powers but you can not have DOUBLE as well as LASER.

- ★ SPEED UP.....Five Speed levels. Travel faster each time.
- ★ MISSILEPress the missile button to launch the missiles.
- ★ DOUBLEFire rockets upwards as well as forwards.
- ★ LASER.....Your forward rockets turn to deadly lasers.
- ★ MULTIPLE.....Increase your fire power by upto 4 times as much.
- ★ ?Protect your spaceship with special force field barriers.

Self Test

- How to start
 - 1 Turn on the SW3 of the DIP SW3.
- Test Items
 - 1 Conditioning of Picture Contortion
 - 2 Color Conditioning
 - 3 Control Check
 - 4 Coin Counter Check
 - 5 DIP SW SET
 - 6 Sound Check

※ To change items, push 1P start button.

DIP SWITCH SETTINGS

DIP SWITCH NO.1 SETTINGS

COIN 1

SW	4	3	2	1	COIN	PLAY	
○	OFF	OFF	OFF	OFF	1	1	
				ON	1	2	
				OFF	1	3	
			ON	1	4		
			ON	OFF	OFF	1	5
					ON	1	6
	OFF	1			7		
	ON	OFF	OFF	ON	2	3	
				ON	2	5	
				OFF	3	1	
			ON	ON	3	2	
				OFF	3	4	
ON				4	1		
ON	OFF	OFF	4	3			
		ON	FREE PLAY				

COIN 2

SW	8	7	6	5	COIN	PLAY	
○	OFF	OFF	OFF	OFF	1	1	
				ON	1	2	
				OFF	1	3	
			ON	OFF	ON	1	4
					OFF	1	5
					ON	1	6
	ON	OFF	OFF	OFF	1	7	
				ON	2	1	
				OFF	2	3	
			ON	ON	2	5	
				OFF	3	1	
				ON	3	2	
ON	OFF	OFF	3	4			
		ON	4	1			
		OFF	4	3			
ON	INVALIDITY						

DIP SW 1

ON								
OFF	●	●	●	●	●	●	●	●
	1	2	3	4	5	6	7	8

DIP SWITCH NO.2 SETTINGS

1. THE NUMBER OF PLAYER'S LIFE

SW	2	1	NUMBER
○	OFF	OFF	2
		ON	3
	ON	OFF	5
		ON	7

2. CHANGE OF TABLE OR UPRIGHT

SW	3	TYPE
○	OFF	TABLE
	ON	UPRIGHT

3. BONUS SET

SW	5	4	FIRST	SECOND AND ON
○	OFF	OFF	20000	EVERY 70000
		ON	30000	EVERY 80000
	ON	OFF	20000	
		ON	30000	

4. DIFFICULTY OF THE GAME

SW	7	6	DIFFICULTY
○	OFF	OFF	EASY
		ON	NORMAL
	ON	OFF	DIFFICULT
		ON	VERY DIFFICULT

5. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
○	OFF	OFF
	ON	ON

DIP SW2

ON	1	2	3	4	5	6	7	8
●		●	●		●		●	
	●			●		●		

*◎Turn sw 3 on for upright use.

DIP SWITCH NO.3 SETTINGS

1. VIDEO SCREEN FLIP

SW	1	FLIP
○	OFF	NORMAL
	ON	UPSIDE DOWN

2. SINGLE/DUAL CONTROL UPRIGHT

SW	2	TYPE
○	OFF	SINGLE UPRIGHT CONTROL
	ON	DUAL UPRIGHT CONTROL

3. CHANGE OF MODE

SW	3	MODE
○	OFF	GAME MODE
	ON	CHECK MODE

SW4: NOT USED

SW5: NOT USED

SW6: NOT USED

SW7: NOT USED

SW8: NOT USED

DIP SW3

ON	1	2	3	4	5	6	7	8
OFF	●	●	●	●	●	●	●	●

*◎SHOWS RECOMMENDED SETTING

The level of difficulty of this game was set as it is by KONAMI, on the ground of meeting the average player's skill.

Therefore the level should remain as it is and if there should be a necessity to alter it, it should be done with enough consideration.

WIRING DIAGRAM

